

Beldray

Est 1872

Nobody Does It Better

Large Electric Stove with Flame Effect

Instruction Manual



THE **SCIENCE**
BEHIND HEAT

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Large 2000W stove fire

Instruction manual

Features

Variable flame brightness control

Adjustable thermostat

Fan heater with two heat settings

Thermal safety cut-out

1000/2000W heat setting switches

Free standing

Safety Instructions

Do not use the appliance until it is fully assembled as described in this manual.

When using this electrical appliance, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury.

Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Keep out of reach of children and do not allow them to operate this appliance.

Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

If the power supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Do not run the power cord under carpets, rugs, etc.

Do not allow the mains power cable to hang over sharp edges or come into contact with hot surfaces.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not block the lower air intake of the appliance; place in an open, well ventilated space.

Do not use in a bathroom, bath tub or a swimming pool.

Do not use the appliance outdoors.

Do not use if you have wet hands.

Do not operate this appliance after a malfunction or after being dropped or damaged in any way.

Do not use this appliance with a programmer, timer, separate remote control system or any other device that switches it on automatically, as a fire risk exists if it is covered or positioned incorrectly.

The appliance must be positioned on a stable, level, heat-resistant surface.

The appliance must not be positioned directly under a mains power socket.

Never use accessories that are not recommended or supplied by the manufacturer. The only user replacement items are the bulbs. All other servicing should be referred to a qualified engineer.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

This appliance is intended for household use only and should not be used for industrial purposes.

Never immerse the appliance in water or any other liquid.

Never use the appliance on or near hot surfaces.

Warning: In order to avoid overheating, do not cover the appliance.

Description of the Controls

The switches to control the fire are located behind the doors of the stove on the right hand side.



1. Flame effect
2. Heat setting
3. Heat setting
4. Thermostatic control
5. Flame brightness

5 4 3 2 1

Instructions for Use

Operating the Fire

Plug the fire into the mains power supply and switch on if applicable.

Do not use any form of adaptor, extension lead or timer.

Press switch 1 to operate the flame effect and to turn the fan on without the heating function.

For a low level heating, press switch 2 for the 1000W setting.

For full heating turn on switches 2 and 3 for the 2000W setting.

Adjust the thermostat to finely regulate the temperature; turn it clockwise to increase the heat output and anticlockwise to reduce it.

To vary the brightness of the flame effect, rotate the flame brightness dial clockwise to increase the brightness and anticlockwise to lower the brightness level.

Thermostat Instructions

The sensitive hot air control (thermostat) will constantly maintain a pre-programmed temperature due to its automatic operation.

Turn the temperature adjustment dial switch to the right, towards the maximum level.

Leave the switch in this position until the room reaches the desired temperature.

Bulb Replacement

This appliance is supplied with two 40 watt bulbs (E-12). When they require replacing, loosen the two screws on the panel at the back of the fire.

Remove the panel and unscrew the bulbs.

Caution: There may be sharp edges; exercise extreme caution to avoid injury.

Always replace the bulbs with identical ones of the same wattage.

To reassemble, proceed in the reverse order.

Cleaning and Maintenance

Before attempting any cleaning or maintenance, unplug the fire from the mains power supply and allow it to cool fully.

Clean the fire with a soft, damp, lint-free cloth and dry thoroughly.

Do not immerse the fire in water or any other liquid.

Do not use harsh or abrasive detergents or scourers.

Technical Specification

Supply: 220-240V~50Hz

Power: 2000W

UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



