

# Beldray

Est. 1872

Nobody Does It Better

## Handheld Steam Cleaner

### Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all instructions carefully before use and retain for future reference.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Steam cleaner

Mini mop head

Mini mop head cloth

Window/mirror cleaner

3 plastic, round brushes

Angled nozzle

General nozzle

Flexible hose

Measuring jug

Funnel

Safety cap

Instruction Manual

## Features

1000 W steam power

220 ml water tank

5 m power cord

Chemical free cleaning

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. Only a qualified electrician should attempt repairs. Improper repairs may place the user at risk of harm.

If the supply cord or plug is damaged or broken in any way, do not use the appliance until it has been inspected and repaired by a qualified electrician.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

Keep the appliance out of reach of children when it is in use or when it is cooling down.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not pull or carry the appliance by its supply cord.

Never pull the power cord to disconnect the appliance from the mains power socket.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not handle the appliance with wet hands.

Do not touch any parts of the appliance that may become hot during use.

Do not use the appliance after a malfunction or if it has been dropped, damaged or if there are visible signs of damage or if it is leaking.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use the appliance for anything other than its intended use.

Do not use outdoors.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action.

It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Always unplug the appliance after use and before any cleaning or maintenance.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

This appliance is intended for household use only. It should not be used for commercial purposes.

**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

**Warning:** Danger of scalding. Please use care when using the appliance.

### Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance. Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



**Caution:** Hot surface

## Description of Parts



- |                             |                          |
|-----------------------------|--------------------------|
| 1. Steam cleaner            | 7. Mini mop head cloth   |
| 2. Safety cap               | 8. Angled nozzle         |
| 3. Steam button             | 9. Window/mirror cleaner |
| 4. General nozzle           | 10. Measuring jug        |
| 5. 3 plastic, round brushes | 11. Funnel               |
| 6. Mini mop head            | 12. Heat indicator light |

## Instructions for Use

### Before First Use

Before using the steam cleaner for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the steam cleaner with a soft, damp cloth and dry thoroughly.

 
## Assembling the Steam Cleaner

Accessories can be installed directly onto the steam cleaner or can be installed onto the end of the general nozzle or flexible hose, where more reach is required.

### Installing the General Nozzle

Hold the steam cleaner steady, then align the guide keys on the general nozzle with the key slots on the steam cleaner. If using the general nozzle on the end of the flexible hose, align the guide keys with the key slots on the end of the flexible hose. Push firmly into place, then twist it 90° in a clockwise direction to lock it into position.


To remove the general nozzle, twist it 90° in an anticlockwise direction and pull apart firmly.

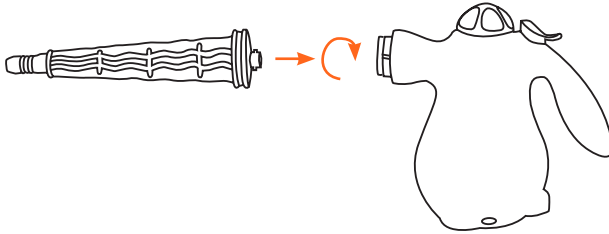

### Installing the Flexible Hose


Hold the steam cleaner steady, then align the guide keys on the flexible hose with the key slots on the steam cleaner. Push firmly into place, then twist it 90° in a clockwise direction to lock it into position.

 To remove the flexible hose, twist it 90° in an anticlockwise direction and pull apart firmly.

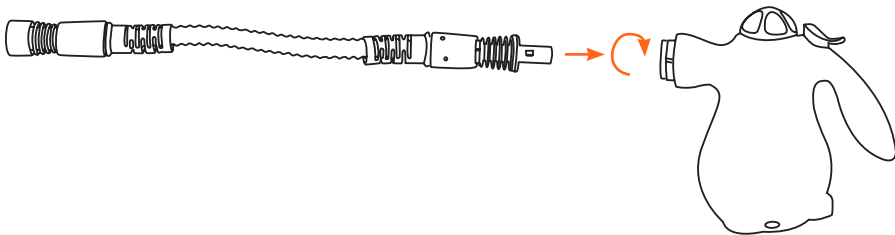

## Installing the Round Brushes or Angled Nozzle

 
Install the general nozzle (as instructed in the 'Installing the General Nozzle' section), align the arrow on the desired accessory with the guide keys on the general nozzle and then push the accessory firmly into place.



## Installing the Mini Mop Head

Hold the steam cleaner steady, then align the guide keys on the mini mop head with the key slots on the steam cleaner. If using the accessory on the end of the flexible hose, align the guide keys with the key slots on the end of the flexible hose. Push firmly into place, then twist it 90° in a clockwise direction to lock it into position.

 To remove the mini mop head, twist it 90° in an anticlockwise direction and pull apart firmly.

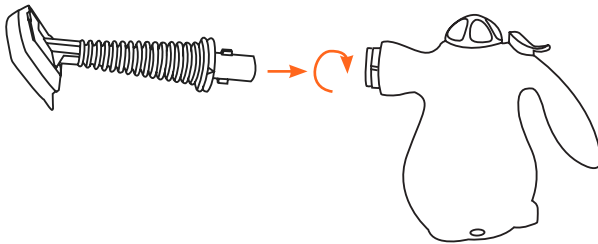


## Installing the Mini Mop Head Cloth

Place the mini mop head cloth over the mini mop head, allowing the elasticated edges to hold it in position. To remove it, simply pull it off.

## Installing the Window/Mirror Cleaner

Install the mini mop head according to the instructions given in the 'Installing the Mini Mop Head' section.

 Hook the two, small hooks on the window/mirror cleaner to the suspension slots on the mini mop, then push to clip the window/mirror cleaner into position. To remove it, push the tab holding the window/mirror cleaner in place forward and pull; this will release it from the held position. Unhook the hooks from the suspension slots to separate the two pieces.

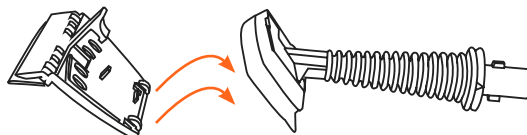

## Filling the Water Tank

Place the steam cleaner on a flat, stable surface. Unscrew the safety cap by pushing down and simultaneously twisting it in an anticlockwise direction.

Fill the measuring jug with water to the 220 ml level indicated, place the funnel inside of the opening in the steam cleaner and then pour the contents of the measuring jug into the funnel. Replace the safety cap and screw it in a clockwise direction to secure it.

**Note:** Be careful not to overfill the water tank.

**Caution:** Do not add any detergent or additives to the water, as these will damage the steam cleaner.

**Caution:** Please ensure that the product is completely cool before filling it with water.

## Refilling the Water Tank During Operation

Unplug the steam cleaner from the mains power supply.

Press and hold the steam button and allow to run until all of the steam has been used up; this will reduce the pressure inside the steam cleaner.

Carefully and slowly unscrew the safety cap in an anticlockwise direction to loosen it, but do not remove it.

Any steam left inside of the steam cleaner will slowly release. Allow the steam cleaner to cool for approximately 5 minutes and then remove the safety cap completely.

Use the measuring jug and funnel to refill the water tank. Be careful not to overfill it.

Replace the safety cap and screw it in a clockwise direction to secure it.

## Operating the Steam Cleaner

Plug the steam cleaner into the mains power supply and switch it on. The steam cleaner will automatically power on.

The steam cleaner will take approximately 4 minutes to heat up; after this time, it will be ready to use. To operate the steam function, press the steam button.

## Using the Steam Cleaner to Clean Clothes

Install the mini mop head (as instructed in the 'Installing the Mini Mop Head' section) and fit the mini mop head cloth (as instructed in the 'Installing the Mini Mop Head Cloth' section).

Hang the clothes to be steamed, press the steam button and then move the steam cleaner over the clothes.

**Note:** Always follow the care instructions on the garments to be steam cleaned.

## Using the Steam Cleaner to Clean Doors, Windows and Glass

Install the window/mirror cleaner (as instructed in the 'Installing the Window/Mirror Cleaner' section).

Press the steam button and move the window/mirror cleaner blade over the area to be cleaned.

**Caution:** Never use the steam cleaner on frosted or cold glass as this may damage or crack the glass.



## Using the Steam Cleaner to Clean Sealed Flooring

Install the flexible hose (as instructed in the 'Installing the Flexible Hose' section) and then the angled nozzle (as instructed in the 'Installing the Round Brushes or Angled Nozzle' section). Press the steam button and move the steam cleaner over the affected areas of the sealed flooring to remove dirt and stains.

## Cleaning and Maintenance

Before attempting any cleaning or maintenance, unplug the steam cleaner from the mains power supply and allow to cool sufficiently.

Press and hold the steam button and allow the steam cleaner to run until all of the steam has been used up; this will reduce the pressure inside the steam cleaner.

Carefully and slowly unscrew the safety cap in an anticlockwise direction to loosen it, but do not remove it.

Any steam left inside of the steam cleaner will slowly release. Allow the steam cleaner to cool for approximately 5 minutes and then remove the safety cap completely.

Empty any residual water from the steam cleaner tank.

Wipe the steam cleaner with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Never immerse the electrical components of the steam cleaner in water or any other liquid.

The steam cleaner water tank and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mop head cloth is machine washable on a 'warm' setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the mop head cloth.

**Warning:** Do not turn on the steam cleaner during cleaning.

## Accessories

Accessory	Suggested Use
Window/mirror cleaner	Cleaning shower screens, mirrors and glass.
Plastic round brushes	Cleaning ovens, hobs, showers, bath tubs, tiles, toys, refrigerators etc.
Angled nozzle	Cleaning stove tops, taps, sinks and other hard to reach areas. Cleaning grout lines, both sanded and non-sanded.
Mini mop head	Steaming garments, curtains, tablecloths and other fabrics.

Troubleshooting

Symptom	Possible Cause	Solution
Steam pressure is low.	The water tank is too full.	Do not attempt to open the safety cap, as steam will escape and could cause injury. Continue to use the steam cleaner and the pressure will increase.
Steam pressure is reducing.	The water tank is nearly empty.	Refill the water tank according to the 'Refilling the Water Tank During Operation' section.
Water is being emitted but no steam.	The water tank is too full.	Switch off the steam cleaner and allow to cool. Release the pressure, empty and then refill the water tank with 220ml of water.

Storage

Before storing the steam cleaner, ensure that it has cooled and dried fully.  
Ensure that the water tank is empty.  
Remove the mop head cloth, making sure that it has been cleaned according to the instructions in the 'Cleaning and Maintenance' section.  
Store in a cool, dry place.

Specifications

Product code: BEL0019  
Voltage: 220-240 V ~ 50 Hz  
Output: 1000 W  
Water tank capacity: 220 ml  
Waterproof level: IPX4



## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 
If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

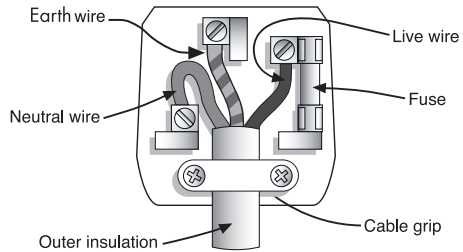

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



