

Beldray[®]

Est 1872

Nobody Does It Better

5 in 1 Multifunctional Steam Cleaner Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully before use and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. Only a qualified electrician should attempt repairs. Improper repairs may place the user at risk of harm.

If the supply cord or plug is damaged or broken in any way, do not use the appliance until it has been inspected and repaired by a qualified electrician.

The mop head pad must be installed correctly before use.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

Keep the appliance out of reach of children when it is in use or when it is cooling down.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not pull or carry the appliance by its supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not handle the appliance with wet hands.

Do not touch any parts of the appliance that may become hot during use.

Do not use the appliance after a malfunction or if it has been dropped, damaged or if there are visible signs of damage or if it is leaking.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not leave the appliance unattended. Keep children away from unit whilst in use.

Do not use the appliance for anything other than its intended use.

Do not use outdoors.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance if the mop head pad is not installed correctly.

Do not use on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action.

It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not direct the steam towards equipment containing electrical components, such as the interior of ovens.

Do not use if the appliance has been dropped, or if there are visible signs of damage or leaking.

Never force the steam unit onto the mop head as this could potentially damage the appliance.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Never leave the mop stationary on a floor area for longer than 15 seconds.

Never pull the power cord to disconnect the appliance from the mains power socket.

Always unplug the appliance after use and before any cleaning or maintenance.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

This appliance is intended for household use only. It should not be used for commercial purposes.

Note: Surfaces treated with wax and some non-wax floors may lose their sheen due to the heat and steam action. It is recommended to test an isolated surface area before proceeding.

 **Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear. Always unplug the appliance after use and before any cleaning or maintenance.

 **Warning:** Danger of scalding. Please use care when using the appliance. Ensure that the appliance has cooled fully after use, before cleaning or storing away.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Steam cleaner main body (handheld unit)

Handle with cord clip

Extension tube

Small round brush

Large round brush

Accessory adaptor

Angled nozzle

Brush tool

Scraping tool

Garment and upholstery steamer

Garment and upholstery steamer cloth

Window/mirror cleaner

Carpet glider

2 mop head pads

400 ml anti-calcium filter jug

Precision shaped mop head

Instruction manual

Features

1500 W steam power

350 ml removable water tank

Ready to use in 25 seconds

20 minutes of continuous steam

 
Multifunctional - handheld and upright

Chemical free cleaning

Description of Parts



- | | |
|--|--------------------------------|
| 1. Steam cleaner main body (handheld unit) | 7. Carpet glider |
| 2. Handle with cord clip | 8. 350 ml removable water tank |
| 3. Extension tube | 9. Adjustable steam control |
| 4. Lower cord storage clip | 10. Front steam button |
| 5. Upper cord storage clip | 11. Handheld steam trigger |
| 6. Precision mop head | 12. Steam nozzle |

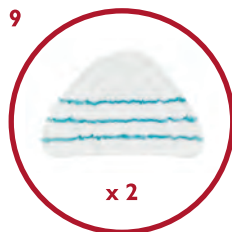

1. Window/mirror cleaner
2. Small round brush
3. Large round brush
4. Accessory adaptor
5. Angled nozzle
6. Brush tool

7. Scraping tool
8. Garment and upholstery steamer with cleaner cloth
9. 2 mop head pads
10. 400 ml anti-calcium filter jug

Before First Use

Before using the 5 in 1 Multifunctional Steam Cleaner for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the steam cleaner with a soft, damp cloth and dry thoroughly.

Assembling the 5 in 1 Multifunctional Steam Cleaner

Attaching the Handle

STEP 1: Insert the handle into the extension tube until it locks into position (figure 1).

STEP 2: Insert the assembled handle section into the steam cleaner main body until it clicks into place (figure 2).

Note: The handle can be removed from the steam cleaner body for easy storage by pressing the handle tube button.

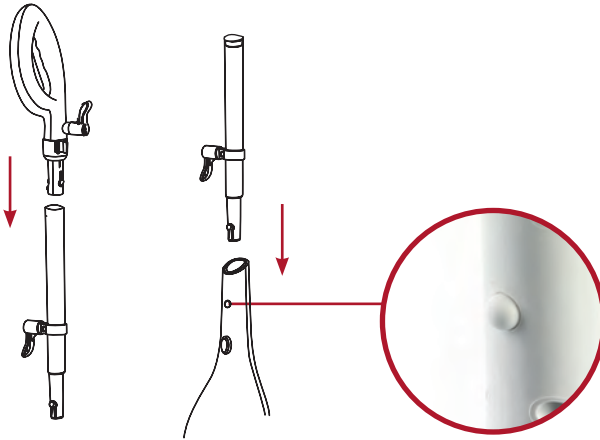 


Figure 1

Figure 2

Attaching the Precision Shaped Mop Head

Slide the bottom end of the steam cleaner main body onto the precision shaped mop head until the precision mop head spindle clicks into place (figure 3).

Always attach the precision mop head using both hands, ensuring that it is locked properly into position.

The precision mop head can be removed from the steam cleaner main body by pressing the release button on the precision mop head spindle.

Warning: Never force the steam cleaner main body onto the precision mop head, as this could damage the steam cleaner.

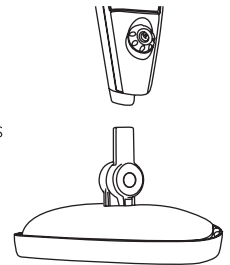 


Figure 3

Attaching the Mop Head Pad

Place the mop head pad in-between the precision mop head and the carpet glider and press down firmly (figure 4). The design of the precision mop head will hold the mop head pad securely in place.

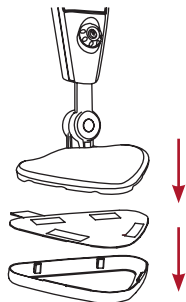 


Figure 4

Instructions for Use

Filling the Water Tank

Unplug the steam cleaner from the mains power supply.

Fit the filter inside the anti-calcium filter jug and then fill the jug with water.

Warning: Never place descaling, aromatic, alcoholic or detergent products into the steam cleaner tank, as this will cause damage to the steam cleaner and void your warranty.

The water tank can be filled using two different methods:

Method 1

Open the water tank cap by unscrewing it in an anticlockwise direction.

Using the anti-calcium filter jug, fill the tank with 350 ml of water.

Note: The water may take a few minutes to rise to the Max., 350 ml capacity. Be careful not to fill the water tank past this level.

Method 2

Remove the water tank from the steam cleaner body, open the water tank cap by unscrewing it in an anticlockwise direction and then fill the tank using the anti-calcium filter jug provided. Replace the water tank cap and then replace the water tank back onto the steam cleaner main body.

Filling the Water Tank During Use

As a Steam Cleaner: Press the front steam button to deactivate steam production, unscrew the water tank cap by twisting it in an anticlockwise direction and pour in the water. Replace the water tank cap and then press the front steam button again to reactivate steam production.

As a Handheld Unit: Ensure that the rear steam button is not pressed; unscrew the water tank cap by twisting it in an anticlockwise direction and pour in the water. Replace the water tank cap and then press the rear steam button again to reactivate steam production.

Using the 5 in 1 Multifunctional Steam Cleaner

Plug the steam cleaner into the mains power supply.

The indicator lights will illuminate red at each side of the water tank to indicate that the steam cleaner is heating up. If the lights do not illuminate, please check the 'Troubleshooting' section for more information.

The steam cleaner will take approximately 25 seconds to heat up.

Once it has reached the correct temperature, the water tank will change to blue; the steam cleaner is now ready to use.

Press the front steam button to activate steam production. Steam will run continuously until the front steam button is pressed again or until the water tank runs out of water.

A full water tank will supply approximately 20 minutes of steam. If the water tank is empty, the indicator lights will glow red and flash.

Control the steam output using the adjustable steam control on the front of the steam cleaner main body; turn the control clockwise to increase steam production or anticlockwise to reduce it.

Note: The rear steam button is deactivated while the handle is inserted into the main body. Do not attempt to use the steam cleaner as a handheld unit whilst the handle is inserted.

Using the 5 in 1 Multifunctional Steam Cleaner as a Handheld Steamer

Press the handle release button to remove the handle from the steam cleaner main body.

Install the accessory adaptor at the top of the steam cleaner main body until it clicks into position.

Select the required accessory and attach it by aligning the arrow indicators and turning clockwise.

Allow the water to heat up (as described in the section entitled 'Using the 5 in 1 Multifunctional Steam Cleaner') and then press the front steam button. To activate steam production, press and hold the rear steam button.

Steam will stop being produced when the rear steam button is released.

Note: The rear steam button will only be active when the handle has been removed for use as a handheld steam cleaner.

Accessories

Accessory	Suggested Use	Further Usage Information
Accessory Adaptor	For precision cleaning of places or crevices that are not readily accessible.	The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner. It can also be used to clean places or crevices that are not readily accessible.
Window/Mirror Cleaner	Ideal for a streak-free shine, cleaning shower screens, mirrors and glass.	Always ensure that the glass is not cold or frozen, as the hot steam may damage the surface.
Large and Small Round Brushes	Perfect for cleaning ovens, hobs, showers, BBQ's, taps and sanitaryware.	The small round brush is best for removing stains on room-temperature surfaces. The large round brush is best for removing dirt from grooves and crevices.
Angled Nozzle	Good for those hard to reach places, such as stove tops, taps and sinks.	Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at non-permanent stains, whilst holding a clean cloth near to the stained area to capture any loosened dirt.
Brush Tool	Ideal for cleaning grout in kitchens and bathrooms.	
Scraping Tool	Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard to remove substances from surfaces such as hobs and ovens or for helping to de-ice the freezer.	
Garment and Upholstery Steamer	Steaming garments, curtains, tablecloths, carpets etc.	Good for use on fabrics, curtains and clothing, leaving them refreshed and crease-free.
Mop Head Pad	For the general cleaning of hard floors.	
Carpet Glider	For ease of use on carpets.	

Cleaning and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank and clean it after every use.

Wipe the steam mop cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the precision mop head in warm, soapy water; rinse and dry thoroughly.

Never immerse the electrical components of the steam cleaner in water or any other liquid.

The steam cleaner water tank and accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mop head pad is machine washable on a 'warm' setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the mop head pad.

Warning: Do not turn on the steam cleaner during cleaning.

Removing Limescale

If the steam cleaner begins to produce steam more slowly than usual or stops producing steam altogether, you may need to remove limescale.

Limescale can develop over time on the metal parts of the steam cleaner and can greatly affect its performance. It is recommended to remove limescale on a regular basis, after every 25–50 times you use a full tank of water or at least once a month, especially in areas with hard water.

The frequency of limescale removal depends upon the hardness of your tap water and usage. If you live in an especially hard water area, you may need to use demineralised water.

Calcium deposits may be emitted with the steam. Please descale in a sink, bucket or towel to protect carpets etc.

STEP 1: To remove the limescale, prepare a solution of white vinegar and tap water and add it to the water tank.

STEP 2: Secure and position the steam cleaner to ensure that the steam released is aimed away from the floor or surrounding objects and surfaces.

STEP 3: Plug the steam cleaner into the mains power supply and turn it on; allow it to produce steam until all of the solution is used.

STEP 4: Repeat the above procedure as often as necessary and then fill the tank with fresh water and rinse.

Warning: Do not leave the steam cleaner unattended during the limescale removal process or during use.

Note: Perform a test on a suitable isolated surface after limescale removal to ensure that there is no debris left in the steam cleaner.

Note: Due to the nature of UK water supplies, some areas of the country experience larger amounts of limescale build-up. If you live in one of these areas you may need to decalcify the unit more often.

Removing Calcium Deposits

From the water tank: Add one or two tablespoons of white vinegar to a full water tank and close it. Shake the contents, then rinse thoroughly.

From the accessories: Due to the high mineral water content in certain areas, you may notice less steam from the accessories. This may be caused by calcium build-up inside the accessories.

It is recommended to use the vinegar solution indicated in the 'Using a Cleaning Solution Section' inside the affected accessory. Once the accessory has been rinsed with the vinegar solution, fill the water tank with water and run a continuous jet of steam through the affected accessory for several minutes to clear the pathway.

Note: Aim the accessory at a neutral surface or cleaning cloth to ensure that no debris is emitted.

Troubleshooting

Problem	Possible Reason	Possible Solution
Reduced or no steam.	The water tank may be empty The steam nozzle may be blocked. There is no power to the steam cleaner. There may be a limescale build-up. There may be a calcium build-up inside the accessories. The steam button was not pressed. The variable steam control is set to Min.	Add water to refill the water tank. Clean the steam nozzle. Make sure that the steam cleaner is plugged into the mains power supply. Descale the steam cleaner using the instructions in the 'Removing Limescale' section. Remove the calcium build-up according to the instructions in the 'Removing Calcium Deposits' section. Press the steam button. Turn the variable steam control to Max.
The steam cleaner does not turn on.	There is a blown fuse or breaker. The power cord is not plugged in. The internal fuse is blown.	Check the fuse by replacement or reset the breaker. Plug the power cord into a working mains power supply. Contact customer service for further advice.
The handle is stuck in the steam cleaner main body.	The handle clip may be stiff due to limited or no use.	Press the handle release button and push the handle down simultaneously.

Storage

Before storing the steam cleaner, ensure that it has cooled and dried fully.

Check that the water tank is empty.

Remove the mop head pad, making sure that it has been cleaned according to the instructions in the 'Cleaning and Maintenance' section.

Store in a cool, dry place.

Specification

Product code: BEL0182

Voltage: 220–240 V

Rated frequency: 50 Hz

Output: 1500 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{1}{=}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{1}{=}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{1}{=}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 
If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

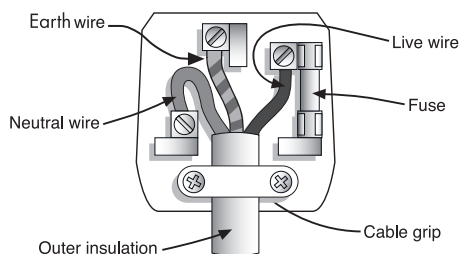

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am – 5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD. UK.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD270814/MD031014/V2