

# Beldray

Est. 1872

Nobody Does It Better

## 1000W Steam Cleaner

### Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN

## Instructions for Use

Please read all instructions carefully.

## Getting Started

Remove the steam cleaner from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Steam Cleaner

Safety Cap

Measuring Jug and Funnel

Round Brushes

Angled Nozzle

Mini Mop

General Nozzle

Extender Tube

Window Cleaning Attachment

Mini Mop Head

Instruction Manual

## Features

Tools for a wide range of applications.

Handheld operation.

Flexible tube to reach all locations.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Steam must not be directed towards equipment containing electronic components such as the interior of ovens.

The filling aperture must not be opened during use as high pressure steam will escape which may burn.

The water tank must contain water before use. Do not overfill as the steam pressure will be affected.

Do not add detergent, alcohol or any other additive to the water as this may damage the appliance.

Ensure there is sufficient ventilation around the appliance to allow the escape of heat and steam.

Do not immerse the appliance in water or any other liquids.

This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.

Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.

Do not leave the appliance unattended whilst connected to the mains power supply.

The appliance must be unplugged from the power supply after use and whilst any maintenance such as cleaning is carried out.

This appliance must be used on a stable, heat resistant surface.

Do not use the appliance for any purpose other than that for which it is designed.

Ensure the supply cord is kept away from heat or sharp edges which could cause damage.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Do not use with a damaged plug or cord.

Do not use the appliance if it has been dropped or damaged in any way.

Only the accessories recommended or sold by the manufacturer should be used with this steam cleaner.

Do not use the appliance in close proximity to flammable materials.

Do not handle the power cord with wet hands.

Do not spray steam directly at people or animals.

Always unplug the appliance from the mains power supply before filling with water.

Keep out of reach of children.

Description of Parts



**9**  
**Window cleaning attachment**  
keep your windows clean with this handy attachment

**12**  
**Measuring jug and funnel**  
makes refilling easy

**11**  
**Extension tube**  
for extra reach

**6**  
**3 x round brush** for cleaning that needs extra scrubbing

**10**  
**Mini mop head** for cleaning flat surfaces

**8**  
**Angled nozzle** for those hard to reach places

**5**  
**Mini mop** for use with the mop head or window cleaner



- 1. Steam Cleaner
- 2. Safety Cap
- 3. Steam Button
- 4. Funnel
- 5. Mini Cleaner
- 6. 3 x Round Brushes
- 7. General Nozzle
- 8. Angled Nozzle
- 9. Window Cleaning Attachment
- 10. Mini Cleaner Head
- 11. Extender Tube
- 12. Measuring Jug with Funnel
- 13. Indicator Light

## Functions

### Disinfection and Sterilisation

High temperature steam can kill bacteria. Connect the general nozzle on the steam cleaner outlet; aim at the area needing disinfection and press down the steam button.

### Cleaning Clothes

Connect the mini mop onto the steam cleaner and fit the mini mop head over the end plate. Aim the steam cleaner at hung clothes and press the steam button whilst moving up and down and left to right. Always follow the clothing care label when cleaning.

### Cleaning Doors and Windows

Position the mini mop on the steam cleaner and add the window cleaning attachment. Aim the steam cleaner at the door or windows and press the steam button whilst moving the blade up and down and left to right.

**Caution:** never use the steam cleaner on frosted or cold glass.

### Cleaning Floorboards

Install the extension tube on the steam cleaner if desired and add the angled nozzle. Aim the steam cleaner at the floorboards and press the steam button to remove dirt and stains in wall corners and on the floor.

## Instructions for Use

Place the steam cleaner on a level surface and unscrew the safety cap by pushing down whilst simultaneously unscrewing anticlockwise.

Place the funnel inside the opening and add 220ml of clean water to the tank using the measuring jug supplied; do not overfill.

Replace the safety cap and tighten into position.

Push down on the safety cap and turn anticlockwise until tight.

Turn the power supply on. The steam will be ready after approximately 4 minutes.

**Caution:** do not add detergent or any other additive to the water as this will damage the cleaner.

## Adding Accessories

### Install the Mini Mop, General Nozzle or Extension Tube

Holding the pipe section, align the arrow on the attachment with the arrow marked on the body of the appliance and place in position.

Rotate the nozzle clockwise 90° until it locks into position.

To remove the nozzle, rotate 90° anticlockwise, align the arrow on the attachment with the arrow marked on the body of the appliance and then pull the nozzle away.

**Warning:** handle the accessories with care as they will become hot during use.

### Install the Round Brushes or Angled Nozzle

Position either the brushes or the angled nozzle at the top of the spray nozzle and push into position. The angle and direction of the brushes and the angled nozzle can be adjusted during installation.

Alternatively, install the long general nozzle and then the round brush or angled nozzle.

### Installation of the Window Cleaning Attachment for Doors or Windows

Install the mini mop then insert the two small hooks of the window cleaning attachment onto the suspension eyes of the mini mop.

Push and clip the big hook of the attachment onto the mini mop.

### Refilling During Operation

Disconnect the appliance from the power supply.

Press and hold the steam button until the steam stops to release the pressure.

Slowly unscrew the safety cap but do not remove it.

The residual steam will slowly discharge. Allow the appliance to cool for approximately 5 minutes and then remove the cap.

Use the measuring cup to refill the required amount of water to the tank. Reposition the safety cap and tighten into place.

## After Use

After using the appliance, switch off and disconnect from the power supply. Press and hold the steam button to release the pressure.

Slowly unscrew the safety cap but do not remove it. The residual steam will discharge slowly. Allow the appliance to cool for approximately 5 minutes and then completely remove the cap. Empty the residual water from the tank and clean the external surface with a dry cloth. Install the safety cap and tighten into position.

## Troubleshooting

Symptom	Possible Cause	Solution
Steam pressure is low.	Tank is overfull.	Do not attempt to open the filler as steam will escape and could cause injury. Continue to use the appliance and the pressure will increase.
Steam pressure reducing.	Tank is nearly empty.	Refill the water tank – refer to instructions.
Water emitted and no steam.	Tank has been overfilled.	Switch off and allow to cool. Release the pressure, empty and then refill with 220ml of water.

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

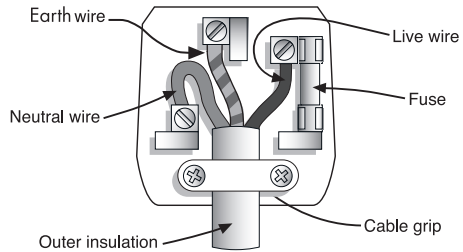



## Ultimate Products Ltd.

Manor Mill, Victoria Street, Chadderton, Oldham, OL9 0DD

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



