

Beldray[®]

Est 1872

Nobody Does It Better

10 in 1 Multifunctional Steam Cleaner Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. Only a qualified electrician should attempt repairs. Improper repairs may place the user at risk of harm.

If the power supply cord or plug is damaged or broken in any way, do not use the appliance until it has been inspected and repaired by a qualified electrician.

Keep the power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord out of reach of children.

Keep the appliance out of reach of children when it is in use or when it is cooling down.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not pull or carry the appliance by its supply cord.

Never pull the power cord to disconnect the appliance from the mains power socket.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not handle the appliance with wet hands.

Do not touch any parts of the appliance that may become hot during use.

Do not use the appliance after a malfunction or if it has been dropped, damaged or if there are visible signs of damage or if it is leaking.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use the appliance for anything other than its intended use.

Do not use outdoors.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action.

Do not use the appliance if the mop head cloth is not installed correctly. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Never force the steam unit onto the mop head as this could potentially damage the steam mop.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Never leave the mop stationary on a floor area for longer than 15 seconds.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear. Always unplug the appliance after use and before any cleaning or maintenance.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

This appliance is intended for household use only. It should not be used for commercial purposes.

Warning: Danger of scalding. Please use care when using the appliance.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In The Box

Steam cleaner main body (detachable handheld unit)

Steam cleaner frame attachment

Handle

Handle extension tube

Precision shaped mop head

Carpet glider

2 microfibre mop head cloths

Extension hose

Straight nozzle

Angled nozzle

Plastic round brush

Wire round brush

Window/mirror cleaner

Window/mirror cleaner cloth

Brush blade

Surface cleaner attachment

Surface cleaner pad

Steam duster attachment

Steam duster cloth

Garment/upholstery steamer attachment

Garment/upholstery steamer cloth

Measuring cup and funnel

Spare rubber seals and screw

Instruction manual

Features

1500 W steam power

450 ml water tank


Ready to use in 15 seconds

15 minutes of continuous steam

Multifunctional - handheld and upright

Chemical-free cleaning

Description of Parts

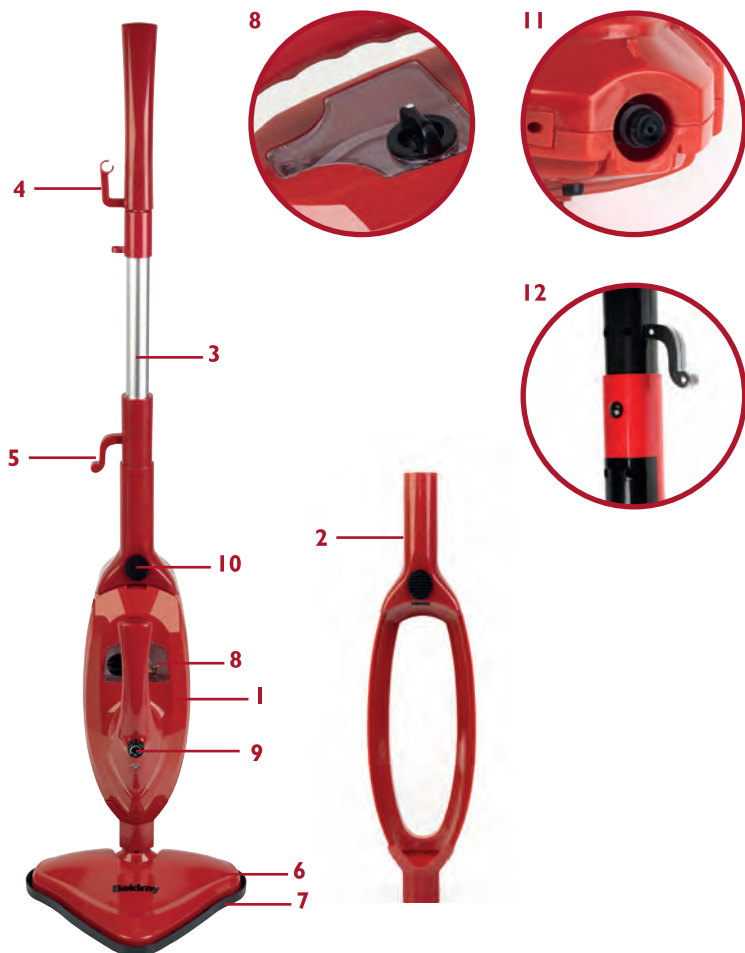

- | | |
|--|--|
| 1. Steam cleaner main body
(detachable handheld unit) | 7. Carpet glider |
| 2. Steam cleaner frame attachment | 8. 450 ml water tank |
| 3. Handle extension tube | 9. Adjustable steam control dial |
| 4. Upper storage clip | 10. Steam cleaner frame attachment
release button |
| 5. Lower storage clip | 11. Steam nozzle |
| 6. Precision shaped mop head | 12. Handle extension tube release button |



1. Window/mirror cleaner
2. Garment/upholstery steamer attachment
3. Steam duster attachment
4. Surface cleaner attachment
5. Brush blade
6. Plastic round brush
7. Wire round brush
8. Straight nozzle
9. Angled nozzle

10. Extension hose
11. Measuring cup and funnel
12. Mop head cloth
13. Window cleaner cloth
14. Garment/upholstery steamer cloth
15. Surface cleaner pad
16. Steam duster cloth
17. Screw and spare seals



Assembly

Attaching the Handle Tube

Slide the handle extension tube into the steam cleaner frame attachment until it clicks and locks into position.

The handle extension tube can be removed from the steam cleaner frame attachment for easy storage by pressing and holding the handle extension tube release button and pulling the handle tube.



Attaching the Main Body to the Frame Attachment

Slide the steam cleaner main body into the steam cleaner frame attachment until it clicks and locks into position.

The steam cleaner main body can be removed from the steam cleaner frame attachment by sliding the steam cleaner frame attachment release button and lifting out the steam cleaner main body.



Attaching the Precision Shaped Mop Head

Slide the lower end of the steam cleaner frame attachment onto the precision shaped mop head. This steam cleaner comes with a screw, which is used to secure the triangular mop head to the steam cleaner frame attachment.



Attaching the Microfibre Mop Cloth

Attach the mop head cloth onto the bottom of the precision shaped mop head by placing it on the base and pulling it around the edges. The elastic hem will hold the mop head cloth in position. To remove, simply pull the mop head cloth from the precision shaped mop head.



Attaching the Carpet Glider

Lay the carpet glider flat on the carpet, then place the precision shaped mop head with the mop head cloth attached (see the section entitled 'Attaching the Microfibre Mop Head Cloth'), into the carpet glider. The precision shaped mop head simply sits in the carpet glider in order to enable the steam cleaner to move easily across the carpet. If the flooring is uneven, the carpet glider may dislodge.



Instructions for use

Filling the Water Tank

Unplug the steam cleaner from the mains power supply and remove the cap on the water tank by unscrewing it in an anticlockwise direction.

Fill the measuring cup up to the 225 ml mark and then, using the funnel, pour the contents of the measuring cup into the water tank inside the steam cleaner main body. Repeat the procedure in order to ensure that the water tank is filled to the maximum 450 ml capacity.

Note: The water may take a couple of seconds to rise to the 450 ml level, so allow time for the water to rise before adding more water in order to ensure that you do not overfill the water tank.



Filling the Tank During Use

Ensure that the steam operation is deactivated by turning the steam dial to the 'Off' position, open the tank and then pour in the water using the measuring cup and funnel.

To reactivate the steam operation, turn the steam dial to any position between the minimum and maximum indicators.

Using the Steam Cleaner

Plug the steam cleaner into the mains power supply and switch on.

The indicator light will illuminate red at the front of the water tank when the adjustable steam control dial is in the 'Off' position. When the adjustable steam control dial is set between the Min. and Max. positions, the indicator light will glow green and the steam cleaner will start to operate. If the light does not illuminate, please check the 'Troubleshooting Guide' for more information. It will take approximately 15 seconds for the steam cleaner to preheat.


A full tank of water will supply approximately 10–15 minutes of steam, depending upon the control setting of the steam dial.

Control the steam using the adjustable steam control dial; turn the dial clockwise to increase the steam and anticlockwise to reduce it.

Using as a Handheld Steamer

Attaching the Extension Hose

If the steam cleaner main body is attached to the steam cleaner frame attachment, remove it by sliding the steam cleaner frame attachment release button and lifting out the steam cleaner main body. Insert the designated end of the extension hose into the steam cleaner main body until it clicks and locks into place, as shown below.

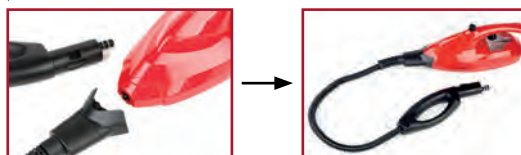

To remove the extension hose, press and hold the release button on the base of the steam cleaner main body and pull it out.



Release button

Attaching the Straight Nozzle

To attach the straight nozzle, simply insert the straight nozzle into the free end of the extension hose, ensuring that it has clicked and locked into position. Remove the straight nozzle by pressing and holding the release button on the extension hose and pulling.




Attaching the Plastic Round Brush/Round Wire Brush

To attach the plastic round brush/wire round brush, push and then screw it onto the straight nozzle that is connected to the extension hose (see the sections entitled 'Attaching the Extension Hose' and 'Attaching the Straight Nozzle'). Remove the brush by twisting it in an anticlockwise direction and pulling.



Attaching the Crevice Nozzle

To attach the crevice nozzle, push and then screw it onto the straight nozzle that is connected to the extension hose (see the sections entitled 'Attaching the Extension Hose' and 'Attaching the Straight Nozzle'). Remove the crevice nozzle by twisting it in an anticlockwise direction and pulling.

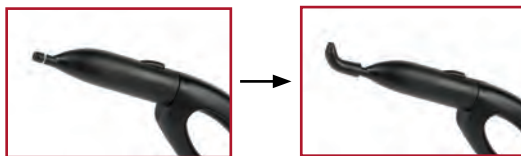

Using as a Duster

Attach the steam duster cloth onto the steam duster attachment by pulling it over the end of the attachment, then secure the steam duster by pulling the drawstrings. Attach the steam duster to the extension hose (to attach the extension hose to the steam cleaner main body, see the section entitled 'Attaching the Extension Hose') until it clicks and locks into position. To remove the steam duster attachment, press and hold the release button on the extension hose and pull.



Using as a Surface Cleaner

Attach the surface cleaner attachment to the steam cleaner main body by sliding the steam cleaner main body at an angle onto the surface cleaner attachment until it clicks and locks into place. Attach the surface cleaner pad to the surface cleaner attachment by aligning the grip on the surface of the cleaner pad with the grip hooks on the bottom of the surface cleaner attachment and pressing into place. To remove the surface cleaner attachment, press and hold the two release buttons on the sides of the surface cleaner attachment and pull it out from the steam cleaner main body.



Using as a Garment/Upholstery Steamer

Attach the garment/upholstery steamer cloth to the appropriate attachment by pulling the elastic hem over it, as illustrated below. Attach the garment/upholstery steamer attachment to the extension hose (to attach the extension hose to the steam cleaner main body, see the section entitled 'Attaching the Extension Hose') by pushing it onto the garment/upholstery steamer attachment until it clicks and locks into place. To remove the attachment, press and hold the release button on the extension hose and pull.



Window Cleaner Attachment

Loosen the drawstrings on the window cleaner cloth and attach the cloth to the window cleaner attachment by hooking the drawstrings onto the designated hooks. Tighten the drawstrings to secure the window cleaner cloth in position.




Attach the window cleaner attachment to the extension hose (to attach the extension hose to the steam cleaner main body, see the section entitled 'Attaching the Extension Hose') by pushing it onto the extension hose until it clicks and locks into position. To remove the window cleaner attachment, press the release button on the extension hose and pull.



Attaching the Brush Blade

Attach the window cleaner attachment without installing the window cleaner cloth (see the section entitled 'Window Cleaner Attachment'). Slide the squeegee blade from the window cleaner attachment to remove it. Install the brush blade by sliding it onto the window cleaner attachment.

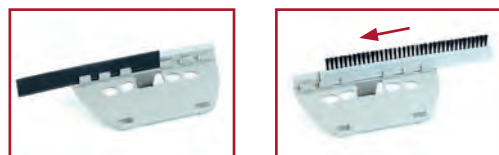

Removing/Cleaning the Mop Head Cleaning Cloth

Ensure that the mains power supply is switched off, then unplug the mains power cord from the mains power supply. Allow the precision shaped mop head and mop head cloth to cool, then carefully remove the cloth from the triangular mop head.

Cleaning and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain the remaining water from the tank and clean after every use.

Clean the steam cleaner attachments in warm, soapy water and dry thoroughly.

Wipe the steam cleaner main body with a soft, dry cloth.

The steam cleaner attachments are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners, detergents or scourers.

The mop head cloth is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the microfibre cloth.

Note: Do not turn on the steam cleaner during cleaning.

Warning: Never immerse any electrical components in water or any other liquid.

Decalcifying the Water Tank Interior

To clean calcium deposits that build up inside the water tank, add one or two tablespoons of white vinegar to a full water tank, close the water tank cap and then shake.

Allow this to sit for approximately one hour, then rinse and empty the water tank repeatedly until the water runs clear; this will avoid staining any surfaces that may come into contact with the steam cleaner.

Note: Do not turn the steamer on.

Removing Limescale

If the steam cleaner begins to produce steam slower than usual or stops producing steam altogether, you may need to remove limescale.

Limescale can develop over time on the metal parts of the steam cleaner and can greatly affect its performance.

It is recommended to remove limescale on a monthly basis or after every 25–50 uses.

To remove limescale from the steam cleaner, please refer to the section entitled 'Using a Cleaning Solution'.

Using a Cleaning Solution

Prepare a solution of $\frac{1}{3}$ white vinegar and $\frac{2}{3}$ tap water and add to the water tank.

Plug the steam cleaner into the mains power supply and turn it on, then allow the steam cleaner to produce steam until all of the solution has been used.

Repeat the above procedure as often as needed to complete the cleaning process, then fill the tank with fresh water and rinse thoroughly.

Fill the tank with fresh water a final time, then release steam through the system until the water tank is empty.

Note: Calcium deposits may be emitted along with the steam. Please descale in a sink, bucket or towel to protect carpets and other surfaces.

Note: Perform a test with the steam cleaner on a small surface area after the limescale removal process has been completed, to ensure that there is no debris left in the unit.

Note: Due to the nature of UK water supplies, some areas of the country experience larger amounts of limescale build-up. Depending upon the area in which you live, you may need to perform the limescale removal process more often.

Warning: Do not leave the steam cleaner unattended during the limescale removal process and/or during use.

Cleaning Blocked Accessories

Due to the high mineral water content in certain areas in the UK, you may notice less steam being emitted from the accessories; this may be caused by calcium build-up inside the nozzle.

Cleaning Calcium Build-up in Blocked Attachments

Use a spray lubricant to coat the inside of the affected attachment, fill the water tank with water according to the instructions provided in this manual and then run a continuous jet of steam through the affected attachment for several minutes to clear the pathway.

Aim the steam cleaner at a neutral surface or cleaning cloth to ensure that no debris is emitted.

Replacing the Rubber Seals on the Extension Hose

If any of the rubber seals on the extension hose are missing or have become damaged, replace them immediately using the spare rubber seals provided.

Note: All of the seals on the steam cleaner main body and on any of the attachments, including the spare seals, should be lubricated with petroleum jelly.

Storage

Before storing the steam cleaner, ensure that it has cooled and dried fully.

Ensure that the water tank is empty.

Remove the microfibre cloth and wash ready for next use.

Store in a clean, dry place.

Troubleshooting Guide

Warning: To reduce the risk of fire, electric shock or injury, unplug the steam cleaner from the mains power supply before troubleshooting.

Problem	Possible Cause	Possible Solution
Reduced steam or no steam.	The water tank may be empty. The steam nozzle may be blocked. There is no power to the steam cleaner. The adjustable steam control dial is not set correctly.	Fill the water tank. Clean the steam nozzle. Ensure that the steam cleaner is plugged in. Turn the adjustable steam control dial clockwise.
Steam cleaner will not turn on.	Blown fuse or breaker. The power supply cord is not plugged in.	Replace the fuse or reset breaker. Plug the power supply cord into a mains power supply.
Steam escapes from connections.	The attachment is not connected properly. Debris or obstruction at the connection points. The seals may be missing or damaged.	Turn the steam cleaner off, allow it to cool down, disconnect the accessories and then reattach them properly. Remove the attachment, check and clean the connection points. Check the seals are present and in good condition. If missing or damaged, replace the seals and lubricate.

Specifications

Rated Voltage: 220–240 V~ 50 Hz

Output Power: 1500 W

Water Tank Capacity: 450 ml

Waterproof Level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{1}{=}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{1}{=}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{1}{=}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

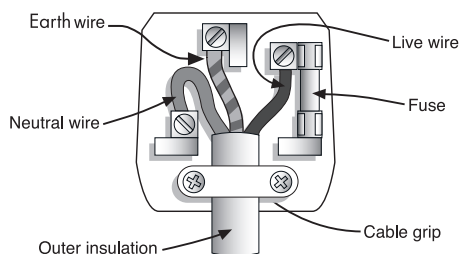

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD.
+44 (0)161 934 2240
customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD260913MD180914/V7