

# Beldray<sup>Est. 1872</sup>

Nobody Does It Better

## Window Cleaning Vacuum

Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN

**Please read all instructions carefully before first use and retain for future reference.**



**This product is not designed to be used to pick up spills.  
Only use this product in the vertical position.  
Do not use in the horizontal position.  
If the product is used in a horizontal position, water  
may leak out of the vents.**



### **Getting Started**

Remove the appliance from the box.  
Remove any packaging from the appliance.  
Place the packaging inside the box and store or dispose of safely.

### **In the Box**

Handheld, Window Cleaning Vacuum  
Window Cleaning Vacuum head  
Microfibre cloth  
Power adaptor  
Instruction Manual

### **Features**

Rechargeable hand vacuum  
100 ml water tank  
30 minute usage time  
Removable head for easy storage

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than those supplied with the appliance, as this may damage it.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Description of Parts



## Instructions for Use

### Before Using the Window Cleaning Vacuum

Before using the Window Cleaning Vacuum for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the Window Cleaning Vacuum in water or any other liquid.

When charging the Window Cleaning Vacuum for the first time, insert the adaptor into the vacuum and the plug into the mains power supply and allow the Window Cleaning Vacuum to charge for 10–12 hours. When the Window Cleaning Vacuum is charging, the charge light will illuminate red; this will turn to green when it is fully charged.

Subsequent charges will take approximately 3–6 hours. Once charging is complete, the Window Cleaning Vacuum will illuminate green.

### Using the Window Cleaning Vacuum

Ensure that the Window Cleaning Vacuum is unplugged from the mains power supply and turned off.

Fill the Window Cleaning Vacuum with water to a maximum of 100 ml by removing the cap at the base of the handle. Once full, replace the cap. Please ensure that the nib on the cap is facing outwards.

To spray water onto the window in order to clean it, press the spray button several times to get the water pumping through.

Attach the microfibre cloth onto the Window Cleaning Vacuum head, then press the On/Off button to start using the Window Cleaning Vacuum.

Begin cleaning the window at the top and work down, in order to avoid drip marks.

For tougher stains and marks, use the edge of the microfibre cloth to scrub the window. Repeat until the window is clean.

**Note:** Always empty the water tank after each use and clean the microfibre cloth.

**Note:** This product is designed to be used only in the vertical position. It is not designed for picking up spills.

## Cleaning and Maintenance

Always unplug the Window Cleaning Vacuum from the mains power supply before attempting any cleaning or maintenance.

Clean the microfibre cloth in warm, soapy water and dry thoroughly.

Use a soft, dry cloth to wipe clean the Window Cleaning Vacuum head.

Clean the main body of the Window Cleaning Vacuum with a soft, damp cloth and dry thoroughly.

Never immerse the Window Cleaning Vacuum main body in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers.

## Storage

Before storing the Window Cleaning Vacuum, ensure that it is clean and that all of the parts are fully dry.

Store in a clean, dry place.

## Battery Safety Removal and Disposal

Exhausted batteries should be removed and disposed of safely.

To remove the batteries when they have become exhausted, remove the screws from the Window Cleaning Vacuum main body and take out the batteries.

The supply terminals are not to be short-circuited.

Do not dispose of batteries in a fire.

Do not dispose of batteries in your household waste.

Do not crush, puncture, dismantle or otherwise damage batteries.

Keep batteries out of reach of children.

If batteries are swallowed, seek medical attention immediately.

Batteries should be disposed of safely, in accordance with local authority guidelines or through a disposal service mandated by your local authority. Contact your waste disposal offices for more information regarding the safe disposal or recycling of batteries and other electrical devices.

## Specification

Non-removable 3.6 V rechargeable battery (included)

5 V DC battery charger (included)

Tank Volume: 100 ml

## UP Global Sourcing

Victoria Street, Manchester, OL9 0DD. UK.

If this product does not reach you in an acceptable condition, please contact our Customer Services Department using one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand, as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



