

Beldray[®]

Est 1872

Nobody Does It Better

Handheld Detergent Steam Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. Only a qualified electrician should attempt repairs. Improper repairs may place the user at risk of harm.

If the supply cord or plug is damaged or broken in any way, do not use the appliance until it has been inspected and repaired by a qualified electrician.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

Keep the appliance out of reach of children when it is in use or when it is cooling down.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not pull or carry the appliance by its supply cord.

Never pull the power cord to disconnect the appliance from the mains power socket.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not handle the appliance with wet hands.

Do not touch any parts of the appliance that may become hot during use.

Do not use the appliance after a malfunction or if it has been dropped, damaged or if there are visible signs of damage or if it is leaking.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use the appliance for anything other than its intended use.

Do not use outdoors.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action.

It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Never add descaling, aromatic, alcoholic or detergent products into the water tank as this may damage the appliance or make it unsafe for use.

Always unplug the appliance after use and before any cleaning or maintenance.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

This appliance is intended for household use only. It should not be used for commercial purposes.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding. Please use care when using the appliance.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Caution: Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Steam cleaner

Safety cap

General nozzle

Mini mop head

Angled nozzle

Plastic round brush

Window/mirror cleaner

Measuring jug

Mini mop head cloth

Funnel

Instruction manual

Features

1200 W steam power

300 ml water tank

200 ml detergent tank


Ready to use in 3 minutes

10 minutes of continuous use

Tough on grime and grease

Dual power of detergent and steam

Description of Parts

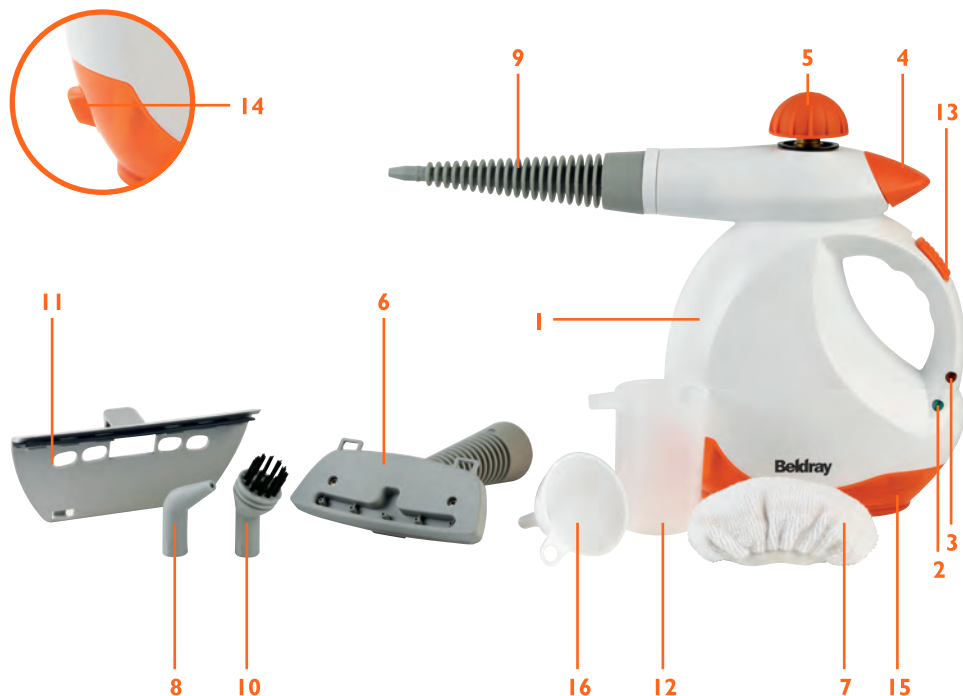

- | | |
|--------------------------|-----------------------------------|
| 1. Steam cleaner | 9. General nozzle |
| 2. Power indicator light | 10. Plastic round brush |
| 3. Steam ready indicator | 11. Window/mirror cleaner |
| 4. Steam button | 12. Measuring jug |
| 5. Safety cap | 13. Detergent switch |
| 6. Mini mop head | 14. Detergent tank release button |
| 7. Mini mop head cloth | 15. Detergent tank |
| 8. Angled nozzle | 16. Funnel |

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the steam cleaner with a soft, damp cloth and dry thoroughly.

Assembling the Steam Cleaner

Accessories can be installed directly onto the steam cleaner or can be installed onto the end of the general nozzle when more reach is required.

Installing the General Nozzle

Hold the steam cleaner steady, then align the guide keys on the general nozzle with the key slots on the steam cleaner. Then push onto the steam cleaner, rotate 90° in a clockwise direction to lock. To remove the steam nozzle, twist it 90° in an anticlockwise direction and pull it apart firmly.

Installing the Round Brush or Angled Nozzle

Install the general nozzle (as instructed in the 'Installing the General Nozzle' section), align the arrow on the desired accessory with the guide keys on the general nozzle and then push the accessory firmly into place.

Installing the Mini Mop Head

Hold the steam cleaner steady, then align the guide keys on the mini mop head with the key slots on the steam cleaner. Push firmly into place, then twist it 90° in a clockwise direction to lock it into position. To remove the mini mop head twist it 90° in an anticlockwise direction and pull apart firmly.

Installing the Mini Mop Head Cloth

Place the mini mop head cloth over the mini mop head, allowing the elasticated edges to hold it in position. To remove it, simply pull it off.

Installing the Window/Mirror Cleaner

Install the mini mop head according to the instructions given on the 'Installing the Mini Mop Head' section.

Hook the two, small hooks on the window/mirror cleaner to the suspension slots on the mini mop, then push to clip the window/mirror cleaner in place, push forward and pull to release it from the locked position. Unhook the hooks from the suspension slots to separate the two pieces.

Filling the Water Tank

Place the steam cleaner on a flat, stable surface. Unscrew the safety cap by pushing down and simultaneously twisting it in an anticlockwise direction.

Fill the measuring jug with water to the 150 ml level indicated, place the funnel inside of the opening in the steam cleaner and then pour the contents of the measuring jug into the funnel. Repeat this until approximately 300 ml of water has been added. Replace the safety cap, push down and screw it in a clockwise direction to secure it.

Note: Be careful not to overfill the water tank.

Caution: Do not add any detergent or additives to the water or water tank, as these will damage the steam cleaner.

Caution: Please ensure that the product is completely cool before filling it with water.

Refilling the Water Tank During Operation

Unplug the steam cleaner from the mains power supply.

Press and hold the steam button and allow it to run until all of the steam has been used up; this will reduce the pressure inside the steam cleaner.

Carefully and slowly push down and unscrew the safety cap in an anticlockwise direction to loosen it but do not remove it.

Any steam left inside of the steam cleaner will slowly release. Allow the steam cleaner to cool for approximately 5 minutes and then remove the safety cap completely.

Use the measuring cup and funnel to refill the water tank. Be careful not to overfill it.

Replace the safety cap, push down and screw it in a clockwise direction to secure it.

Filling with Detergent:

Remove the detergent tank from the base of the steam cleaner by pressing the detergent tank release button on the front and pulling the tank down.

Open the filling cap of the detergent tank by twisting the cap clockwise to the open position and pulling it away from the tank. Fill the detergent tank with detergent up to the fill line marked on the side of the tank.

Use liquid detergent only. Please follow the directions on the bottle.

Use specifically formulated detergents for steam cleaners only.

To refit the detergent tank, position the rear of the detergent tank onto the locking catch then push the front of the detergent tank until it clicks in to place.

Operating the Steam Cleaner

Plug the steam cleaner into the mains power supply and switch it on. The steam cleaner will automatically power on.

The steam cleaner will take approximately 3 minutes to heat up; after this time, it will be ready to use. To operate the steam function, press the steam button.

When the steam cleaner is heating up, a green indicator light will illuminate indicating that the steam cleaner is switched on and a red indicator light will illuminate to show that it is heating up.

Note: The red indicator light will cycle on and off during use, whilst the correct temperature is being maintained and is completely normal.

Using the Steam Cleaner

Before turning on the steam cleaner, fit the required accessory, ensure that the water tank is filled with the specified amount of clean water and if detergent is required, fill the detergent tank as well. Plug the steam cleaner into the mains power supply and allow it to heat up. To use steam only, ensure that the detergent switch is in the upright position then use the steam release switch to emit steam.

Note: The red indicator light will cycle on and off during use, whilst the correct temperature is being maintained and is completely normal.

Using the Steam Cleaner with Detergent:

Set up the steam cleaner as previously described in the section entitled 'Using the Steam Cleaner' section.

To use the detergent function, slide the detergent switch to the down position and use the steam cleaner as normal.

Note: After using the detergent function, set the steam cleaner to steam only and disperse a few bursts of steam to rid the system of any residual detergent before emptying or storing.

Using the Steam Cleaner to Clean Clothes

Install the mini mop head (as instructed in the section entitled 'Installing the Mini Mop Head') and fit the mini mop head cloth (as instructed in the section entitled 'Installing the Mini Mop Head Cloth'). Hang the clothes to be steamed, press the 'Steam' button and then move the steam cleaner over the clothes.

Note: Always follow the care instructions on the garments to be steam cleaned.

Note: Always ensure that the detergent is removed from the steam cleaner before using it to clean clothes.

Using the Steam Cleaner to Clean Doors, Windows and Glass

Install the window/mirror cleaner (as instructed in the section entitled 'Installing the Window/Mirror Cleaner'). Press the 'Steam' button and move the window/mirror cleaner blade over the area to be cleaned.

Caution: Never use the steam cleaner on frosted or cold glass as this may damage or crack the glass.

Using the Steam Cleaner to Clean Sealed Flooring

Install the general nozzle (as instructed in the section entitled 'Installing the General Nozzle') and then the angled nozzle (as instructed in the section entitled 'Installing the Round Brush or Angled Nozzle'). Press the 'Steam' button and move the steam cleaner over the affected areas of the sealed flooring to remove dirt and stains.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Press and hold the steam button and allow the steam cleaner to run until all of the steam has been used up; this will reduce the pressure inside of the steam cleaner.

Carefully and safely unscrew the safety cap in an anticlockwise direction to loosen it but do not remove it.

Any steam left inside of the steam cleaner will slowly release. Allow the steam cleaner to cool for approximately 5 minutes and then remove the safety cap completely.

Empty any residual water from the steam cleaner tank.

Wipe the steam cleaner with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Never immerse the electrical components of the steam cleaner in water or any other liquid.

The steam cleaner and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mop head cloth is machine washable on a 'warm' setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the mop head cloth.

Warning: Do not turn on the steam cleaner during cleaning.

Removing Limescale

If the steam cleaner produces steam slower than usual or no steam is emitted, there may be limescale build up. Limescale can develop over time on the metal parts of the steam cleaner or inside the nozzle and greatly affect its performance. It is recommended to remove limescale on a monthly basis or after every 25–50 uses.

To remove limescale from the steam cleaner, please refer to the section entitled 'Using a Cleaning Solution'.

Using a Cleaning Solution

Prepare a solution of $\frac{1}{3}$ white vinegar and $\frac{2}{3}$ tap water and add it to the water tank.

Plug the steam cleaner into the mains power supply and turn it on; allow the steam cleaner to produce steam until all of the solution is used up.

Repeat the above procedure as often as necessary then refill the tank with fresh water and release steam through the system until the water tank is empty.

Note: Perform a patch test on a suitable surface after limescale removal to ensure that there is no debris left in the steam cleaner.

Note: Due to the nature of UK water supplies, some areas of the country experience larger amounts of limescale build-up. If you live in one of these areas, you may need to descale the steam cleaner more often.

Warning: Do not leave the steam cleaner unattended during the limescale removal process and/or during use.

Descaling the Handheld Detergent Steam Cleaner

Water tank: To clean limescale that builds up inside the water tank, add one or two tablespoons of white vinegar to a full water tank, close the water tank safety cap and then shake. Allow this to sit for approximately 1 hour, then rinse and empty the water tank repeatedly until the water runs clear, this will avoid staining any surfaces that may come into contact with the steam cleaner.

General nozzle: It is recommended to use a spray lubricant inside the affected accessory then fill the water tank with water according to the directions and run a continuous jet of steam through the affected accessory for several minutes to clear the pathway.

Aim the steam cleaner at a neutral surface or cleaning cloth to ensure that no debris is emitted.

Note: Do not turn the steam cleaner on whilst descaling the water tank interior.

Suggested Use for Each Accessory

Accessory	Suggested Use
General nozzle	For all purpose cleaning.
Window/mirror cleaner	Perfect for windows, glass, countertops, doors, vertical and polished surfaces.
Plastic round brush	Perfect for scrubbing countertops, stovetops, vents and tile work.
Angled nozzle	For door runners, grooves and reaching into small areas.
Mini mop head	Perfect for clothing, fabrics, stain removal, curtains and furniture.

Troubleshooting

Problem	Possible Reason	Possible Solution
There is reduced or no steam coming from the steam cleaner.	<p>The water tank may be empty.</p> <p>The steam nozzle may be blocked.</p>	<p>Fill the water tank.</p> <p>Clean the steam nozzle.</p> <p>Ensure that the steam cleaner is plugged in.</p>
The steam cleaner will not switch on.	<p>There is a blown fuse or breaker</p> <p>The power supply cord is not plugged in.</p> <p>The internal fuse has blown.</p>	<p>Replace the fuse or reset the breaker.</p> <p>Plug the power supply cord into the mains power supply.</p> <p>Contact customer services.</p>
Steam escapes from the steam cleaner.	<p>The attachment is not properly connected.</p> <p>There is debris or an obstruction at the connection points.</p> <p>The seals may be missing or damaged.</p>	<p>Turn the steam cleaner off, allow it to cool down, then remove the accessories and reattach them properly.</p> <p>Remove the accessory (as above), check for any debris or blockages and clean the connection points.</p> <p>Check that the seals are present and are in good condition. If the seals are missing or damaged, replace the seals.</p>

Storage

Before storing the steam cleaner, ensure that it has cooled and dried fully.

Ensure that the water tank is empty.

Remove the mop head cloth, making sure that it has been cleaned according to the instructions in the section entitled 'Care and Maintenance'.

Store in a cool and dry place.

Specification

Product Code: BEL0309

Rated Voltage: 220–240 V~ 50 Hz

Output Power: 1200 W

Water Tank Capacity: 300 ml

Waterproof Level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

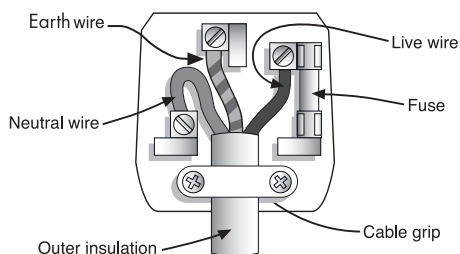

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am – 5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



