

Beldray[®] Est 1872

Nobody Does It Better

3 in 1 Pet Vacuum

Perfect for Pet Hair
Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.
Do not use this appliance outdoors.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance.
Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and filters are not regularly cleaned, the vacuum cleaner may overheat, which will activate the thermal cut-out device due to blocked air inlets. If the vacuum cleaner cuts out, empty the dust container and clean all of the filters, following the instructions in the relevant section. Allow the vacuum to cool for approx. 1 hour before the next use.

Dos and Don'ts

Do:

Check that the HEPA filter is kept clear of obstruction.
Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.
Ensure that the pet turbo brush is kept free from a build-up of dust and dirt.
Clean the brush bar on a regular basis.

Don't:

Use the vacuum cleaner without the HEPA filter or dust container in position.
Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Empty the dust container indoors.
Pull or lift the vacuum cleaner by its power supply cord.

Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner and pet turbo brush with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the vacuum cleaner.

Make sure that the HEPA filter is kept clean and is replaced when it becomes worn.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

3 in 1 Pet Vacuum
Extension handle

Removable floor head
Crevice tool

Pet turbo brush
Instruction manual

Features

600 W power
Easily converts to a
handheld unit

HEPA filter
1 L bagless dust container
5 m power cord


Includes crevice and
pet turbo brush

Description of Parts

1. 3 in 1 Pet Vacuum main body
2. Quick release cord hook
3. Extension handle
4. Locking clip
5. Handheld vacuum handle
6. Lower cord hook
7. Power switch
8. Dust container release button
9. Floor head
10. Bagless dust container
11. HEPA filter
12. Air inlet
13. Crevice tool



- 14. Pet turbo brush
- 15. Pet turbo brush adaptor
- 16. Brush bar
- 17. Locking ring
- 18. Belt
- 19. Impeller
- 20. Locking tabs

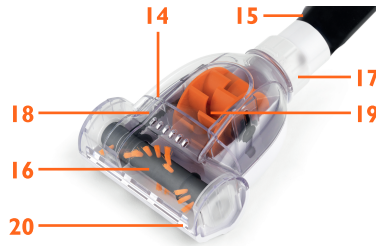

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

Using the 3 in 1 Pet Vacuum

The 3 in 1 Pet Vacuum is ideal for quick jobs around the home. With a pet turbo brush for removing pet hair and a crevice tool for nooks and crannies, the handheld unit makes light work of cleaning stairs, car upholstery and curtains. Simply attach the floor head and extension handle to turn the nifty handheld unit into an upright vacuum that is perfect for hard floors and carpets.

As an Upright Vacuum

STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 2: Pull open the locking clip.

STEP 3: Insert the extension handle into the vacuum cleaner main body.

STEP 4: Push the locking clip upwards and firmly lock it into place to secure the extension handle to the vacuum cleaner main body.

STEP 5: Place the floor head onto the floor and slot the air inlet onto the floor head.

STEP 6: Plug the vacuum cleaner into the mains power supply and turn it on by pressing the power switch.

STEP 7: Turn off the vacuum cleaner by pressing the power switch.

As a Handheld Vacuum

STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 2: Pull down the locking clip and then carefully pull the extension handle away from the vacuum cleaner main body.

STEP 3: Remove the floor head by pulling it away from the air inlet.

STEP 4: Select the attachment to be used and place it securely onto the air inlet. The crevice tool is ideal for cleaning hard-to-reach areas such as under car seats, behind radiators and in-between sofa cushions. The pet turbo brush is perfect for removing large amounts of pet hair from sofas, curtains and car upholstery, as well as hard floors. Ensure that the pet turbo brush adaptor is attached firmly onto the end of the pet turbo brush before securing it to the air inlet.

STEP 5: Once the attachment is secure, plug the vacuum cleaner into the mains power supply and turn it on by pressing the power switch.

STEP 6: Turn off the vacuum cleaner by pressing the power switch once more.

Note: Do not use the pet turbo brush on people or animals.

Storing the Power Cord

The vacuum cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the quick release cord hook and the lower cord hook; the quick release cord hook must be in the upright position.

To unwrap the power cord, twist the quick release cord hook 180 ° in a clockwise direction to release the cord from the stored position.

Emptying the Dust Container

It is important to empty the dust container regularly. This will help to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 2: Whilst securely holding the dust container, press the dust container release button to separate the dust container from the vacuum cleaner main body.

STEP 3: Carefully remove the HEPA filter from the dust container and empty it, disposing of any dust. If there is any dust or other residue remaining on the HEPA filter surface, clean it according to the instructions provided in the section entitled 'Cleaning the HEPA Filter'.

STEP 4: Empty the dust container over a bin, slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 5: Reinsert the HEPA filter into the dust container. Refit the dust container into the vacuum cleaner main body by holding the dust container at a slight angle and pushing it upwards toward the vacuum cleaner main body until it clicks into position.

Note: The dust container can be cleaned once empty by rinsing it under clean, warm water. Allow it to dry thoroughly for approx. 24 hours.

Cleaning the HEPA Filter

It is important to keep the HEPA filter clean from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: The HEPA filter can only be accessed when the dust container has been detached.

Remove the dust container by pressing the dust container release button and pulling it away from the vacuum cleaner main body.

STEP 2: Pull the HEPA filter out of the dust container.

STEP 3: To clean the HEPA filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the HEPA filter under cold water. Allow it to dry thoroughly.

STEP 4: Once the HEPA filter has fully dried, refit it, along with the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

Note: It is recommended that the HEPA filter be cleaned at least once a month with clean water to keep the vacuum cleaner performing at its best. Do not clean the HEPA filter using detergent. Never use external heat sources, such as a radiator to dry the HEPA filter.

Cleaning the Pet Turbo Brush

After prolonged use, the pet turbo brush can become built-up with pet hair and other debris. It is important to keep it clear from dust and dirt to ensure optimum performance.

STEP 1: Remove the pet turbo brush from the vacuum cleaner main body.

STEP 2: Unscrew the locking ring by rotating it in an anticlockwise direction.

STEP 3: Turn the turbo pet brush over and then lift the base away from the locking ring, unhooking the locking tabs. This will enable access to the brush bar, belt and impeller.

STEP 4: The brush bar can now be lifted out of the pet turbo brush lid, allowing for any built-up debris from the brush bar and impeller to be removed.

STEP 5: Replace the brush bar, making sure that the belt is attached correctly and that the spindle ends of the impeller are correctly aligned with the corresponding slots.

STEP 6: To reattach the base of the pet turbo brush, align the locking tabs at the front and then push the base downwards into position. Once the base of the pet turbo brush is securely attached, tighten the locking ring around the air inlet by rotating it in a clockwise direction.

Note: Take care when cleaning the pet turbo brush due to the number of small parts.

Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place. The vacuum cleaner can be lifted and transported easily using the carry handle.

Specifications

Product code: BEL03 I IV2PT

Input: 220–240 V ~ 50/60 Hz

Output: 600 W

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The air inlet is blocked. The dust container is almost full. The HEPA filter is blocked.	Disconnect the attachments and remove the blockage. Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'. Clean the HEPA filter following the instructions in the section entitled 'Cleaning the HEPA filter'.
The vacuum cleaner has cut out.	The thermal cut-out device has activated due to restricted airflow around the unit.	Unplug the vacuum cleaner from the mains power supply and allow it to cool for 1 hour. Empty the dust container and clean the HEPA filter following the instructions in the section entitled 'Cleaning the HEPA filter'.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\equiv$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

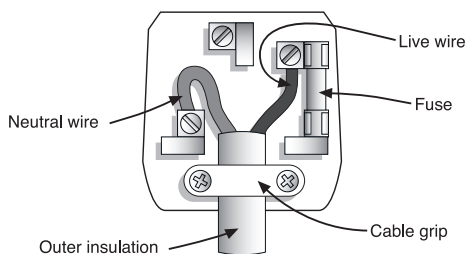

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 1 year guarantee



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD151116/MD050517/V2

