

Beldray[®]

Est 1872

Nobody Does It Better

Window Cleaning Vacuum

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully before first use and retain for future reference.



**This product is not designed to be used to pick up spills.
Only use this product in the vertical position.
Do not use in the horizontal position.
If the product is used in a horizontal position, water
may leak out of the vents.**



Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power adaptor, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.

Charge the unit only with the battery charger provided.

After extended periods of storage, it may be necessary to charge and discharge the battery several times to obtain maximum performance.

The supply terminals are not to be short-circuited.

Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery to mechanical shock.

Do not dispose of exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.

This appliance is fitted with a 3.7 V 1700 mAh li-ion battery (included).

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside of the box and store or dispose of safely.

In the Box

Window Cleaning Vacuum main body

Squeegee vacuum head

150 ml water tank

250 ml spray bottle

Microfibre wipe pad

Mains power adapter

Instruction manual

Features

Lightweight and compact

Built-in 150 ml water tank

20 minutes continuous use

3.7 V rechargeable

Spray bottle and microfibre wipe pad included

Description of Parts



1. Squeegee vacuum head
2. Main body
3. Microfibre wipe pad
4. 250 ml spray bottle
5. On/Off button
6. 150 ml water tank

7. Water tank release button
8. Water tank plug
9. DC input port
10. Handle
11. Locking tabs
12. Locating pin (on the back of the water tank)

13. Water tank fixing hooks (on the main, beneath the squeegee vacuum head)
14. Water tank filter assembly
15. Water tank filter sponge

Instructions for Use

Before Using the Window Cleaning Vacuum

Before using the Window Cleaning Vacuum for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the Window Cleaning Vacuum in water or any other liquid.

Charging the Window Cleaning Vacuum

Before first use, the Window Cleaning Vacuum must be charged for approximately 10–12 hours. Subsequent charging times will take approximately 6–8 hours.

STEP 1: Connect the lead from the mains power adapter to the DC input port on the Window Cleaning Vacuum.

STEP 2: Plug the mains power adapter into the mains power supply; the indicator light will flash red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will turn green.

Note: Whilst charging, the Window Cleaning Vacuum may become warm.

Assembling the Window Cleaning Vacuum

Clip the squeegee vacuum head onto the top of the water tank by aligning the locking tabs on the water tank with the corresponding slots in the squeegee vacuum head and firmly pushing it into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

Note: The squeegee vacuum head will only clip onto the Window Cleaning Vacuum main body one way.

Note: The water tank and the Window Cleaning Vacuum main body will be ready assembled but can be dismantled for cleaning (see the section entitled, 'Cleaning and Maintenance').

Using the Window Cleaning Vacuum

STEP 1: Fill the spray bottle with a mixture of water and a mild detergent.

STEP 2: Using the spray bottle and the microfibre wipe pad, wash over the area of window to be cleaned.

STEP 3: To turn on the Window Cleaning Vacuum, slide the 'On/Off' button.

STEP 4: Place the squeegee vacuum head against the window surface in a vertical position.

STEP 5: Clean the window from the top to bottom, in long, straight, downwards movements. This will avoid leaving drip marks or smears on the window surface.



STEP 6: The Window Cleaning Vacuum can be used to remove any excess water from the window surface once cleaned. To do this, hold the Window Cleaning Vacuum to where the excess water has collected and allow it to suck up the liquid.


STEP 7: To empty the water tank after use, remove the water tank by pushing the water tank release button forwards and then lifting the water tank upwards, away from the Window Cleaning Vacuum main body.



STEP 8: Remove the water tank plug from the side of the water tank and tilt to drain away any excess water.



STEP 9: When reassembling the Window Cleaning Vacuum, ensure that the locating pin on the water tank is lined up with the water tank fixing hooks on the Window Cleaning Vacuum main body.

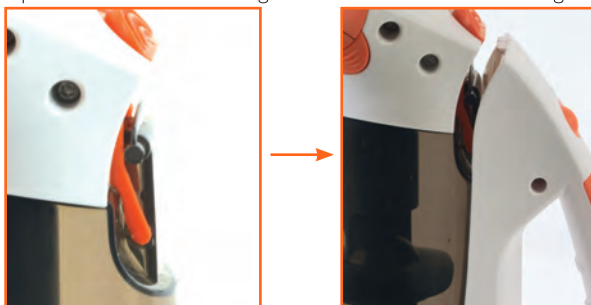

Note: The water tank should be emptied and the filter cleaned after every use.

Warning: Do not allow the water tank to fill beyond the 150 ml Max. fill level. Filling over this level may result in water leaking out from the air vents and damage the Window Cleaning Vacuum.

Cleaning and Maintenance



Always unplug the Window Cleaning Vacuum from the charger before attempting any cleaning or maintenance. Wash the microfibre wipe pad in warm, soapy water, then rinse and dry thoroughly.

Remove the water tank by pushing the water tank release button forwards and then lift the water tank from the Window Cleaning Vacuum main body.

Release the squeegee from the water tank by pressing in both locking tabs simultaneously and pulling it upwards.

Clean the main body, squeegee and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.



To clean the water tank filter, remove the base of the water tank (water tank filter assembly) by twisting it in an anticlockwise direction.

Compress the water tank filter sponge manually to drain away any excess water.

Screw the water tank filter assembly back onto the water tank by twisting it in a clockwise direction.

The Window Cleaning Vacuum should be cleaned after each use.



Storage

Ensure that the Window Cleaning Vacuum is cool, clean and dry. Store in a cool, dry place.

Battery Removal and Disposal

The Window Cleaning Vacuum is fitted with a 3.7 V 1700 mAh li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Window Cleaning Vacuum, unfasten the screws and dismantle the product to give access to the battery. This will require a TX10 Torx screwdriver

Withdraw the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to your local recycling station. Contact your local government offices for further details.

Specification

Product code: BEL0364

Battery: 3.7 V 1700 mAh li-ion (included)

5 V DC charger (included)

Tank Volume: 150 ml

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



