

Beldray[®]

Est 1872

Nobody Does It Better

Multi-Cyclone Vacuum

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use this if any of the openings are blocked.

Do not use this appliance without the dust container and filter in position.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid as this poses a risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Ensure that the dust filter is regularly cleaned to preserve the suction of the appliance.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

 This appliance is fitted with a thermal cut-out, which will activate if the motor overheats due to blocked air inlets.

If the appliance cuts-out, allow it to cool for approximately 1 hour, then empty the dust container and clean all of the filters.

In the Box

Multi-Cyclone Vacuum

Suction hose

Telescopic tube

Multi-Cyclone Vacuum attachment (crevice/brush tool)

Floor brush

Features

1000 W high efficiency motor- more powerful than normal vacuum motors

4 stage filtration with multi-cyclone

2 litre bagless dust container

Variable power control

5 m power cord

Includes floor brush and brush/crevice tool

Description of Parts

1. Multi-Cyclone Vacuum main body
2. Telescopic tube
3. Telescopic tube lever
4. Suction hose
5. Suction hose neck
6. Multi-Cyclone Vacuum attachment (crevice/brush tool)
7. Floor brush
8. Dust container
9. Dust container handle
10. Dust container release button
11. Dust container release switch
12. Dust container hatch
13. Dust container lid
14. Dust container lid locking catch
15. Filter
16. Filter housing
17. Exhaust filter
18. Air valve
19. Air inlet
20. Variable speed dial
21. On/Off button
22. Cord rewind button
23. Mains power supply cable



Instructions for Use

Assembling the Multi-Cyclone Vacuum

The Multi-Cyclone Vacuum will come partially assembled in the box. To fit the suction hose, insert it into the air inlet until the clips on the suction hose lock into position. To remove the suction hose, press in the clips located at either side of the suction hose and pull gently to remove it from the air inlet.

To use the telescopic tube, fit it to the suction hose by pushing the large opening of the telescopic tube over the opening of the suction hose. Add the floor brush to the end of the telescopic tube.

Using the Multi-Cyclone Vacuum Attachment

The Multi-Cyclone Vacuum attachment is dual purpose. It contains a crevice tool and a brush tool which can be selected according to the desired application. To use the crevice tool, fit it onto the end of the suction hose, or if a longer reach is required, attach it to the telescopic tube. The Multi-Cyclone Vacuum attachment will initially be supplied in the crevice tool position. To use the attachment as a brush tool, rotate the head of the attachment until it locks into position with the brush facing upwards.

Using the Telescopic Tube

To extend the telescopic tube, push the telescopic tube lever forwards, pull the telescopic tube out to the desired length and release the telescopic tube lever. The telescopic tube will lock into position at the selected length.

Using the Multi-Cyclone Vacuum

STEP 1: Connect the necessary attachment to the suction hose or the telescopic tube according to the desired application.

STEP 2: Pull out the mains power supply cable until the yellow mark on the cable becomes visible and then connect it to the mains power supply. The cable should not exceed the red mark indicated on the cable.

STEP 3: Press the 'ON/OFF' button located on the Multi-Cyclone Vacuum to switch the Multi-Cyclone Vacuum on.

STEP 4: Depending upon the desired application, use the variable speed dial to alter the suction speed. Rotating the variable speed dial upwards will increase the amount of suction, whilst rotating the variable speed dial downwards will decrease the amount of suction.

STEP 5: Once all of the vacuuming is complete, turn the Multi-Cyclone Vacuum off by pressing the 'ON/OFF' button.

STEP 6: Disconnect the Multi-Cyclone Vacuum and remove the plug from the mains power supply, then press and hold the cable rewind button until the cable has completely wound back into the cable drum.

Note: A lower speed setting is ideal for vacuuming delicate materials such as curtains. A medium speed setting is ideal for upholstered furniture, carpets and mattresses and a high speed setting should only be used for robust flooring, such as wood or tiles.

Warning: Never use the Multi-Cyclone Vacuum to suck up clay, cement or plaster, as these materials will block the filter.

Warning: Hold onto the plug to guide the cable back into the Multi-Cyclone Vacuum to prevent injury from the plug.

Using the Air Valve

The air valve, located on the handle of the Multi-Cyclone Vacuum suction hose handle, enables a more accurate control of the suction power of the Multi-Cyclone Vacuum. Push the air valve forward to open the air valve and decrease the suction power of the Multi-Cyclone Vacuum. Push the air valve backwards to close the air valve and increase the suction power of the Multi-Cyclone Vacuum.

Note: It is recommended that the air valve is open when cleaning delicate fabrics such as curtains, to help to prevent them from being drawn into the Multi-Cyclone Vacuum.

Emptying the Dust Container

STEP 1: To remove the dust container, press the dust container release button located on the dust container handle and gently pull it upwards.

STEP 2: Position the dust container over a bin then press down on the dust container release switch. The dust container hatch on the bottom of the dust container will open, allowing the contents to empty into the bin.

STEP 3: Gently shake the dust container to ensure that all of the dust is emptied from the dust container.

STEP 4: To close the dust container hatch, push it closed until it locks and clicks into position, then refit it by aligning the bottom of the dust container with the seating tab on the Multi-Cyclone Vacuum main body and gently pushing until it is locked in.

Cleaning the Filters

STEP 1: To clean the dust container filter and filter housing, they must first be lifted out of the dust container. To do this, remove and empty the dust container as instructed in the section entitled 'Emptying the Dust Container.' Once the majority of the dust has been removed, the filter and filter housing can be lifted out of the dust container for cleaning.

STEP 2: To clean the exhaust filter, unlock the clip at the side of the filter housing. The exhaust filter and filter housing should come away from the Multi-Cyclone Vacuum.

STEP 3: Clean both of the filters and filter housings by rinsing away any residue by running them under cold water and allowing them to dry thoroughly.

STEP 4: To refit the exhaust filter and filter housing, align the exhaust filter with the tab guides at the side of the filter housing and clip into position. To refit the dust container filter and filter housing, place the filter in the filter housing and position it in the dust container lid. Gently push the dust container lid shut until the locking catch locks it into position.

Note: Do not dry the filters or filter housing using any source of direct heat, such as radiators. Allow them to dry naturally.

Note: Do not use any detergents or harsh cleaning agents to clean the filters or filter housing.

Note: Damaged filters may cause damage to the motor.

Warning: The Multi-Cyclone Vacuum should never be used without the filters in place.

Care and Maintenance

Wipe the external surface of the Multi-Cyclone Vacuum main body with a soft, damp cloth and allow it to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the Multi-Cyclone Vacuum.

Ensure that the filters are kept clean and are rinsed after every removal of the dust container.

To clean the inside of the dust container see the section entitled 'Emptying the Dust Container.'

Troubleshooting

Symptom	Possible Cause	Solution
The suction from the Multi-Cyclone Vacuum is poor.	The telescopic tube or attachments are blocked.	Disconnect the telescopic tube and attachments and remove the blockage.
	The dust container is almost full.	Empty the dust container.
	The filters are blocked.	Clean the filters.
The Multi-Cyclone Vacuum has cut-out has stopped working.	The thermal cut-out device has activated due to restricted air flow.	Unplug the Multi-Cyclone Vacuum from the mains power supply and allow it to cool for approximately 1 hour. Empty the dust container and clean the filters.

Technical Specification

Product Code: BEL0371

Rated Voltage: 220–240 V~ 50 Hz

Rated Wattage: 1000 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

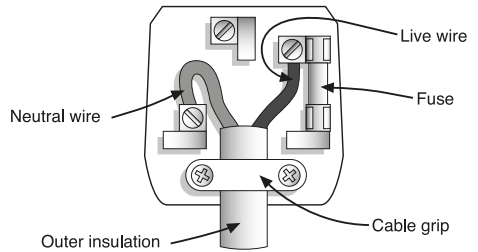

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Imported and Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.
+44 (0)161 934 2240
customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD150714/MD160714/V2