

Beldray[®] Est 1872
Nobody Does It Better

Multicyclonic Vacuum Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit.

If the vacuum cleaner cuts out, press the power button to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

The filters must be kept clean and should be cleaned after every removal of the dust container.

It is possible to remove the cyclonic cone to clean the inside of the dust container.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Multicyclonic Vacuum Cleaner

Suction hose

Telescopic extension tube

Floor brush

2 in 1 crevice and brush tool

Instruction manual

Features

700 W high efficiency motor

Multicyclonic vacuum technology

2 litre dust container

Variable speed control

5 m power cord

High efficiency floor brush

Includes 2 in 1 crevice and brush tool

Description of Parts



- | | |
|---|--|
| 1. Multicyclonic Vacuum Cleaner main unit | 11. Cord rewind button |
| 2. Handle | 12. Air inlet |
| 3. Telescopic extension tube | 13. Dust container |
| 4. Telescopic extension tube button | 14. Dust container release button |
| 5. Suction hose | 15. Dust container base release switch |
| 6. Locking end | 16. Washable filter |
| 7. Suction hose neck | 17. Exhaust filter cover |
| 8. Air valve | 18. Multicyclonic cone |
| 9. Locking tabs | 19. Floor brush |
| 10. Power button | 20. 2 in 1 crevice and brush tool |

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean the exterior with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

Assembling the Multicyclonic Vacuum Cleaner

Switch off and unplug the vacuum cleaner from the mains power supply before fitting any accessories onto the air inlet.

STEP 1: Fit the dust container by pushing it onto the base of the vacuum cleaner main unit, aligning the indent on the base of the dust container with the knob on the unit.

STEP 2: To fit the suction hose to the air inlet, insert the locking end of the suction hose into the air inlet. To remove the suction hose, simultaneously push both locking tabs and pull the locking end of the suction hose firmly away from the air inlet.

Using the Telescopic Extension Tube

The floor brush and attachments fit onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Fit the telescopic extension tube by pushing the large opening of the telescopic extension tube over the end of the suction hose neck (1).

STEP 2: Push the chosen attachment onto the end of the telescopic extension tube (2).

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.

STEP 4: Release the telescopic extension tube button to lock the telescopic extension tube into position at the selected length.

Using the Floor Brush

STEP 1: Push the floor brush onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

STEP 2: Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes, ideal for use on carpets. Switching it backwards lowers the brushes for cleaning hard floors.

STEP 3: Carefully pull out the power supply cord until it is at a suitable length; do not exceed the red mark. Plug it into the mains power supply.

STEP 4: Turn on the vacuum cleaner by pressing the power button.

STEP 5: Rotate the variable speed dial to alter the suction speed; rotating it in a clockwise direction increases the amount of suction, whereas rotating it in an anticlockwise direction decreases the amount of suction.

Note: Open the air valve on the floor brush when vacuuming carpets. A lower speed setting is ideal for cleaning delicate materials such as curtains. The medium speed setting is perfect for upholstered furniture, carpets, mattresses. High speed settings should only be used for hard floors.

Warning: Never use the vacuum cleaner to suck up clay, cement or plaster as these will block the filter.
Hold onto the plug to guide the power supply cord back into the vacuum cleaner. Failure to do so may cause damage to the vacuum cleaner or injury.

Using the 2 in 1 Crevice and Brush Tool

The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach.

The brush tool is perfect for cleaning shelves, cupboards and windowsills.

STEP 1: Push the 2 in 1 crevice and brush tool onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

STEP 2: Select which attachment is to be used by rotating the head to either the crevice or brush setting.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

STEP 4: Rotate the variable speed dial to alter the suction speed; rotating it in a clockwise direction increases the amount of suction, whereas rotating it in an anticlockwise direction decreases the amount of suction.

Note: Do not use the suction hose neck without an accessory attached.

After Use

STEP 1: Turn off the vacuum cleaner by pressing the power button.

STEP 2: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 3: Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum.

STEP 4: The vacuum cleaner can be stored compactly by clipping the telescopic extension tube to the back of the vacuum cleaner. This will keep the floor brush horizontal and the unit stable.

Warning: Hold onto the plug to guide the power supply cord back into the vacuum cleaner. Failure to do so may cause damage to the vacuum cleaner or injury.

Emptying the Dust Container

Before emptying the dust container, switch off and unplug the vacuum cleaner from the mains power supply. It is recommended to empty the dust container outdoors.

STEP 1: Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release button and pulling the dust container away from the unit.

STEP 2: Holding the dust container over a bin or refuse bag, press the dust container release switch to open the dust container hatch, located on the base of the dust container. Empty the dust container slowly and carefully to reduce the amount of dirt released back into the atmosphere. Shake the dust container gently to dislodge any stubborn debris.

STEP 3: To close the dust container hatch, push the base closed and secure the dust container

release catch back into position.

STEP 4: Replace the dust container by pushing it onto the vacuum cleaner main unit, aligning the bottom of the dust container with the tab on the vacuum cleaner main unit.

Warning: Do not use the vacuum cleaner if the dust container is filled past the Max. fill mark, as this could damage the unit or cause injury to the user.

Cleaning the Dust Container and Washable Filter

The washable filter can only be accessed when the dust container has been removed.

STEP 1: Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, the washable filter and filter housing can be lifted out of the dust container.

STEP 3: Hold the filter out over a waste bin, preferably outdoors and gently shake the off any dust and debris. Once the majority of the dust and dirt has been removed, clean off any residue by rinsing the filter under cold water. Allow to dry thoroughly.

STEP 4: Wash the dust container and cyclonic cone in clean, warm water and allow to dry thoroughly.

STEP 5: Once all of the parts have dried fully, refit the filter back into place and replace the multicyclonic cone back into the dust container.

Note: If the dust container, multicyclonic cone and washable filter are not cleaned regularly, the thermal cut-out device will activate. For further details, see the section entitled 'Thermal Cut-out Device'.

Warning: Do not clean the washable filter using detergent. Always allow the washable filter and to air dry; never use external heat sources, such as a radiator to dry it. Do not wring or twist the washable filter as this will cause damage; gently squeeze it.

Cleaning the Exhaust Filter

STEP 1: To remove the exhaust filter for cleaning, unlock the clip at the side of the exhaust filter housing.

STEP 2: Remove the exhaust filter and exhaust filter housing from the vacuum cleaner main unit.

STEP 3: Shake off the exhaust filter until the majority of the dust has been removed, then wash under clean, warm water and allow to dry thoroughly.

STEP 4: Once the exhaust filter has dried fully, slot it back into the exhaust filter housing and back into the vacuum cleaner main unit.

Warning: Do not clean the exhaust filter using detergent. Always allow the HEPA exhaust filter to air dry; never use external heat sources, such as a radiator to dry.

Storage

The vacuum cleaner should be cool, clean and dry before storing in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The telescopic extension tube, floor brush, 2 in 1 brush and crevice tool or air inlet is blocked.	Disconnect the attachment and clear the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The filters are blocked.	Clean the filters following the instructions in the section entitled 'Cleaning the Dust Container and Washable Filter' and 'Cleaning the Exhaust Filter'.
The vacuum cleaner has cut-out or stopped working.	The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect the vacuum cleaner.	Turn off and disconnect the vacuum cleaner from the mains power supply. Empty the dust container and clean the filters. Allow the vacuum cleaner to cool for 1 hour.

Specifications

Product code: BEL0371V2

Rated Voltage: 220–240 V ~ 50/60 Hz

Rated Wattage: 700 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\equiv).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

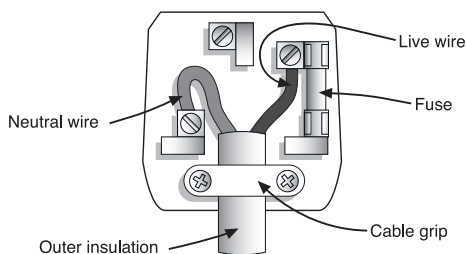

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 12 month guarantee



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD190717/MD000000/V1

