

# Beldray<sup>®</sup> Est 1872

Nobody Does It Better

## Garment Steamer Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This appliance can be used by children from 8 years and above and children should be supervised to ensure that they do not play with the appliance.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only; it should not be used for commercial purposes.

**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.



**Caution:** Hot surface. Do not touch the hot section or heating components of the appliance.



Steam.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

## In the Box

Garment Steamer

Steam head and hose

Extension tube

Hanger

Garment Steamer rest

Instruction manual

## Features

1750 W power

1.2 litre detachable water tank

Ready to use in 45 seconds


30 minutes of continuous steam

Powerful 40 g per minute vertical steam

Variable steam control

Adjustable height for easy storage

## Description of Parts

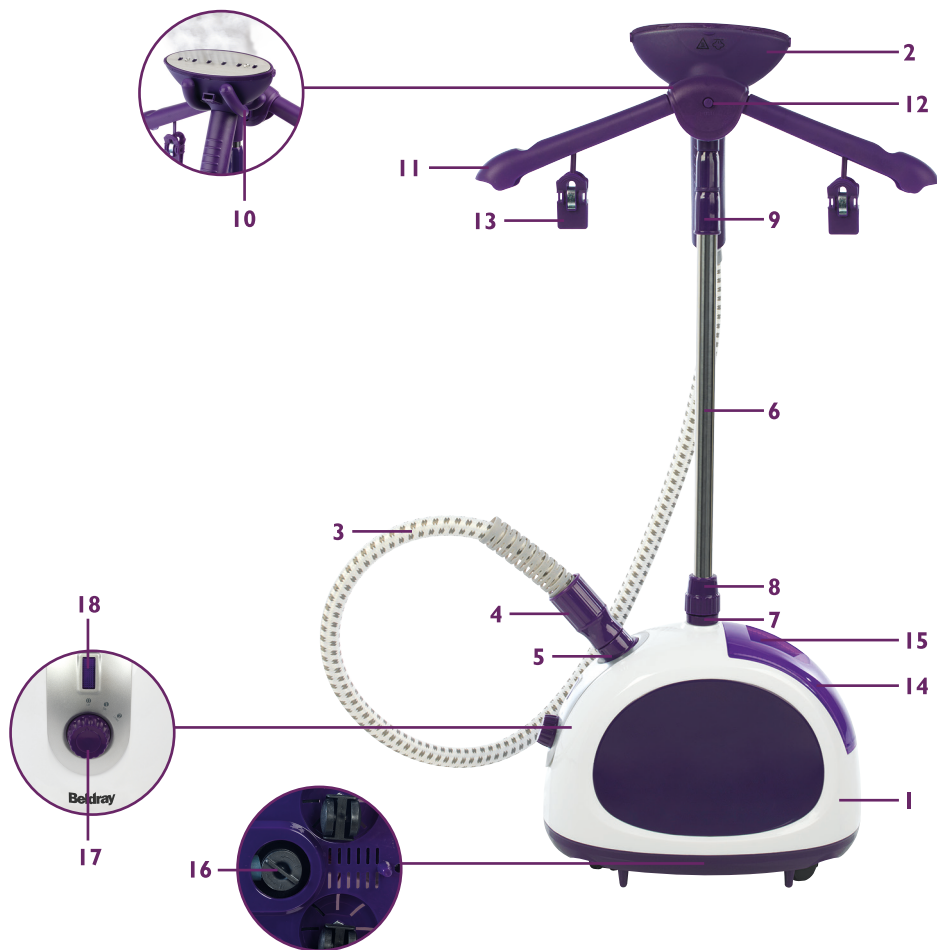

1. Garment Steamer main unit
2. Steam head
3. Hose
4. Hose lock
5. Hose recess
6. Extension tube
7. Extension tube recess
8. Extension tube lock
9. Height-adjustment locks

10. Garment Steamer rest
11. Hanger
12. 'Push' button
13. Garment clips
14. Water tank
15. Water tank handle
16. Water release valve
17. Adjustable steam control (Silk/Linen/Off)
18. Power/ready indicator light

## Before First Use

Before using the Garment Steamer for the first time, wipe the Garment Steamer main unit and accessories with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Garment Steamer main unit in water or any other liquid.

**Note:** When using the Garment Steamer for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Garment Steamer.

## Instructions for Use

### Assembling the Garment Steamer

**STEP 1:** Insert the larger end of the extension tube into the extension tube recess on the top of the Garment Steamer main unit.

**STEP 2:** Secure the extension tube into position by twisting the extension tube lock in a clockwise direction.

**STEP 3:** To adjust the height of the extension tube, pull the two inner extension tubes upwards until the desired height is reached. Secure into position by tightening the height-adjustment locks in a clockwise direction. To further alter the height of the extension tube, twist the height-adjustment locks in an anticlockwise direction, set the inner extension tubes to the desired height and then secure into position by twisting the height-adjustment locks in a clockwise direction.

**STEP 4:** Attach the Garment Steamer rest to the top of the extension tube by sliding the two pieces together. The Garment Steamer rest should be able to freely rotate once in position.

**STEP 5:** Insert the free end of the hose into the hose recess at the front of Garment Steamer main unit and then twist the hose lock in a clockwise direction.

**STEP 6:** Place the steam head in-between the hooks on the Garment Steamer rest.

**STEP 7:** Attach the hanger to the rear of the Garment Steamer rest. To do this, align the hanger with the hanger attachment slot and slide it downwards into position.

**STEP 8:** To open up the hanger to hang garments, pull both arms outwards until they lock into position. To collapse the hanger arms, press the button marked 'Push' and simultaneously move each arm inwards.

## Using the Garment Steamer

**STEP 1:** Ensure that the Garment Steamer is switched off and unplugged from the mains power supply.

**STEP 2:** Remove the water tank from the Garment Steamer main unit by holding the water tank handle and lifting it upwards.

**STEP 3:** Unscrew the cap on the bottom of the water tank and then fill it with water. Once full, screw the cap back on and replace the water tank.

**STEP 4:** Position the Garment Steamer onto a flat, stable surface.

**STEP 5:** Plug in and switch on the Garment Steamer at the mains power supply.

**STEP 6:** Turn on the Garment Steamer by turning the adjustable steam control to either 'Silk' or 'Linen', depending upon the garment to be steamed.

**STEP 7:** The power/ready indicator light will illuminate to indicate that the Garment Steamer is heating up and will start producing steam after approximately 45 seconds.

**STEP 8:** Hang the garment to be steamed on the hanger or attach it to the garment clips.

**STEP 9:** Hold the steam head next to the garment and then it move over the garment in long, straight, downwards movements to remove any wrinkles or creases.

**Note:** Always hold the appliance using the insulated handle; never hold it by the steamer head or any other area, as they will be hot.

**Note:** When using the Garment Steamer, ensure that the Steam Head is not directed towards people or animals.

**Note:** Always unplug the appliance during filling, after use and before any cleaning or user maintenance.

**Warning:** Do not fill the water tank with hot water.

**Warning:** Do not fill the water tank with any cleaning fluids or detergents other than those supplied or highlighted.

**Warning:** Do not twist the hose or block the steam holes, as this could damage the appliance and potentially cause a hazard.

**Caution:** Ensure that the Steam Head is kept at least 20 cm away from the Garment Steamer main unit.

**Caution:** During operation, the hose will get very hot; take care not to touch it.

**Caution:** The extender tube can get hot during use where it is in contact with the hose; exercise extreme caution.

## Troubleshooting

Problem	Reason	Solution
The Garment Steamer does not heat up.	There is no power reaching the Garment Steamer.  The adjustable steam control is set to the 'Off' position.  The fuse has blown.	Connect the plug to the mains power supply and switch it on.  Turn the adjustable steam control to either 'Silk' or 'Linen', depending upon the garment to be steamed.  Replace the fuse with one of the same rating.
No steam is being emitted from the Garment Steamer	There is insufficient water in the water tank.	Switch off the Garment Steamer by turning the adjustable steam control to the 'Off' position and then switch the Garment Steamer off at the mains power supply. Refill the water tank.
The steam head is dripping excess water.	There is condensation inside the hose.	Remove the hose and then turn the steam head upside down to rid it of any excess water.
The hose makes a buzzing noise.	The hose is tangled.  The steam head is lower than Garment Steamer base.	Untangle the hose.  Ensure that the steam head is used above the Garment Steamer main unit.
The power/ready indicator light does not illuminate.	The fuse has blown.  There is no power reaching the Garment Steamer.	Replace the fuse with one of the same rating.  Connect the plug to the mains power supply and switch it on.



## **Cleaning and Maintenance**

Always ensure that the Garment Steamer is unplugged from the mains power supply and is completely cool before performing any cleaning or user maintenance. Allow the Garment Steamer to cool for approximately 30 minutes.

Remove the water tank and drain the contents.

Detach the hose and the extension tube.

Drain away any remaining water from the reservoir within the Garment Steamer. To do this, loosen the water release valve on the bottom of the Garment Steamer by holding it over a sink, suitable container or outdoors and turning the water release valve in an anticlockwise direction.

Wipe the Garment Steamer main unit and accessories with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Garment Steamer main unit in water or any other liquid.

## **Storage**

Before storing, ensure that the Garment Steamer and accessories are cool, clean and dry.

Never store whilst wet.

Never wrap the cord tightly around the Garment Steamer; wrap it loosely to avoid causing damage.

Store in a cool, dry place.

## **Specification**

Product code: BEL0384

Input: 220–240 V ~ 50 Hz

Output: 1750 W

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\frac{1}{=}$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\frac{1}{=}$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\frac{1}{=}$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

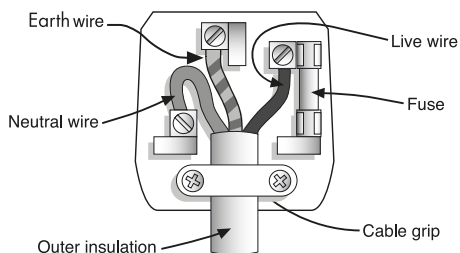

## Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:  
UP Global Sourcing,  
Victoria Street, Manchester, OL9 0DD. UK.  
+44 (0)333 577 9820  
[customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.  
CD301014/MD120216/V1