

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## 4 in 1 Rechargeable Vacuum Cleaner

### Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use this appliance without the dust container and filter in position.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may damage the appliance.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Ensure that the dust filter is regularly cleaned to preserve the suction of the vacuum cleaner.

Always unplug the appliance after use and before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## **Battery Safety**

Only use the batteries recommended.

Exhausted batteries should be removed from the appliance to avoid leakage. The supply terminals are not to be short-circuited.

To remove the battery from the appliance, dismantle the main unit covers.

Use a crosshead screwdriver to remove the screws securing the covers and then carefully remove the covers. Remove the battery from the main unit. Sever the wires that connect the battery to the motor.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not dispose of batteries in your household waste.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Keep batteries out of reach of children.

Rechargeable batteries should only be recharged under adult supervision.

To dispose of the battery, take it to your local recycling station. Contact your local government office for details.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside of the box and either store or dispose of safely.

## In the Box

4 in 1 Vacuum Cleaner main unit

Handle with extension tube

Detachable extension tube

Dust container

Window cleaning attachment

Floor cleaning attachment

Spray head

Spray cleaning cloth

Spray cleaning attachment

Crevice nozzle

Brush tool

Fixing ring

Spray bottle

Power adaptor

Instruction Manual

## Features

75 W power

300 ml water capacity

500 ml bagless dust container


Multifunctional - handheld and upright

## Description of Parts

1. 4 in 1 Rechargeable Vacuum Cleaner main unit
2. Handle with extension tube
3. Extension tube
4. Extension tube release button
5. Dust container
6. Window attachment
7. Floor cleaning attachment
8. Spray head
9. Spray cleaning cloth
10. Spray cleaning attachment
11. Crevice tool
12. Water nozzle
13. Brush tool
14. Fixing ring
15. Spray bottle
16. Power adaptor
17. Window cleaning attachment release button



- a) Suction opening
- b) Dust container
- c) Dust container release button
- d) Dust container insert
- e) Filter
- f) On/Off button
- g) Handle
- h) Charge control light
- i) Charging input port
- j) Extension pole opening

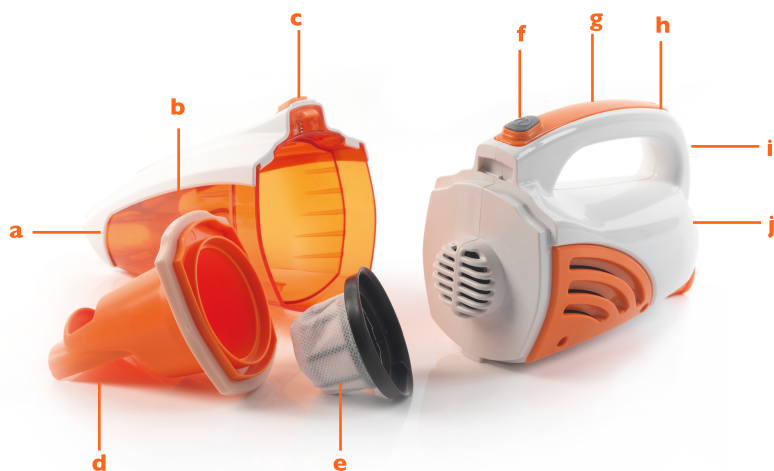

## Instructions for Use

### Before First Use

Before using the 4 in 1 Rechargeable Vacuum Cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the 4 in 1 Rechargeable Vacuum Cleaner or plug in water or any other liquid. When charging the 4 in 1 Rechargeable Vacuum Cleaner for the first time, insert the adaptor into the charging input port and then plug it into the mains power supply.

Leave the 4 in 1 Rechargeable Vacuum Cleaner to charge for approximately 12–15 hours.

Subsequent charges will take approximately 7–11 hours.

Once charging is complete, the charge control light will turn off.

### Assembling the 4 in 1 Rechargeable Vacuum Cleaner

#### Using as a Upright Unit

**STEP 1:** Ensure that the 4 in 1 Rechargeable Vacuum Cleaner is unplugged from the mains power supply and turned off.

**STEP 2:** Connect the handle with extension tube to the extension tube.

**STEP 3:** Connect the assembled handle into the 4 in 1 Rechargeable Vacuum Cleaner main unit.

**STEP 4:** Attach the floor cleaning attachment to the suction opening at the end of the 4 in 1 Rechargeable Vacuum Cleaner main unit.

**STEP 5:** To remove the assembled handle, press the extension tube release button on the surface of the extension tube and pull apart.

**Note:** Do not use excessive force when pressing the extension tube release button, as this may damage it.

**Warning:** Once the extension tube and the handle with extension tube are connected, they become permanently fixed in this position. They should not be taken apart. Any excess force may damage the handle.

#### Using as a Handheld Unit

**STEP 1:** Ensure that the 4 in 1 Rechargeable Vacuum Cleaner is unplugged from the mains power supply and turned off.

**STEP 2:** Remove the assembled handle and any attachments from the 4 in 1 Rechargeable Vacuum Cleaner main unit. To remove the assembled handle, press the extension tube release button on the surface of the extension tube.

**STEP 3:** The window cleaning attachment, crevice tool and wet nozzle can all be used when the 4 in 1 Rechargeable Vacuum Cleaner is being used as a handheld unit. Install the required attachment onto the suction opening. Ensure that the attachment is fully inserted into the suction opening before use.

**STEP 4:** To remove the crevice tool or wet nozzle, pull it out from the suction opening. To remove the window cleaning attachment, press the release button on the attachment and pull from the suction opening.

## Emptying the Dust Container

**STEP 1:** Turn the 4 in 1 Rechargeable Vacuum Cleaner off and unplug it from the mains power supply.

**STEP 2:** Ensuring that the 4 in 1 Rechargeable Vacuum Cleaner is facing downwards (i.e. with the suction opening pointing towards the floor), grasp the dust container firmly and then press the dust container release button to separate the dust container from the main unit.

**STEP 3:** Remove the filter and dust container insert with seal.

**STEP 4:** Empty the dust container, gently shaking to remove any dust and dirt.

**STEP 5:** Replace the dust container insert, making sure that the seal is in position, followed by the filter and then reattach the dust container to the 4 in 1 Rechargeable Vacuum Cleaner main unit, checking that it clicks into place.

**Note:** Always empty the dust container over a bin.

**Warning:** If liquid has gathered in the dust container, ensure that it does not fill beyond the Max. fill line. Never tilt the 4 in 1 Rechargeable Vacuum Cleaner so that the suction opening and attachment face upwards as water may flow back into the ventilation opening and motor.

## Using the Spray Bottle

**STEP 1:** Attach the spray cleaning cloth to the spray cleaning attachment by stretching it around the spray cleaning attachment.

**STEP 2:** Secure the spray cleaning cloth using the fabric hook and loop fastenings.

**STEP 3:** Unscrew the spray head from the spray bottle and then fill the spray bottle with a cleaning agent mixed with water.

**STEP 4:** Screw the spray head back onto the spray bottle.

**STEP 5:** Attach the spray cleaning attachment to the spray head by aligning the clips and pressing it until it locks into position. To remove the spray cleaning attachment, simply pull it away from the spray head.

**STEP 6:** Spray the cleaning agent evenly onto the surface to be cleaned.

**STEP 7:** Move the spray cleaning attachment over the surface to be cleaned.

**STEP 8:** After use, remove the spray cleaning cloth and clean in warm, soapy water, then rinse and allow to dry thoroughly.



## Using the Window Cleaning Attachment

- STEP 1:** Attach the window cleaning attachment, according to the instructions given in the section entitled, 'Using as Handheld Unit'.
- STEP 2:** Hold the 4 in 1 Rechargeable Vacuum Cleaner in an upright position and press the window cleaning attachment against the window surface to be cleaned.
- STEP 3:** Turn on the 4 in 1 Rechargeable Vacuum Cleaner by pressing the 'On/Off' button.
- STEP 4:** Clean the window from the top to bottom, in long, straight, downwards movements. This will avoid leaving drip marks or smears on the window surface.

## Using the Brush Tool

- STEP 1:** Insert the brush tool fully into the suction opening.
- STEP 2:** Turn on the 4 in 1 Rechargeable Vacuum Cleaner by pressing the 'On/Off' button. The brush tool is ideal for removing dust and dirt from delicate objects such as picture frames, lampshades, keyboards, books etc.

## Using the Crevice Tool

- STEP 1:** Insert the crevice tool fully into the water nozzle, then fit the assembly into the suction inlet.
- STEP 2:** Turn on the 4 in 1 Rechargeable Vacuum Cleaner by pressing the 'On/Off' button. The crevice tool is ideal for removing dust and dirt from folds in fabrics, corners, recesses or other places which are hard to reach.

## Using the Wet Nozzle

- STEP 1:** Insert the wet nozzle fully into the suction opening.
- STEP 2:** Turn on the 4 in 1 Rechargeable Vacuum Cleaner by pressing the 'On/Off' button. The wet nozzle is ideal for vacuuming up spills and other small quantities of liquid.

## Using Floor Cleaning Attachment

- STEP 1:** Insert the floor cleaning attachment fully into the suction opening.
- STEP 2:** Turn on the 4 in 1 Rechargeable Vacuum Cleaner by pressing the 'On/Off' button. The floor cleaning attachment is ideal for cleaning both carpets and hard floors.

## Troubleshooting

Problem	Cause	Solution
There is poor suction from the 4 in 1 Rechargeable Vacuum Cleaner.	The dust container is full.	Empty the dust container according to the instructions given in the section entitled, 'Emptying the Dust Container'.
	The filter is blocked.	Remove the blockage from the filter.
	The suction opening is blocked.	Remove the attachment from the suction opening and then remove the blockage.
	The attachment is blocked.	Remove the attachment from the suction opening and then remove the blockage.
The charge control light does not illuminate when the power adaptor is connected.	The power adaptor has not been properly connected to the charging input port.	Make sure that adaptor is fully inserted into the charging input port.
	The mains power supply has not been switched on at the socket.	Turn on the mains power supply at the socket.
	The mains power supply fuse has blown.	Check the fuse in the mains power supply.
The 4 in 1 Rechargeable Vacuum Cleaner leaves streaks and marks when using the window cleaning attachment.	The rubber blade may be damaged.	Replace the rubber blade.

## Cleaning and Maintenance

Always unplug the 4 in 1 Rechargeable Vacuum Cleaner from the mains power supply before performing any cleaning or maintenance.

Wipe the 4 in 1 Rechargeable Vacuum Cleaner main unit and accessories with a soft, damp cloth and allow to dry.

Clean the spray cleaning cloth in warm, soapy water, then rinse and allow to dry thoroughly.

Clean the filter after each use to maintain optimal performance and prevent overheating of the motor.

To clean the filter, first empty the dust container from the 4 in 1 Rechargeable Vacuum Cleaner main unit (see the section entitled, 'Emptying the Dust Container'). Rinse the dust container under cold, running water to remove an excess dust and dirt. Allow to dry thoroughly before reassembling and attaching to the 4 in 1 Rechargeable Vacuum Cleaner main unit.

## Storage

Before storing the 4 in 1 Rechargeable Vacuum Cleaner, ensure that it is clean and all parts are dried fully.

Store in a clean, dry place.

## Specifications

Product code: BEL0386

Voltage supply: 9.6 V DC (Ni-MH battery pack),

1300 mAh

Motor power: 75 W

Collecting container, Max. fill level: 500 ml

Voltage supply: 220–240 V ~ 50 Hz

Output: 12 V DC, 200 mA

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



