

Beldray[®] Est 1872
Nobody Does It Better

Tri-Sweep Lite
4.8 V Swivel Sweeper
Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may damage the appliance.

Do not immerse the appliance in water or any other liquid.
Do not use the appliance for anything other than its intended use.
Do not use this appliance outdoors.
Do not remove from the mains power supply by pulling the cord; switch off and remove the charger by hand.
Do not store the appliance in direct sunlight or in high humidity conditions.
Always unplug the appliance after use and before any cleaning or maintenance.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.
Exhausted batteries must be removed and disposed of safely.
Do not dispose of batteries in a fire.
Do not dispose of batteries in your household waste.
Do not crush, puncture, dismantle or otherwise damage the batteries.
Keep batteries out of reach of children.
Rechargeable batteries should only be recharged under adult supervision.
To dispose of the battery take the extension pole with the built-in battery to your local battery disposal area for recycling.
Contact your local government office for details.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Swivel sweeper head

Lower extension pole with built-in battery

Mid section extension pole

Top extension pole with handle

Charger

Instruction manual

Features

4.8 V power

Long lasting - up to 30 minutes

3 roller brushes

 
100 ml dust container

Lightweight 1 kg

Swivel handle

8–10 hours recharge time

Description of Parts

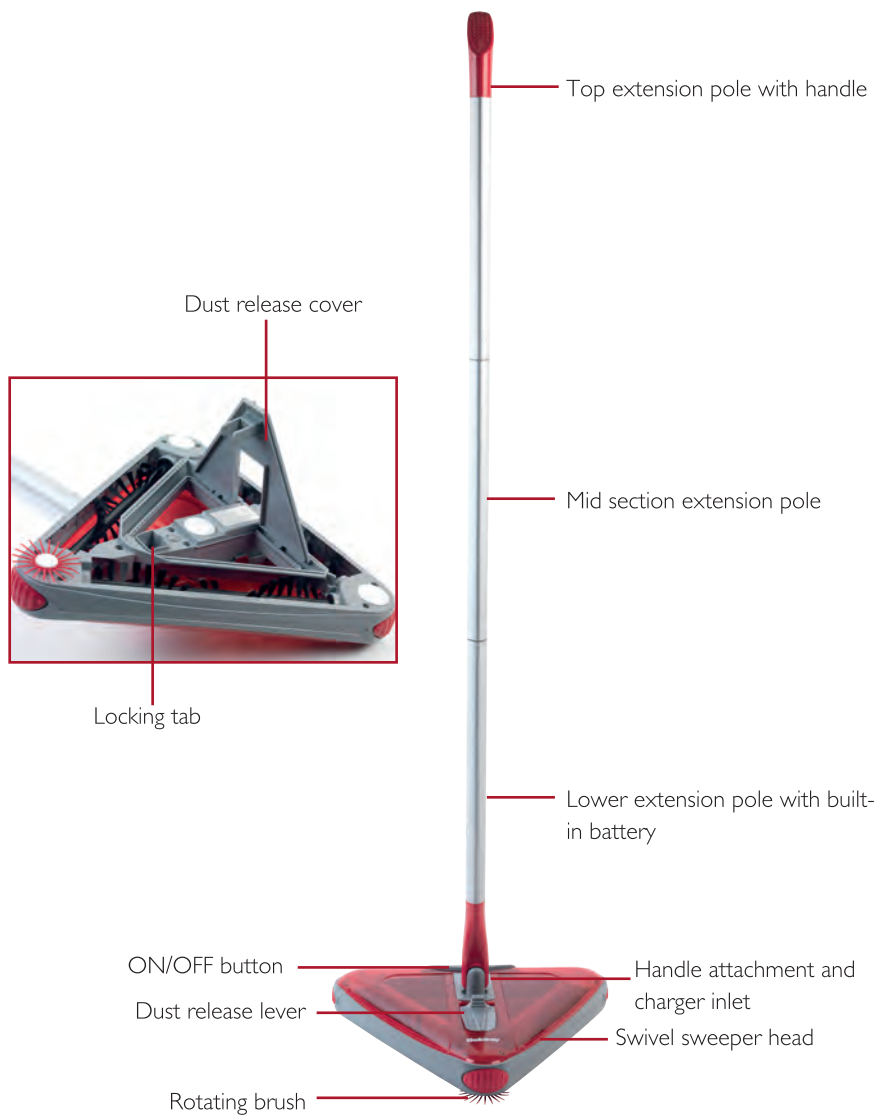

Instructions for Use

Before First Use

Step 1: Place the swivel sweeper head on the floor, ensuring that the handle attachment side is facing upwards.

Step 2: Connect the lower extension pole with the built-in battery to the handle attachment and charger inlet. Ensure that the locking tab is aligned with the notch in the extension pole.

Step 3: Depending upon the length of the pole required, either connect the top extension pole with handle to the lower extension pole or for a longer reach also connect the mid section extension pole.

Step 4: Plug the charger into the charger inlet at the base of the swivel sweeper handle and plug the plug end into the mains power supply, then switch on. The indicator light will illuminate to indicate that the battery is charging.

Step 5: To use the swivel sweeper, switch off the charger at the mains power supply and remove the charger from the charger inlet. Use the ON/OFF button located at the swivel sweeper head base to start the swivel sweeper.

Note: The indicator light will not go off or change colour when the swivel sweeper is fully charged, therefore please ensure that charging times are not exceed as stated in the section entitled 'Battery Charging.'

Note: Keep the brushes free of fibres, hairs, and other objects that could impede the proper functioning of the swivel sweeper. Remove any of the hairs or fibres if this occurs.

Battery Charging

 
To maintain the battery's longevity:

The swivel sweeper does not come charged. Ensure that prior to first use, the swivel sweeper is charged for approximately 10 hours.

Discharge the battery fully, before fully recharging again on next use.

Subsequent charges should then only require approximately 6–8 hours.

Do not leave the appliance plugged in to the mains power supply on charge for extended periods of time when not in use as this will decrease the life of the battery.

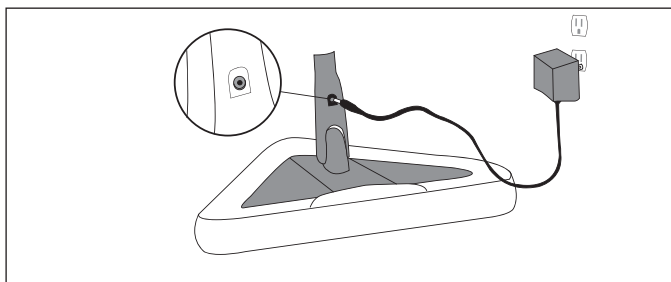


Care and Maintenance

Emptying the Dust Container

The dust container must be emptied after each use or when it is full.

To empty the dust container, hold the swivel sweeper over a bin and pull the dust release lever. The dust release cover will automatically open.

 Gently give the swivel sweeper a shake to remove excess dust, then press the dust container cover closed gently, until it clicks.

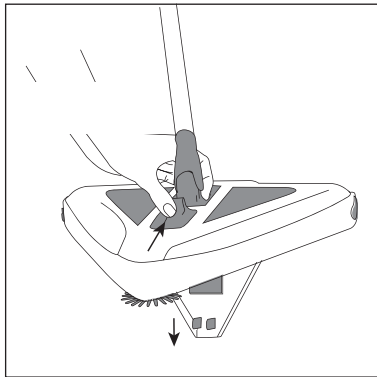

Cleaning the Tri-Sweep Lite 4.8 V Swivel Sweeper

When the dust container is open, use a damp cloth to wipe the inside of the dust container, then allow it to dry thoroughly. Do not use harsh or abrasive detergents as these can cause damage to the swivel sweeper. After cleaning the dust container ensure that all areas are fully dry prior to using the swivel sweeper again.

Troubleshooting

Symptom	Possible Cause	Solution
The swivel sweeper does not charge.	The charger is not connected properly.	Ensure that the charger is correctly fitted to both the charger inlet on the swivel sweeper and the mains power supply and that the mains power supply is switched on.
The swivel sweeper does not sweep efficiently.	Hair and fibres have covered the brushes. The dust container is full..	Remove any hair and fibres from the brushes. Empty the dust container – see the section entitled 'Emptying the Dust Container.'

Storage

To store the swivel sweeper, push the handle forward until it rests securely in place.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Disposal	
 CARD PACKAGING widely recycled	 PLASTIC PACKAGING not currently recycled

Imported and Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD. UK.
+44 (0)161 934 2240

customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD020714/MD020714/V2