

Beldray[®]

Est 1872

Nobody Does It Better

Sonic Multiclean Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Do not use the appliance with wet hands.

Do not use the appliance near flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance on hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire. The supply terminals are not to be short-circuited.

Exhausted batteries should be removed from the appliance to avoid leakage. In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.

This appliance is fitted with a 12 V 4200 mAh li-ion battery.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

Caution: Take care not to pull out the appliance by its handle as this is connected to the Sonic Multiclean main body by a cable and could cause damage.

In the Box

Sonic Multiclean

2 wood/hard floor cleaning pads

1 wood/hard floor polishing pad

1 carpet cleaning pad

Floor stand

Handle screw

Mains power adapter

Instruction manual

Features

Robust sonic action scrubber

Powerful detergent jet spray

1.2 litre, easy-fill water tank

100 minutes of cordless operation

90 ° swivel head

900 oscillations per minute


Includes 4 cleaning pads:

2 wood/hard floor cleaning pads

1 wood/hard floor polishing pad

1 carpet cleaning pad

Description of Parts

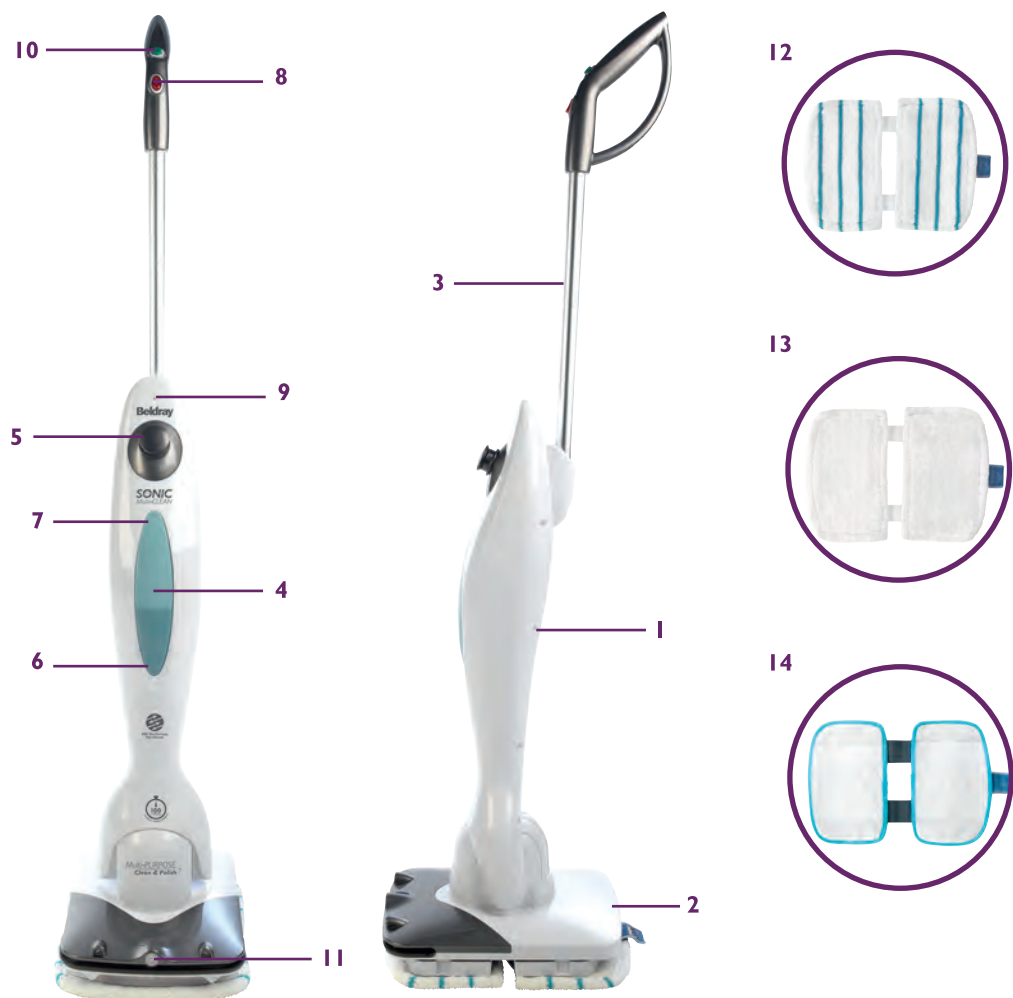

- | | | |
|-------------------------------|--------------------------|-----------------------------------|
| 1. Sonic Multiclean main body | 6. Min. fill mark | 11. Water spray nozzle |
| 2. Sonic Multiclean head | 7. Max. fill mark | 12. Wood/hard floor cleaning pads |
| 3. Handle | 8. Power switch | 13. Wood/hard floor polishing pad |
| 4. Water tank | 9. Power indicator light | 14. Carpet cleaning pad |
| 5. Water tank cap | 10. Water spray button | |

Instructions for Use

Carefully remove the Sonic Multiclean from the box, holding the Sonic Multiclean main body to lift it out.

Standing the Sonic Multiclean main body upright, locate the locking catch on the handle and push it up and towards the main body until it secures into position.

Insert the handle screw through the hole at the bottom of the handle and tighten it in a clockwise direction to secure.

Charging the Sonic Multiclean

STEP 1: Position the Sonic Multiclean in the floor stand, ensuring that it is close to a mains power supply.

STEP 2: Connect the mains power adapter to the Sonic Multiclean and then plug it in to the mains power supply; the power indicator light on the mains power adaptor will illuminate red to confirm that the Sonic Multiclean is charging.

STEP 3: Once the battery is fully charged, the power indicator light on the mains power adaptor will illuminate green. Switch off and unplug the mains power supply adapter, then disconnect it from the Sonic Multiclean.

Note: Whilst charging, the Sonic Multiclean may become warm.

Note: When charging the Sonic Multiclean, only the power indicator light on the mains power adaptor will illuminate red; this will change to green once the battery is fully charged. The power indicator light on the Sonic Multiclean will not illuminate during charging.

Note: The power indicator light on the Sonic Multiclean will only illuminate green when in use, indicating that it is charged and powered on. The indicator light will illuminate red when the Sonic Multiclean needs to be charged.

Filling the Water Tank

STEP 1: Unplug the Sonic Multiclean from the mains power supply and remove the water tank cap by pulling it away from the Sonic Multiclean main body.

STEP 2: Using a suitable measuring vessel, fill the water tank to the desired level using the Min. and Max. fill marks as a guide.

STEP 3: Replace the water tank cap by pushing it back onto the Sonic Multiclean main body.

Note: Check the seals for damage and ensure that they are firmly in position before using the Sonic Multiclean.

Installing the Mop Head Pad

STEP 1: Place the required mop head pad onto the floor.

STEP 2: Position the Sonic Multiclean above the mop head pad.

STEP 3: Slowly lower the Sonic Multiclean until it affixes itself to the mop head pad.

Using the Sonic Multiclean

Cleaning Carpets

STEP 1: Vacuum the carpet and/or rugs to be cleaned; this will remove any loose dirt or dust that may have accumulated and will make the cleaning process more effective.

STEP 2: Apply the Beldray Carpet Cleaning Foam directly onto the area to be cleaned, ensuring that it is evenly covered and then leave it for approximately 2–3 minutes to allow any dirt to be drawn out.

STEP 3: Attach the carpet cleaning pad following the instructions in the section entitled 'Installing the Mop Head Pad'.

STEP 4: Turn on the Sonic Multiclean by flicking the power switch.

STEP 5: Lightly step on the back of the Sonic Multiclean head to disengage the head lock and angle the Sonic Multiclean as desired.

STEP 6: To begin cleaning, move the Sonic Multiclean backwards and forwards over the desired area 3–4 times. Repeat the action until the entire carpet or rug has been cleaned.

STEP 7: Once finished, turn off the Sonic Multiclean by flicking the power switch and then remove the carpet cleaning pad following the instructions in the section entitled 'Removing the Mop Head Pad'. Allow the area to dry thoroughly and then vacuum to remove any remaining particles.

Note: Always check with the carpet/rug manufacturer or distributor before using the relevant cleaning solution.

Note: To establish the colour fastness of any carpet, gently rub a small, discreet area with a clean, damp towel. If any colour comes off onto the towel, discontinue use of the Sonic Multiclean.

Note: Never stand on the Sonic Multiclean.

Warning: Never add Beldray Carpet Cleaning Foam to the water tank.

Cleaning Hard Floors

STEP 1: Vacuum or sweep the floor to be cleaned; this will remove any loose dirt or dust that may have accumulated and will make the cleaning process more effective.

STEP 2: Unplug the Sonic Multiclean from the mains power supply and remove the water tank cap.

STEP 3: Using a suitable measuring vessel, dilute the Beldray Wood and Hard Floor cleaning solution with water using a 1:20 ratio and then fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Replace the water tank cap, ensuring that it is firmly in position.

STEP 5: Attach the wood/hard floor cleaning pad following the instructions in the section entitled 'Installing the Mop Head Pad'.

STEP 6: Turn on the Sonic Multiclean by flicking the power switch.

STEP 7: Lightly step on the back of the Sonic Multiclean head to disengage the head lock and angle the Sonic Multiclean as desired.

STEP 8: Squirt a small amount of the cleaning solution onto the floor to be cleaned by pressing the water spray button.

STEP 9: Move the Sonic Multiclean backwards and forwards to clean the area. Repeat the action until the entire floor has been cleaned.

STEP 10: Once finished, turn off the Sonic Multiclean by flicking the power switch and then remove the wood/hard floor cleaning pad following the instructions in the section entitled 'Removing the Mop Head Pad'.

Note: Do not use the Sonic Multiclean on highly worn, unsealed, waxed or oiled wood or tiled floors. It is always recommended to test a discreet area of the floor to be cleaned before proceeding to ensure that the Sonic Multiclean will not cause damage. Always check the care and use instructions of the floor with the manufacturer.

Note: When using the Sonic Multiclean, there might be a slight delay to the water spray; this is normal as the liquid needs to be drawn through. Hold the water spray button for 5–10 seconds until the solution begins to spray.

Note: Never stand on the Sonic Multiclean.

Warning: Never leave the Sonic Multiclean with a wet or damp mop head pad on the floor as this could cause damage.

Caution: Do not use the Sonic Multiclean without installing the correct mop head pad.

Polishing Hard Floors

STEP 1: Vacuum or sweep the floor to be polished; this will remove any loose dirt or dust that may have accumulated and will make the cleaning process more effective. It is recommended that floors are cleaned using the Sonic Multiclean prior to polishing them and are allowed time to dry sufficiently, as this will give the best results.

STEP 2: Attach the wood/hard floor polishing pad following the instructions in the section entitled 'Installing the Mop Head Pad'.

STEP 3: Lightly step on the back of the Sonic Multiclean head to disengage the head lock and angle the Sonic Multiclean as desired.

STEP 4: Carefully squirt a generous amount of the Beldray Polish and Shine solution onto the floor to be polished, ensuring that it is evenly covered and then place the Sonic Multiclean over the area.

STEP 5: Turn on the Sonic Multiclean by flicking the power switch.

STEP 6: Move the Sonic Multiclean backwards and forwards to polish the area, taking care not to overpolish the area; always leave it looking wet.

STEP 7: Continue squirting the floor with the relevant cleaning solution working in 5' x 5' sections and polish accordingly. Repeat the action until the entire floor has been polished.

STEP 8: Leave the area to dry, ensuring that it is left looking wet. Do not walk over the polished floor until it is completely dry.

STEP 9: Once finished, turn off the Sonic Multiclean by flicking the power switch, then slide and lift it from the area that has been polished. Laying the Sonic Multiclean on its side, carefully remove the wood/hard floor polishing pad by hand.

Note: Do not use the Sonic Multiclean without installing the correct mop head pad.

Note: Do not use the Sonic Multiclean on highly worn, unsealed, waxed or oiled wood or tiled floors. It is always recommended to test a discreet area of the floor to be cleaned before proceeding to ensure that the Sonic Multiclean will not cause damage. Always check the care and use instructions of the floor with the manufacturer.

Note: Never stand on the Sonic Multiclean.

Warning: Never add Beldray Polish and Shine solution to the water tank.

Removing the Mop Head Pad

STEP 1: Stand the Sonic Multiclean on a flat, even surface.

STEP 2: Carefully step on the tag of the mop head pad and lift the Sonic Multiclean upwards to remove it.

Cleaning Solutions

The Sonic Multiclean should only be used alongside liquid cleaning solutions.

Use specifically formulated cleaning solutions only.

Beldray cleaning solutions, specifically formulated for the Sonic Multiclean are available at all good stockists.

Cleaning and Maintenance

Always unplug the Sonic Multiclean from the mains power supply before attempting any cleaning or maintenance.

Drain the remaining water or cleaning solution from the water tank and clean after every use.

Rinse the water tank after each use and allow to dry thoroughly. If a detergent solution has been used, rinse the water tank, add fresh water and then run it through the system using the water spray button, until the spray is free from detergent.

Wipe the Sonic Multiclean main body with a soft, damp cloth and dry thoroughly.

Do not immerse the Sonic Multiclean main body in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers.

To clean the mop head pad, follow the washing instructions on the care label.

Storage

Before storing the Sonic Multiclean, ensure that it is cool, clean and dry.

Check that the water tank is empty.

Remove the mop head pad and wash for next use.

Store in an upright position in a cool, dry place.

Battery Removal and Disposal

The Sonic Multiclean is fitted with a 12 V 4200 mAh li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Sonic Multiclean, unfasten the handle and then the screws located at the rear of the Sonic Multiclean main body.

Withdraw the battery unit and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to your local recycling station. Contact your local government offices for further details.

Troubleshooting

Symptom	Possible Cause	Solution
The Sonic Multiclean will not charge.	The mains power adapter is not connected.	Ensure that the mains power adapter is inserted correctly into the Sonic Multiclean and that it is switched on at the mains power supply.
The water spray nozzle is spraying foam.	There may be air in the system.	Press and hold the water spray button for 5–10 seconds to flush the system.
The Sonic Multiclean will not spray.	There may be air in the system. There may not be enough cleaning solution in the water tank.	Press and hold the water spray button for 5–10 seconds to flush the system. Add more cleaning solution following the instructions in the section entitled 'Filling the Water Tank'.

Specification

Product code: BEL0389

Input: 220–240 V ~ 50 Hz

Water tank capacity: 1.2 L

Battery: 12 V 4200 mAh li-ion

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD181214MD260215/V3