

Beldray[®]

Est 1872

Nobody Does It Better

3 in 1 Multifunctional Vacuum Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



This appliance is fitted with a thermal cut-out device, which will activate if the motor overheats due to blocked air inlets. If the vacuum cleaner cuts out, allow it to cool for 1 hour, then empty the dust container and clean all of the filters.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

3 in 1 Multifunctional Vacuum Cleaner main body

Upright vac handle

Bagless dust container

Removable floor head

Turbo brush head

Crevice tool

Washable HEPA filter

Instruction manual

Features

800 W power

Easily converts to handheld unit

Washable HEPA filter

1.5 L bagless dust container

5 m power cord

Removable floor head

Includes turbo brush head

Description of Parts



1. 3 in 1 Multifunctional Vacuum Cleaner main body
2. Quick release cord hook
3. Upright vac handle
4. Upright vac handle release switch
5. Handheld Vac handle
6. Lower cord hook
7. On/Off power switch

8. Dust container cap
9. Dust container cap release button
10. Removable floor head
11. Turbo brush head
12. Bagless dust container
13. Crevice tool
14. HEPA filter
15. Suction nozzle

Instructions for Use


Assembling the 3 in 1 Multifunctional Vacuum Cleaner

STEP 1: Ensure that the 3 in 1 Multifunctional Vacuum Cleaner is unplugged from the mains power supply.

STEP 2: Fit the dust container by aligning the locking tabs with those on the 3 in 1 Multifunctional Vacuum Cleaner main body. Twist the 3 in 1 Multifunctional Vacuum Cleaner main body in a clockwise direction to lock the dust container into position.

STEP 3: To attach the upright vac handle, align it with the slot on top of the 3 in 1 Multifunctional Vacuum Cleaner main body and slide it into position. The upright vac handle can be removed by sliding the upright vac handle release switch upwards and pulling the upright vac handle away from the 3 in 1 Multifunctional Vacuum Cleaner main body.

STEP 4: Install the required head by slotting it into the suction nozzle.

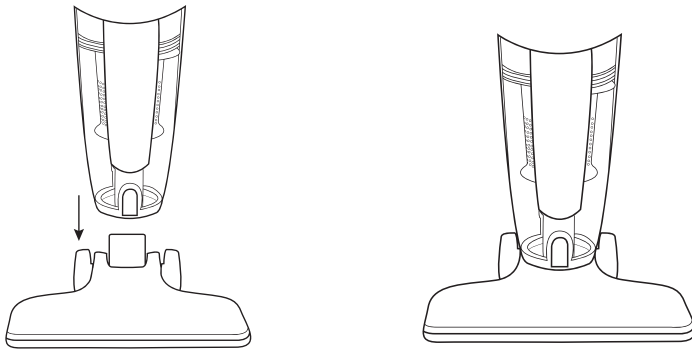

Using the 3 in 1 Multifunctional Vacuum Cleaner

Do not use the 3 in 1 Multifunctional Vacuum Cleaner without the HEPA filter or dust container in position.

Ensure that the HEPA filter is regularly cleaned to preserve the suction of the 3 in 1 Multifunctional Vacuum Cleaner.

As an Upright Vac:

STEP 1: Plug the 3 in 1 Multifunctional Vacuum Cleaner into the mains power supply.

STEP 2: To start the 3 in 1 Multifunctional Vacuum Cleaner, press the 'On/Off' power switch.

STEP 3: Install the required head by inserting it into the suction nozzle. The removable floor head is ideal for vacuuming hard floors, whilst the turbo brush head is ideal for vacuuming carpets.

As a Handheld Vac:

STEP 1: Ensure that the 3 in 1 Multifunctional Vacuum Cleaner is unplugged from the mains power supply.

STEP 2: Press and hold the upright vac handle release switch and carefully pull the upright handle away from the 3 in 1 Multifunctional Vacuum Cleaner main body.

STEP 3: Remove the head in use by carefully pulling it out of the suction nozzle.

STEP 4: Plug the 3 in 1 Multifunctional Vacuum Cleaner into the mains power supply.

STEP 5: To start the 3 in 1 Multifunctional Vacuum Cleaner, press the 'On/Off' power switch.

STEP 6: Install the crevice tool by inserting it into the suction nozzle. The crevice tool is ideal for those awkward to clean areas such as on radiators, in corners and between sofa cushions.

Winding and Unwinding the Power Cord

The 3 in 1 Multifunctional Vacuum Cleaner is equipped with a handy cord storage system. To use it, simply wind the power cord around the quick release cord hook and the lower cord hook. To unwind the power cord, twist the quick release cord hook either to the left or the right to release the cord from the stored position.



Using the Dust Filters

Once dust enters the dust container, the suction system keeps it moving in a swirling motion to avoid reducing the suction. It is then filtered by the HEPA filter.

Note: Dirty or worn HEPA filters may cause damage to the motor.

Caution: The 3 in 1 Multifunctional Vacuum Cleaner should never be used without the HEPA filter in place.

Emptying the Dust Container

STEP 1: Turn the 3 in 1 Multifunctional Vacuum Cleaner off and unplug it from the mains power supply.

STEP 2: Remove the head or nozzle attachment by carefully pulling it out of the suction nozzle. Release the dust container by twisting it in a clockwise direction and pulling it away from the 3 in 1 Multifunctional Vacuum Cleaner main body.

STEP 3: Holding the dust container over a bin, press the dust container cap release button; this will open the dust container cap and empty the dust. If necessary, gently shake the dust container to empty all of the dust.

STEP 4: Carefully remove the HEPA filter from the dust container and empty it, disposing of any dust. If there is any dust or other residue remaining on the HEPA filter surface, clean it according to the instructions provided (see 'Cleaning the Dust Container HEPA Filter').

STEP 5: Carefully place the HEPA filter back into the dust container and then refit the dust container onto the 3 in 1 Multifunctional Vacuum Cleaner main body (see 'Step 2' in the section entitled 'Assembling the 3 in 1 Multifunctional Vacuum Cleaner').

Cleaning the Dust Container HEPA Filter

To clean the dust container HEPA filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the HEPA filter under cold water. Allow it to dry thoroughly.

Do not dry the HEPA filter using any source of direct heat, such as radiators. Allow it to dry naturally.

Do not use any detergents or harsh cleaning agents to clean the HEPA filter.

Refit the HEPA filter and dust container as described in the section entitled 'Emptying the Dust Container'.

It is recommended that the HEPA filter be cleaned at least once a month with clean water to keep the 3 in 1 Multifunctional Vacuum Cleaner performing at its best.

Cleaning the Turbo Brush Head

Remove the guard from the front of the turbo brush head to clean the agitator brush.

If the turbine becomes blocked, unclip the access panel by squeezing the clips on the side and then remove the blockage.

Cleaning and Maintenance

Wipe the external surface of the 3 in 1 Multifunctional Vacuum Cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the 3 in 1 Multifunctional Vacuum Cleaner.

Ensure that the HEPA filter is kept clean and is replaced when it becomes worn.

Storage

The 3 in 1 Multifunctional Vacuum Cleaner can be lifted and transported easily using the handheld vac handle.

Never pull or lift the 3 in 1 Multifunctional Vacuum Cleaner by its power supply cord.

Ensure that the 3 in 1 Multifunctional Vacuum Cleaner is cool, clean and dry.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	<p>The hose/tube/suction nozzle is blocked.</p> <p>The dust container is almost full.</p> <p>The HEPA filter is blocked.</p>	<p>Disconnect the attachment and remove the blockage.</p> <p>Empty the dust container</p> <p>Clean the HEPA filter.</p>
The 3 in 1 Multifunctional Vacuum Cleaner has cut-out.	The thermal cut-out device has activated due to restricted airflow.	Unplug the 3 in 1 Multifunctional Vacuum Cleaner from the mains power supply and allow it to cool for 1 hour. Empty the dust container and clean the HEPA filter.

Specification

Rated Voltage: 220–240 V AC

Rated Wattage: 800 W

Frequency: 50 Hz

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

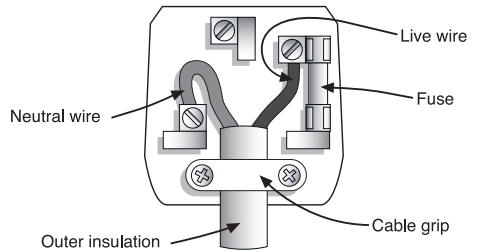

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



