

Beldray[®]

Est 1872

Nobody Does It Better

2200 W Steam Iron Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, if there is any leakage or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use the appliance after a malfunction or if it has been dropped, damaged or if there are visible signs of damage or if it is leaking.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Keep the appliance away from flammable materials.

Warning: Danger of scalding.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.



Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

2200 W Steam Iron

Measuring cup

Instruction manual

Features

2200 W power

200 ml water tank

Anti-calcium

Vertical steam function

2.5 m power cord

Ceramic soleplate

Description of Parts



1 Ceramic soleplate

2 Spray nozzle

3 Water tank inlet cover

4 Self-clean button

5 Steam control

6 Burst of steam button

7 Spray button

8 Temperature control dial

9 Temperature indicator light

10 Cord wrap

11 Heel rest

12 Water tank

13 Steam holes

Instructions for Use

Before First Use

Before using the 2200 W Steam Iron for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the 2200 W Steam Iron with a soft, damp cloth and dry thoroughly. Plug in and switch on the 2200 W Steam Iron at the mains power supply.

To remove any impurities that may have occurred during the manufacturing process, it is best to use the 2200 W Steam Iron on an old piece of cloth, ensuring that it is on the highest temperature setting and that the cloth is suitable. Place the 2200 W Steam iron onto the cloth and then push the 'Burst of Steam' button 2–3 times, waiting approximately 5 seconds in-between each burst; this will remove any impurities from the ceramic soleplate.

Alternatively, the 'Self-clean' function could be used; follow the instructions in the section entitled 'Self-clean' Function'.

Note: When using the 2200 W Steam Iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the 2200 W Steam Iron.

Filling the Water Tank

STEP 1: Ensure that the 2200 W Steam Iron is switched off and unplugged from the mains power supply.

STEP 2: Check that the steam control is set to the 'Off' position.

STEP 3: Position the 2200 W Steam Iron on the heel rest and open the water tank inlet cover.

STEP 4: Fill the measuring cup with water, ensuring that it does not go above the Max. fill level and then using the funnel, carefully pour the contents into the water tank.

STEP 5: Close the water tank inlet cover.

Warning: Do not exceed the Max. capacity level of the water tank; it is best to check the water level when the 2200 W Steam Iron is on the heel rest.

Warning: Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the 2200 W Steam Iron

Ironing with Steam

The steam settings are perfect for effortlessly removing creases from fabrics such as cotton and linen.

STEP 1: Fill the water tank according to the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the 2200 W Steam Iron at the mains power supply.

STEP 3: To increase the temperature of the 2200 W Steam Iron, rotate the temperature control dial in a clockwise direction until the required temperature is selected. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to indicate that the 2200 W Steam Iron is heating up; this will switch off when it is ready to use.

STEP 4: Select the required steam setting by sliding the steam control to either the 'Low' or 'High' position. The steam setting can be switched off at any time by flicking the steam control to the 'Off' position.

STEP 5: After use, rotate the temperature control dial to the 'Off' position, then switch off and unplug the 2200 W Steam Iron from the mains power supply.

Note: The 2200 W Steam Iron will need to be set to a minimum of the 3-dot heat setting to produce steam.

Note: Allow the 2200 W Steam Iron to reach the selected temperature before use as not doing so can cause it to drip.

Note: The heat indicator light will illuminate when the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready to use light.

Note: The temperature indicator light will cycle on and off during use to regulate the temperature.

Warning: Never leave the 2200 W Steam Iron soleplate sitting on fabric for any longer than 15 seconds.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Ensure that the steam control is set to the 'Off' position.

STEP 2: Fill the water tank according to the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the 2200 W Steam Iron at the mains power supply.

STEP 4: To increase the temperature of the 2200 W Steam Iron, rotate the temperature control dial in a clockwise direction until the required temperature is selected. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to indicate that the 2200 W Steam Iron is heating up; this will switch off when it is ready to use.

STEP 5: Test the 2200 W Steam Iron on a small area of the fabric to ensure that the selected temperature is suitable and adjust if necessary.

STEP 6: After use, rotate the temperature control dial to the 'Off' position, then switch off and unplug the 2200 W Steam Iron from the mains power supply.

'Burst of Steam' Function

For creases that are stubborn and difficult to iron out, select the required steam setting and then press the 'Burst of Steam' button to remove any creases, waiting approximately 5 seconds in-between each burst to prevent any water leaking from the steam holes.

Note: The temperature control dial will need to be set a minimum 3-dot heat setting.

Vertical Steam Ironing

The 'Burst of Steam' button can also be used to vertically steam curtains and other hanging garments.

STEP 1: Hang up the item to be vertically steamed.

STEP 2: Ensure that the steam control is set to the 'Off' position.

STEP 3: Fill the water tank according to the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Rotate the temperature control dial until a minimum 3-dot heat setting is selected; the higher the temperature the more powerful the steam.

STEP 5: Holding the 2200 W Steam Iron approximately 15 cm away from the item, press the 'Burst of Steam' button to remove any creases, waiting approximately 5 seconds in-between each burst.

'Spray' Function

The 'Spray' function can be used to help to remove stubborn creases on heavier fabrics such as curtains or collars. It can also be used when dry ironing delicate fabrics that cannot be steam ironed. Holding the 2200 W Steam Iron over the area to be ironed, press the 'Spray' button.

Note: The 'Spray' function will not work if the water tank is empty.

Note: When using the 'Spray' function for the first time, it may be required to press the 'Spray' button several times.

Anti-drip Feature

The 2200 W Steam Iron has a built-in anti-drip feature to prevent any water leaking from the steam holes when the temperature is not sufficient enough to create steam.

'Self-Clean' Function

The 'Self-clean' function removes scales and impurities from the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the 2200 W Steam Iron is used in a hard water area.

STEP 1: Ensure that the 2200 W Steam Iron is switched off and unplugged from the mains power supply.

STEP 2: Check that the steam control is set to the 'Off' position.

STEP 3: Position the 2200 W Steam Iron on the heel rest.

STEP 4: Fill the water tank according to the instructions in the section entitled 'Filling the Water Tank'.

STEP 5: Plug in and switch on the 2200 W Steam Iron at the mains power supply.

STEP 6: Set the temperature control dial to the highest heat setting and allow the 2200 W Steam Iron to heat up until the heat indicator light switches off.

STEP 7: Switch off and unplug the 2200 W Steam Iron from the mains power supply.

STEP 8: Carefully hold the 2200 W Steam Iron over a sink, ensuring that the power supply cord and plug are away kept away from the appliance.

STEP 9: Press and hold the 'Self-clean' button. Hot water and steam will expel from the steam holes along with any impurities.

STEP 10: After approximately 1 minute or when the water tank is completely empty, release the 'Self-clean' button.

STEP 11: Reposition the 2200 W Steam Iron on the heel rest.

STEP 12: Plug in and switch on the 2200 W Steam Iron at the mains power supply.

STEP 13: Set the temperature control dial to the highest heat setting.

STEP 14: Once the heat indicator light has switched off, use the 2200 W Steam Iron on an old piece of fabric to remove any excess water.

Note: Water may be ejected from the steam holes whilst the 2200 W Steam Iron is heating up.

Caution: Never press the 'Self-clean' button when using the 2200 W Steam Iron; only press it when it is safely held over a sink.

Hints and Tips

Always start on a low heat setting and work up to a higher one where it is needed; it takes less time for the 2200 W Steam Iron to heat up than it does to cool down.

Once the 2200 W Steam Iron has heated up, allow it to cycle twice before starting to iron. The initial heat up is the hottest and will need time to stabilise. One cycle is when the heat indicator light has turned on and then off again after the initial heat up.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the 2200 W Steam Iron from the mains power supply and allow it to cool sufficiently.

Drain the remaining water from the water tank to prevent it leaking during cleaning.

Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Storage

Before storing the 2200 W Steam Iron, ensure that it has cooled and dried thoroughly.

Check that the water tank is empty.

Wrap the cord loosely around the 2200 W Steam Iron; never wrap it tightly as this could cause damage.

Store in a cool, dry place.

Specification

Product Code: BEL0445

Rated Voltage: 220–240 V

Rated Frequency: 50 Hz

Output Power: 2200 W

Water Tank Capacity: 200 ml

Troubleshooting

Warning: To reduce the risk of fire, electric shock or injury, unplug the iron from the mains power supply before trouble shooting.

Problem	Possible Cause	Possible Solution
Reduced constant steam or no constant steam.	The steam holes are blocked. The steam control is set to the 'Off' position.	Clear the steam holes of any blockages. Select a steam setting using the steam control.
The fabric shows signs of melting.	The temperature selected is too high.	Reduce the temperature using the temperature control dial.
The 2200 W Steam Iron will not turn on.	The internal fuse has blown. The 2200 W Steam Iron is not connected to the mains power supply. The fuse in the mains plug has blown.	Contact customer services for further advice. Plug in and switch on the 2200 W Steam Iron at the mains power supply. Replace the fuse in the plug with one of the same rating.
Water does not spray out of the spray nozzle.	There is no water in the water tank. The 2200 W Steam Iron is being used for the first time.	Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'. Press the spray button several times until water is released from the spray nozzle.
The 2200 W Steam Iron is not removing the creases from the fabric.	The temperature is set too low. The steam control is set to the 'Off' position.	Increase the temperature using the temperature control dial, ensuring that the fabric's care instructions are followed. Select a steam setting using the steam control.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{\perp}{=}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{\perp}{=}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{\perp}{=}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

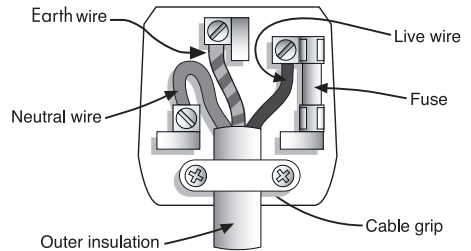

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD051214MD191214/V2