

Beldray[®]

Est 1872

Nobody Does It Better

18.5 V Lithium Vacuum Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.
Do not use this appliance outdoors.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.
The supply terminals are not to be short-circuited.
Exhausted batteries should be removed from the appliance to avoid leakage. In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.
If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
Keep batteries out of reach of children.
Avoid storing in direct sunlight.
Do not dispose of the battery unit in a fire.
Do not crush, puncture, dismantle or otherwise damage the battery.
Do not store above 60 °C.
Do not expose batteries to heat or fire as they may explode.
Do not subject the battery (batteries) to mechanical shock.
Do not dispose of the exhausted battery in your household waste.
To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.
This appliance is fitted with a 18.5 V 2200 mAh li-ion battery.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

18.5 V Lithium Vacuum Cleaner

Battery charger station

Mains power adaptor

Electric floor brush

Crevice tool

Brush tool

Instruction manual

Features

18.5 V rechargeable lithium battery

Multifunctional – handheld and upright

Foldable handle

500 ml dust container

25–45 minutes operating time

Electric floor brush

Description of Parts



Instructions for Use

Assembling the 18.5 V Lithium Vacuum Cleaner

STEP 1: Ensure that the 18.5 V Lithium Vacuum Cleaner is unplugged from the main power supply.

STEP 2: Fit the handheld vac unit by inserting the suction nozzle end into the main body handheld cradle and then push the handheld vac handle in towards the 18.5 V Lithium Vacuum Cleaner main body until it locks into position.

STEP 3: Insert the upright vac suction nozzle at the bottom of the 18.5 V Lithium Vacuum Cleaner main body into the electric floor brush, ensuring that the locking tab and pins are aligned, then push together until it locks into position.

Assembling the Battery Charger Station

STEP 1: Position the battery charger station where it will be within reach of a mains power supply.

STEP 2: Store the attachments on the accessory holder and slide the 18.5 V Lithium Vacuum Cleaner onto the battery charger station, ensuring that it engages with the battery charger socket.

STEP 3: Connect the lead from the mains power adaptor to the back of the battery charger station.

Charging the 18.5 V Lithium Vacuum Cleaner

Before first use, the 18.5 V Lithium Vacuum Cleaner must be charged for approximately 8–12 hours. Subsequent charging times will vary dependant upon use. If the 18.5 V Lithium Vacuum Cleaner runs down completely during use, it may take up to 4–5 hours to fully recharge the battery.

The 18.5 V Lithium Vacuum Cleaner can be charged using two methods:

Using the Battery Charger Station

STEP 1: Slide the 18.5 V Lithium Vacuum Cleaner onto the battery charger station.

STEP 2: Connect the mains power adaptor to the back of the battery charger station.

STEP 3: Plug the mains power adaptor into the mains power supply; the indicator light will illuminate red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate green.

Using the Handheld Vac Unit

STEP 1: Remove the handheld vac unit from the 18.5 V Lithium Vacuum Cleaner main body by pressing the handheld vac release button.

STEP 2: Connect the mains power adaptor to the top of the handheld vac unit.

STEP 3: Plug the mains power adaptor into the mains power supply; the indicator light will illuminate red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate green.

Using the 18.5 V Lithium Vacuum Cleaner

As an Upright Vac

STEP 1: Ensure that the 18.5 V Lithium Vacuum Cleaner is unplugged from the mains power supply and then detach it from the battery charger station.

STEP 2: Install the electric floor brush following the instructions in the section entitled 'Assembling the 18.5 V Lithium Vacuum Cleaner'.

STEP 3: To turn on the 18.5 V Lithium Vacuum Cleaner, press the 'On/Off' power button for approximately 1–2 seconds. The charging indicator will illuminate green to indicate that the 18.5 V Lithium Vacuum Cleaner has powered on.

STEP 4: If a higher speed is required, press the 'On/Off' power button a second time. The charging/indicator light will illuminate orange to indicate the increased speed.

STEP 5: Turn off the 18.5 V Lithium Vacuum Cleaner by pressing the 'On/Off' power button once more.

As a Handheld Vac

STEP 1: Ensure that the 18.5 V Lithium Vacuum Cleaner is unplugged from the mains power supply and then detach it from the battery charger station if necessary.

STEP 2: Press and hold the handheld vac release button and then using the handheld vac handle, carefully pull the handheld vac unit away from the 18.5 V Lithium Vacuum Cleaner main body.

STEP 3: Install the required attachment by inserting it into the handheld vac suction nozzle. The brush tool is great for use on upholstery, whilst the crevice tool is ideal for those awkward to clean areas.

STEP 4: To turn on the 18.5 V Lithium Vacuum Cleaner, press the 'On/Off' power button for approximately 1–2 seconds. The charging indicator will illuminate green to indicate that the 18.5 V Lithium Vacuum Cleaner has powered on.

STEP 5: If a higher speed is required, press the 'On/Off' power button. The charging/indicator light will illuminate orange to indicate the increased speed.

STEP 6: Turn off the 18.5 V Lithium Vacuum Cleaner by pressing the 'On/Off' power button once more.

Emptying the Dust Container

STEP 1: Turn off the 18.5 V Lithium Vacuum Cleaner and unplug it from the mains power supply.

STEP 2: Press and hold the handheld vac release button and then using the handheld vac handle, carefully pull the handheld vac unit away from the 18.5 V Lithium Vacuum Cleaner main body.

STEP 3: If the 18.5 V Lithium Vacuum Cleaner has been used as a handheld unit, remove the attachment by carefully pulling it out of the suction nozzle.

STEP 4: Hold the handheld vac unit with the dust container facing downwards. Press the dust container release button and carefully remove the dust container from the handheld vac unit.

STEP 5: Carefully remove the filter from the dust container and empty it, disposing of any dust. If there is any dust or other residue remaining on the filter surface, clean it according to the instructions provided (see the section entitled 'Cleaning the Dust Container Filter').

STEP 6: Empty the dust container over a bin slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 7: Reinsert the filter into the dust container and then refit the dust container to the handheld unit, ensuring that the locking tab and button are aligned with the corresponding slots.

Cleaning the Dust Container Filter

To clean the filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the filter under cold water. Allow it to dry thoroughly.

Do not dry the filter using any source of direct heat, such as radiators. Allow it to dry naturally.

Do not use any detergents or harsh cleaning agents to clean the filter.

Refit the filter and dust container as described in the section entitled 'Emptying the Dust Container'.

It is recommended that the filter be cleaned at least once a month with clean water to keep the 18.5 V Lithium Vacuum Cleaner performing at its best.

Cleaning the Airflow Chamber

Remove the filter following the instructions in the section entitled 'Emptying the Dust Container'.

To detach the airflow chamber, twist it in an anticlockwise direction and pull it away from the filter.

Rinse away any residue by running the airflow chamber under cold water. Allow it to dry thoroughly.

Refit the airflow chamber by positioning it over the filter and then twisting it in a clockwise direction until it locks into position.

Do's and Don'ts

DO check that the filter is kept clear of obstruction.

DO make sure that the dust container and filter are cleaned regularly to preserve the suction and to prolong the life of the 18.5 V Lithium Vacuum Cleaner.

DO clean the dust container and HEPA filter at least once a month.

DON'T use the 18.5 V Lithium Vacuum Cleaner without the filter or dust container in position.

DON'T use the 18.5 V Lithium Vacuum Cleaner to pick up liquid.

DON'T empty the dust container indoors.

Cleaning and Maintenance

Always unplug the 18.5 V Lithium Vacuum Cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the 18.5 V Lithium Vacuum Cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the 18.5 V Lithium Vacuum Cleaner.

Ensure that the filter is kept clean and is replaced when it becomes worn.

Storage

Ensure that the 18.5 V Lithium Vacuum Cleaner is cool, clean and dry.

The 18.5 V Lithium Vacuum Cleaner can be stored with ease by using the foldable handle; simply press the foldable handle release button and carefully push the foldable handle down towards the back of the 18.5 V Lithium Vacuum Cleaner main unit.

Loosely wrap the mains power adaptor around the cord storage.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The 18.5 V Lithium Vacuum Cleaner will not charge.	The mains power adaptor lead is not securely connected.	Plug the mains power adaptor into the mains power supply, ensuring that it is switched on and then follow the instructions in the section entitled 'Charging the 18.5 V Lithium Vacuum Cleaner'.
The suction is poor.	The suction nozzle is blocked.	Disconnect the attachment from the suction nozzle and remove the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The filter is blocked.	Clean the filter following the instructions in the section entitled 'Cleaning the Dust Container Filter'.

Battery Removal and Disposal

The 18.5 V Lithium Vacuum Cleaner is fitted with a 18.5 V 2200 mAh li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the 18.5 V Lithium Vacuum Cleaner, unfasten the screws and dismantle the product to gain access to the battery. This will require a crosshead screwdriver (not included).

Withdraw the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to your local recycling station. Contact your local government offices for further details.

Specification

Product code: BEL0455

Battery: 18.5 V 2200 mAh li-ion (included)

24 V DC charger (included)

Dust tank capacity: 500 ml

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD150115/MD000000/V1