

Compact Vac Lite Instruction Manual





Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.



Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Compact Vac Lite

Suction hose

Telescopic extension tube

Accessory attachment nozzle

Floor brush

Brush/crevice tool

Instruction manual

Features

1000 W high efficiency motor – more powerful than normal vacuum motors

Cyclonic vacuum technology

Washable HFPA filter

2 litre bagless dust container

4 m power cord

Includes brush/crevice tool

Description of Parts



- I. Compact Vac Lite unit
- 2. Handle
- 3. Telescopic extension tube
- 4. Telescopic extension tube button
- 5. Accessory attachment nozzle
- 6. Suction hose
- 7. Suction hose lock
- 8. Suction hose neck

- 9. Air valve
- 10. Power button
- 11. Cord rewind button
- 12. Air inlet
- 13. Dust container
- 14. Dust container release catch
- 15. Dust container empty lever
- 16. Exhaust filter (inside housing)

- 17. Exhaust filter housing
- 18. HEPA filter
- 19. HEPA filter housing
- 20. Floor brush
- 21. Brush/crevice tool
- 22. Storage clip
- 23. Push-fit clip
- 24 Location hole (behind the dust container on the Compact Vac Lite unit)



Instructions for Use

Before First Use





Remove the transit packaging from underneath the Compact Vac Lite unit. Before using the Compact Vac Lite for the first time, clean it with a soft, damp cloth and dry thoroughly.


Do not immerse the Compact Vac Lite in water or any other liquid.

Assembling the Compact Vac Lite


STEP I: Fit the dust container by pushing it onto the Compact Vac Lite unit, ensuring that the latch is aligned with the location hole on the unit.

STEP 2: To fit the suction hose, insert the suction hose lock into the air inlet and twist it 90 ° in a clockwise direction until it locks into position.


STEP 3: Attach the suction hose neck by pushing it over the end of the suction hose, then lock it into position with the push-fit clip.

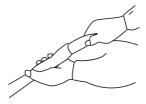

STEP 4: To use the telescopic extension tube, fit it to the suction hose neck by pushing the large opening of the telescopic extension tube over the end of the suction hose neck.

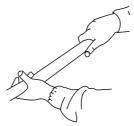

STEP 5: Add the floor brush to the other end of the telescopic extension tube

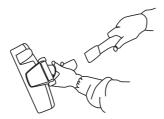

Warning: Do not use this appliance without the dust container and filter in position.

Warning: Ensure that the dust filter is regularly cleaned to preserve the suction of the appliance.

Using the Telescopic Tube

The telescopic extension tube is ideal for those hard to reach areas.

To extend the telescopic extension tube, push the telescopic extension tube button, pull the telescopic extension tube out to the desired length and release the telescopic extension tube button. The telescopic tube will lock into position at the selected length.

Retract the telescopic extension tube by pushing the telescopic extension tube button and push the telescopic extension tube back in.

Using the Floor Brush

STEP I: Push the floor brush attachment onto the end of the telescopic extension tube.

STEP 2: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding out the tube.

STEP 3: Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

STEP 4: Carefully pull out the power supply cable until it is at a suitable length, ensuring that it does not exceed the red mark and then plug it into the mains power supply.

STEP 5: Turn on the Compact Vac Lite by pressing the power button.







Using the Brush/Crevice Tool

STEP I: Fit the accessory attachment nozzle onto the air inlet, followed by the telescopic extension tube, if using.

STEP 2: Push the brush/crevice tool onto the end of the telescopic extension tube or onto the end of the accessory attachment nozzle if the telescopic extension tube is not being used.

STEP 3: Select which attachment is to be used by rotating the head to either the crevice or the brush setting.

STEP 4: Turn on the Compact Vac Lite by pressing the power button.

Note: The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, comers, recesses or other places that are hard to reach. The small brush is good for cleaning curtains, shelves, books and other delicate objects.

After Use

STEP I: Turn off the Compact Vac Lite by pressing the power button.


STEP 2: Switch off and unplug the Compact Vac Lite from the mains power supply.

STEP 3: Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum.

Warning: Hold onto the plug to guide the power supply cord back into the Compact Vac Lite to prevent injury from the plug.

Emptying the Dust Container


STEP I: Remove the dust tank by lifting the dust container release catch and pulling the dust tank away from Compact Vac Lite unit.

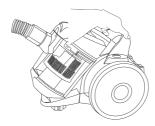

STEP 2: To empty the dust container, position it over a bin and then release the dust container hatch by pressing the dust container empty lever. Shake the Compact Vac Lite dust container gently to remove any remaining dust.



STEP 3: Close the dust container by simply pushing the dust container release catch closed until it locks back into position.

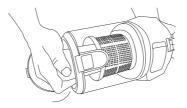

STEP 4: Replace the dust container by pushing it into the Compact Vac Lite unit, ensuring that the latch is aligned with the location hole.

Thermal Cut-Out Device

The Compact Vac Lite is fitted with a thermal cut-out device, which will activate if the motor overheats due to blocked air inlets. If the appliance cuts out, allow it to cool for I hour, then empty the dust container and clean all of the filters.

Care and Maintenance

Wipe the external surface of the Compact Vac Lite with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the Compact Vac Lite.

Ensure that the HEPA filter is kept clean and is cleaned after every removal of the dust container. To clean the inside of the dust container it is possible to remove the HEPA filter.

Cleaning the HEPA Filter

STEP I: The HEPA filter can only be accessed when the dust container is open. Remove the dust tank by pressing the dust tank release switch and pulling it away from the Quick Vac Lite. Remove the lid from the dust container by rotating it anticlockwise and lifting it off.

STEP 2: Pull the filter housing away from the dust tank by using the handle. When the filter housing has been removed from the dust container, the HEPA filter can be taken out of the filter housing.

STEP 3: Shake off the HEPA filter until the majority of the dust has been removed, then wash it under clean, warm water and allow it to dry thoroughly.

STEP 4: Once the HEPA filter has dried fully, slot it back into the filter housing and replace the filter housing into the dust container.

Note: Do not clean the HEPA filter using detergent.

Note: Do not use external heat sources, such as a radiator to dry the HEPA filter.





Cleaning the Exhaust Filter

STEP I: To remove the exhaust filter for cleaning, press down the clip on the top of the exhaust filter housing and lift the cover away.

STEP 2: Remove the exhaust filter from the exhaust filter housing.

STEP 3: Shake off the exhaust filter until the majority of the dust has been removed.

STEP 4: Wash the exhaust filter housing under clean, warm water and allow it to dry thoroughly.

STEP 5: Once the exhaust filter has dried fully, slot it back into the exhaust filter housing and replace the exhaust filter housing cover.

Note: Do not clean the exhaust filter using detergent.

Note: Do not use external heat sources, such as a radiator to dry the exhaust filter.

Do's and Don'ts

Do ensure that the dust container, HEPA filter and exhaust filter are kept clean and regularly maintained to prolong the life of the Compact Vac Lite.

Do not use the Compact Vac Lite without the dust container and filters in position.

Do not use the Compact Vac Lite to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use the Compact Vac Lite to pick up water or any other liquid, as this poses risk of an electric shock.

Do not use excessive force when using the floor brush.

Storage

Before storing the Compact Vac Lite, ensure that it is clean and all of the parts are dried fully. Remove the floor brush and position it in the storage clip for easy storage. Store in a clean, dry place.

Specifications

Rated Voltage: 220–240 V~ 50 Hz

Rated Wattage: 1000 W

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The tube or nozzle is blocked.	Disconnect the accessory and remove the blockage.
	The dust container is almost full.	Empty the dust container.
	The HEPA filter is blocked.	Clean the HEPA filter.
	The primary filtration device is blocked.	Remove the filtration device and clean.
The Compact Vac Lite has cut-out or stopped working.	The thermal cut-out device has activated due to restricted air flow.	Unplug the Compact Vac Lite from the mains power supply and allow it to cool for I hour. Empty the dust container and clean the filter.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important


As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

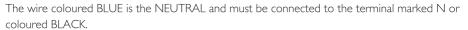

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal $(\stackrel{\bot}{=})$.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

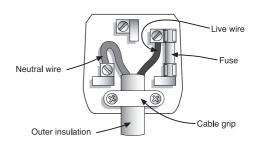



UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of I year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by: UP Global Sourcing, Victoria Street, Manchester, OL9 0DD. +44 (0)333 577 9820 customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.

Made in China.

CD030315/MD050515/V3