

Beldray[®]

Est 1872

Nobody Does It Better

Window Cleaning Vacuum

Instruction Manual



Please read all of the instructions carefully before use and retain for future reference.



This product is not designed to pick up spills.

Only use this product in a vertical position, do not use it in a horizontal position.

If the product is used in a horizontal position, water will leak out of the vents. This could cause injury to the user or damage to the product.

Using the product in a horizontal position will void the warranty.



Safety Instructions

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. Only qualified electricians should carry out repairs if the power adaptor, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of reach of children.

Keep the appliance and its power adaptor away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance with hot water or caustic cleaning detergents.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

The use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

Battery Safety

The battery should not be placed near excessive heat sources, such as fire.
The supply terminals are not to be short-circuited.

Once the battery is exhausted, it should be removed from the appliance to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery out of reach of children.

Avoid storing the battery in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose the battery to heat or fire as it may explode.

Do not subject the battery to mechanical shock.

Do not dispose of the exhausted battery in household waste.

To dispose of the exhausted battery, take it to a local recycling station.

Contact the local government offices for further details.

This appliance is fitted with a 3.7 V 1700 mAh Li-ion secondary (rechargeable) battery.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Window Cleaning Vacuum main body

Squeegee vacuum head

Removable 200 ml water tank

250 ml spray bottle

Microfibre wipe pad

Pole adaptor fixture (requires a 21 mm diameter pole, not included)

5 V 1 A DC power adaptor

Instruction manual

Features

Lightweight and compact

Removable 200 ml water tank


25–30 minutes continuous use

3.7 V rechargeable battery

Spray bottle and microfibre wipe pad included

Pole adaptor fixture

Description of Parts

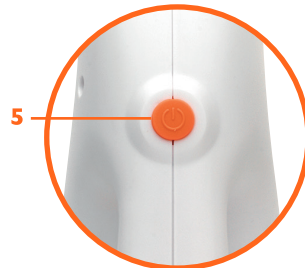

1. Window Cleaning Vacuum main body
2. Squeegee vacuum head
3. 250 ml spray bottle
4. Microfibre wipe pad
5. On/Off button
6. 200 ml removable water tank
7. Water tank release button

8. Water tank plug
9. Charging port
10. Handle
11. 200 ml Max. fill level
12. Squeegee vacuum head locking tab
13. Pole adaptor fixture
14. Pole adaptor clip

Instructions for Use

Before Using the Window Cleaning Vacuum

Before using the Window Cleaning Vacuum for the first time, wipe the main body and squeegee vacuum head with a soft, damp cloth and dry thoroughly.

Do not immerse the Window Cleaning Vacuum in water or any other liquid.

Ensure that the squeegee vacuum head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

Assembling the Window Cleaning Vacuum

STEP 1: Attach the squeegee vacuum head by inserting it onto the top of the Window Cleaning Vacuum main body, until it locks into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

STEP 2: The pole adaptor fixture should have a pole adaptor clip; check that this is in position before use by gently pressing it down until it is secure.

STEP 3: To use the pole adaptor fixture, position it onto the base of the Window Cleaning Vacuum so that the locking tabs are aligned with the corresponding slots and then twist in a clockwise direction to secure it.

STEP 4: When the pole adaptor fixture is no longer needed, press the pole adaptor release inwards, then pull the pole adaptor fixture away from the base of the Window Cleaning Vacuum whilst rotating it in an anticlockwise direction.

STEP 5: Ensure that the water tank is secure, with the water tank plug firmly in position. Failure to do so will result in water leaking from the main body, which could result in damage to the Window Cleaning Vacuum or injury to the user.

Note: The squeegee vacuum head will only clip onto the Window Cleaning Vacuum main body one way.

The water tank and the main body of the Window Cleaning Vacuum will come assembled but can be dismantled for cleaning following the instructions in the section entitled 'Care and Maintenance'.

Warning: Do not rest the Window Cleaning Vacuum on a flat surface whilst the pole adaptor fixture is attached, as this will be unstable and could cause damage or injury. Always remove the pole adaptor fixture whilst it is not in use.

Charging the Window Cleaning Vacuum

Before first use, the Window Cleaning Vacuum must be charged fully. This will take approximately 3–4 hours.

STEP 1: Connect the lead from the mains power adaptor to the charging port on the Window Cleaning Vacuum.

STEP 2: Plug the mains power adaptor into the mains power supply; the indicator light will flash to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate fully.

Note: Whilst charging, the Window Cleaning Vacuum may become warm.

Caution: Exercise caution when charging the Window Cleaning Vacuum; ensure that it is stood upright on a dry, stable surface away from other appliances.

Warning: Do not leave the Window Cleaning Vacuum unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the Window Cleaning Vacuum from the mains power supply immediately.

Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

Using the Window Cleaning Vacuum

STEP 1: Switch off and unplug the Window Cleaning Vacuum from the mains power supply and then disconnect the mains power adaptor from the Window Cleaning Vacuum main body.

STEP 2: Dilute some window cleaning concentrate following the manufacturer's instructions, then apply to the window and loosen the dirt using the spray bottle and microfibre wipe pad.

STEP 3: To turn on the Window Cleaning Vacuum, press the 'On/Off' button.

STEP 4: Place the squeegee vacuum head against the window surface in a vertical position.

STEP 5: Clean the window from the top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears, and leave the window with a streak-free finish.

STEP 6: The Window Cleaning Vacuum can now be used to remove any excess water which remains on the window surface. Whilst switched on, hold the Window Cleaning Vacuum vertically where the excess water has collected and allow it to suck up the liquid.

STEP 7: Turn off the Window Cleaning Vacuum by pressing the 'On/Off' button.

Note: Ensure that the water tank plug is securely fitted to avoid leakage from the water tank.

Warning: Do not use the Window Cleaning Vacuum to pick up anything other than water or diluted window cleaning concentrate. It is recommended to use conventional window cleaning concentrate as opposed to spirit or foam detergents as these can damage the Window Cleaning Vac and could result in injury. Window cleaning concentrate is available at most leading retailers.

Emptying the Water Tank

STEP 1: Ensure that the Window Cleaning Vacuum is switched off and unplugged from the mains power supply.

STEP 2: Remove the water tank by pressing the water tank release button and then pulling it out and away from the Window Cleaning Vacuum main body.

STEP 3: Detach the water tank plug from the front of the water tank and tilt to drain away the water.

STEP 4: Reattach the water tank plug and then reinsert the water tank into the Window Cleaning Vacuum main body, until it clicks into position. Always ensure that the water tank plug is secured back into position after emptying the water tank.

Note: The water tank should be emptied after each use.

Warning: Do not allow the water tank to fill beyond the 200 ml Max. fill level as this could cause water to leak from the unit.

Care and Maintenance

Always turn off the Window Cleaning Vacuum and ensure that it is unplugged from the mains power supply before attempting any cleaning or maintenance.

STEP 1: Clean the microfibre wipe pad in warm, soapy water, rinse and dry thoroughly.

STEP 2: Remove the water tank following the instructions in the section entitled 'Emptying the Water Tank'.

STEP 3: Detach the squeegee vacuum head by pressing the squeegee vacuum head locking tab and pulling it upwards and away from the Window Cleaning Vacuum main body.

STEP 4: Wipe the Window Cleaning Vacuum main body, squeegee vacuum head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

Note: The Window Cleaning Vacuum should be cleaned after each use.

Storage

Before storing, ensure that the water tank has been emptied and that the Window Cleaning Vacuum is cool, clean and dry.

Store in a cool, dry place.

Note: If the battery is exhausted, it is recommended to charge the Window Cleaning Vacuum slightly before storage. This will help to prolong the life of the battery. The Window Cleaning Vacuum may need to be recharged after storage, before the next use.

Battery Removal and Disposal

The Window Cleaning Vacuum is fitted with a 3.7 V 1700 mAh Li-ion secondary (rechargeable) battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Window Cleaning Vacuum, unfasten the screws and dismantle the product to gain access to the battery. This will require a TX10 Torx screwdriver (not included).

Remove the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

Specifications

Product code: BEL0467

Battery: 3.7 V 1700 mAh Li-ion battery (included)

5 V 1 A DC charger (included)

Tank volume: 200 ml

Spray bottle volume: 250 ml

Troubleshooting

Symptom	Possible Cause	Solution
The Window Cleaning Vacuum will not turn on.	The Window Cleaning Vacuum has run out of charge.	Charge the Window Cleaning Vacuum following the instructions in the section entitled 'Charging the Window Cleaning Vacuum'.
Water is leaking from the air vents.	<p>The water tank has exceeded the 200ml Max. limit.</p> <p>Spirit or foam detergent has been used to clean the surface.</p>	<p>Empty the water tank following the instruction in the section entitled 'Emptying the Water Tank'.</p> <p>Use conventional window cleaning concentrate as opposed to spirit or foam detergents.</p>
The Window Cleaning Vacuum is leaving streaks on the surface.	<p>The rubber squeegee head is dirty.</p> <p>There is too much window cleaning concentrate on the surface.</p>	<p>Clean the rubber squeegee head with a soft damp cloth and leave to dry naturally.</p> <p>Adjust the dilution of window cleaning concentrate.</p>

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Disposal	
 CARD PACKAGING widely recycled	 PLASTIC PACKING not currently recycled

Manufactured by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD, UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference
Made in China.
CD010514/MD190916/V5