

Beldray[®]

Est 1872

Nobody Does It Better



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance out of the reach of children when it is in use or when it is cooling down.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions. Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding. Exercise caution when using the appliance.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

10 in 1 Handheld Steam Cleaner

Safety cap

General nozzle

Flexible hose

Mini mop head

Angled nozzle

3 plastic round brushes

Window/mirror cleaner

Mini mop head cloth

Measuring jug

Funnel

Instruction manual

Features


1000 W steam power

250 ml water tank

4 m power cord

Chemical-free cleaning

Description of Parts

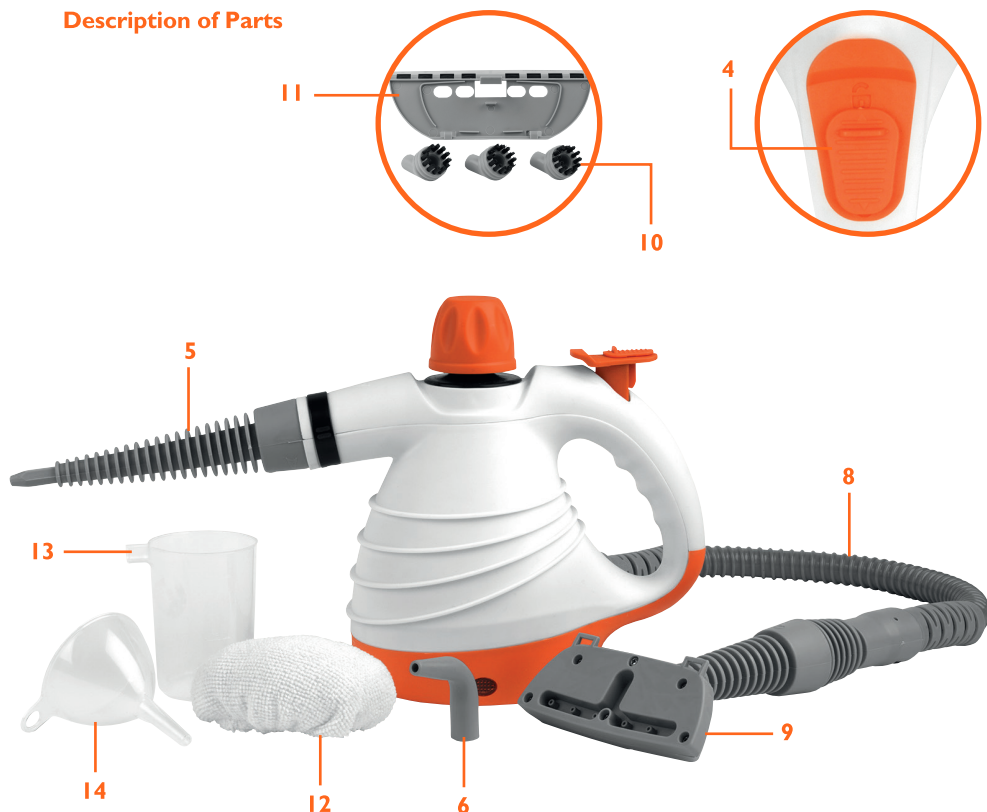

1. 10 in 1 Handheld Steam Cleaner
2. Power indicator light
3. Safety cap
4. Safety lock
5. General nozzle
6. Angled nozzle
7. Steam button
8. Flexible hose
9. Mini mop head
10. 3 round brushes
11. Window/mirror cleaner
12. Mini mop head cloth
13. Measuring jug
14. Funnel



Instructions for Use

Before First Use

Before using the IO in I Handheld Steam Cleaner for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the IO in I Handheld Steam Cleaner with a soft, damp cloth and dry thoroughly.

Assembling the IO in I Handheld Steam Cleaner

Accessories can be installed directly onto the IO in I Handheld Steam Cleaner or can be installed onto the end of the general nozzle or flexible hose when more reach is required.

Installing the General Nozzle

STEP 1: Hold the IO in I Handheld Steam Cleaner steady, then align the 'I' mark on the general nozzle with the 'I' mark on the IO in I Handheld Steam Cleaner. If the general nozzle is to be used with the flexible hose, align the guide keys on the general nozzle with the key slots on the end of the flexible hose.

STEP 2: Push the general nozzle firmly onto the IO in I Handheld Steam Cleaner and then twist it 90 ° in a clockwise direction to secure it into position; the 'I' mark on the general nozzle should be aligned with the 'II' mark on the IO in I Handheld Steam Cleaner.

STEP 3: To remove the general nozzle, twist it 90 ° in an anticlockwise direction so that the 'I' mark on the flexible hose aligns with the 'I' mark on the IO in I Handheld Steam Cleaner and pull it away.

Installing the Flexible Hose

STEP 1: Hold the IO in I Handheld Steam Cleaner steady, then align the 'I' mark on the flexible hose with the 'I' mark on the IO in I Handheld Steam Cleaner.

STEP 2: Push the flexible hose firmly onto the IO in I Handheld Steam Cleaner and then twist it 90° in a clockwise direction to secure it into position; the 'I' mark on the flexible hose should be aligned with the 'II' mark on the IO in I Handheld Steam Cleaner.

STEP 3: To remove the flexible hose, twist it 90 ° in an anticlockwise direction so that the 'I' mark on the flexible hose aligns with the 'I' mark on the IO in I Handheld Steam Cleaner and pull it away.

Installing the Round Brushes or Angled Nozzle

STEP 1: Install the general nozzle (as instructed in the section entitled 'Installing the General Nozzle').

STEP 2: Push the accessory firmly into place.

Installing the Mini Mop Head

STEP 1: Hold the 10 in 1 Handheld Steam Cleaner steady, then align the 'I' mark on the mini mop head with the 'I' mark on the 10 in 1 Handheld Steam Cleaner. If the mini mop head is to be used with the flexible hose, align the guide keys on the mini mop head with the key slots on the end.

STEP 2: Push the mini mop head firmly onto the 10 in 1 Handheld Steam Cleaner and then twist it 90 ° in a clockwise direction to secure it into position; the 'I' mark on the mini mop head should be aligned with the 'I' mark on the 10 in 1 Handheld Steam Cleaner.

STEP 3: To remove the mini mop head, twist it 90 ° in an anticlockwise direction so that the 'I' mark on the mini mop head aligns with the 'I' mark on the 10 in 1 Handheld Steam Cleaner and pull it away.

Installing the Mini Mop Head Cloth

STEP 1: Pull the mini mop head cloth over the mini mop head, allowing the elasticated edges to hold it in position.

STEP 2: To remove the mini mop head cloth, pull it off and away from the mini mop head. Caution: Allow the 10 in 1 Handheld Steam Cleaner and mini mop head to cool thoroughly before attempting to install or remove the mini mop head cloth.

Installing the Window/Mirror Cleaner

STEP 1: Install the mini mop head (as instructed in the section entitled 'Installing the Mini Mop Head').

STEP 2: Hook the two, small hooks on the window/mirror cleaner to the suspension slots on the mini mop head and then push the window/mirror cleaner into position.

STEP 3: To remove the window/mirror cleaner, push the tab holding its position forwards and pull; this will release the window/mirror cleaner from the held position. Unfasten the hooks from the suspension slots to separate the two parts.

Caution: Never use the 10 in 1 Handheld Steam Cleaner on frosted or cold glass, as this may damage or crack the glass.

Filling the Water Tank

STEP 1: Place the 10 in 1 Handheld Steam Cleaner on a flat, stable surface.

STEP 2: Remove the safety cap by simultaneously pushing it down and twisting it in an anticlockwise direction.

STEP 3: Fill up the measuring jug to the 175 ml mark.

STEP 4: Position the funnel inside the opening of the 10 in 1 Handheld Steam Cleaner and then pour the contents of the measuring jug into the funnel.

STEP 5: Replace the safety cap by twisting it in a clockwise direction, until secure.

Note: Ensure that the water tank is not overfilled.

Warning: Never place descaling, aromatic, alcoholic or detergent products into the 10 in 1 Handheld Steam Cleaner tank, as this will cause damage to the 10 in 1 Handheld Steam Cleaner and void the warranty.

Filling the Water Tank During Use

STEP 1: Switch off and unplug the IO in I Handheld Steam Cleaner from the mains power supply.

STEP 2: Press and hold the steam button and allow the IO in I Handheld Steam Cleaner to run until all of the steam has been used; this will reduce the pressure inside the IO in I Handheld Steam Cleaner.

STEP 3: Carefully and slowly loosen the safety cap by simultaneously pushing it down and twisting it in an anticlockwise direction; do not remove it.

STEP 4: Once the safety cap has been loosened, any remaining steam will slowly be released from the IO in I Handheld Steam Cleaner. Allow it to cool for approximately 5 minutes and then remove the safety cap completely.

STEP 5: Fill the water tank using the measuring jug and funnel, as outlined in the section entitled 'Filling the Water Tank'.

STEP 6: Replace the safety cap by twisting it in a clockwise direction, until secure.

Caution: Ensure that the IO in I Handheld Steam Cleaner has fully cooled before attempting to fill the water tank.

Caution: The safety cap will not open if the IO in I Handheld Steam Cleaner has built up pressure. Allow the IO in I Handheld Steam Cleaner to fully cool and then press the steam button; if no steam is emitted, carefully and slowly loosen the safety cap.

Using the IO in I Handheld Steam Cleaner

STEP 1: Plug in and switch on the IO in I Handheld Steam Cleaner at the mains power supply. The IO in I Handheld Steam Cleaner will automatically power on and the power indicator light will illuminate.

STEP 2: The IO in I Handheld Steam Cleaner will take approximately 4 minutes to heat up; after this time the power indicator light will switch off, indicating that the IO in I Handheld Steam Cleaner is ready to use.

STEP 3: To operate the steam function, slide the safety lock forwards so that it is in the 'unlocked' position and then press and hold the steam button.

STEP 4: When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: Ensure that the safety lock has been activated before plugging in and switching on the IO in I Handheld Steam Cleaner at the mains power supply. This will prevent any steam escaping before it is needed.

Note: It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Using the IO in I Handheld Steam Cleaner to Clean Clothes

STEP 1: Install the mini mop head (as instructed in the section entitled 'Installing the Mini Mop Head') and then attach the mini mop head cloth, following the instructions in the section entitled 'Installing the Mini Mop Head Cloth'.

STEP 2: Hang the clothes to be steamed slide the safety lock forwards and then press and hold the steam button. Move the IO in I Handheld Steam Cleaner over the clothes to steam them.

Note: Always follow the care instructions on the garments to be steam cleaned.

Using the 10 in 1 Handheld Steam Cleaner to Clean Doors, Windows, and Glass

STEP 1: Install the window/mirror cleaner (as instructed in the section entitled 'Installing the Window/Mirror Cleaner').

STEP 2: Slide the safety lock forwards and then press and hold the steam button. Move the window/mirror cleaner over the area to be cleaned.

Note: When cleaning windows, it is advised to use the steam button in short bursts.

Caution: Never use the 10 in 1 Handheld Steam Cleaner on frosted or cold glass, as this may damage or crack the glass.

Using the 10 in 1 Handheld Steam Cleaner to Clean Sealed Flooring

STEP 1: Install the flexible hose (as instructed in the section entitled 'Installing the Flexible Hose') and then attach either the round brush or the angled nozzle, following the instructions in the section entitled 'Installing the Round Brushes or Angled Nozzle'.

STEP 2: Slide the safety lock forwards and then press and hold the steam button. Move the 10 in 1 Handheld Steam Cleaner over the affected areas of the sealed flooring to remove dirt and stains.

Note: Only apply light pressure if using the round brush to clean sealed flooring.

Note: Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the 10 in 1 Handheld Steam Cleaner from the mains power supply and allow it to cool sufficiently.

Press and hold the steam button and allow the 10 in 1 Handheld Steam Cleaner to run until all of the steam has been used; this will reduce the pressure inside the 10 in 1 Handheld Steam Cleaner. Carefully and slowly loosen the safety cap by simultaneously pushing it down and twisting it in an anticlockwise direction; do not remove it.

Once the safety cap has been loosened, any remaining steam will slowly be released from the 10 in 1 Handheld Steam Cleaner. Allow it to cool for approximately 5 minutes and then remove the safety cap completely.

Drain any remaining water from the water tank.

Wipe the 10 in 1 Handheld Steam Cleaner with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water; rinse and dry thoroughly.

The 10 in 1 Handheld Steam Cleaner and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mini mop head cloth is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry.

Never use bleach or fabric softener when washing the mini mop head cloth.

Warning: Never immerse the electrical components in water or any other liquid.

Storage

Before storing the IO in I Handheld Steam Cleaner, ensure that it has cooled and dried fully.

Check that the water tank is empty.

Remove the mini mop head cloth, ensuring that it has been cleaned according to the instructions in the 'Care and Maintenance' section.

Store in a cool, dry place.

Function and Accessory Usage

Function	Accessory	Suggested Use
Garment steamer	Mini mop head with mini mop head cloth	Cleaning or steam ironing garments.
Ovens, hobs and BBQs	Round brush	Cleaning ovens, hobs and BBQ equipment.
Upholstery	Mini mop head with mini mop head cloth	Cleaning sofas, curtains or other heavy materials.
Tiles and grouting	General nozzle or round brush	Cleaning tiles and sealed grout.
Taps and sanitaryware	General nozzle, angled nozzle or round brush	Cleaning taps and sanitaryware.
Windows and mirrors	Window/mirror cleaner	Cleaning shower screens, mirrors and glass.
Bathrooms and toilets	General nozzle, angled nozzle or round brush	Cleaning bath tubs, sinks, toilets and other bathroom accessories.
Car alloys and upholstery	Angled nozzle or round brush	Cleaning car upholstery and the outer surface of car alloys.
Surface cleaner	General nozzle, angled nozzle or round brush	Cleaning toys, tables and work surfaces.
Hard to reach areas	General nozzle or angled nozzle and flexible hose	Cleaning awkward, hard to reach areas.

Troubleshooting

Symptom	Possible Cause	Solution
Steam pressure is low.	The water tank has been overfilled.	Do not attempt to open the water tank as steam will escape and could cause injury. Continue to use the 10 in 1 Handheld Steam Cleaner and the pressure will increase.
Steam pressure has reduced.	The water tank is nearly empty.	Refill the water tank (as instructed in the section entitled 'Filling the Water Tank').
Water is being emitted with no steam.	The water tank has been overfilled.	Switch off and unplug the 10 in 1 Handheld Steam Cleaner from the mains power supply and allow it to cool thoroughly. Release the pressure, empty the water tank and then refill it with 250 ml of water.
The steam button does not work.	The safety lock is in the 'locked' position.	Slide the safety lock forwards so that it is in the 'unlocked' position.
The safety cap will not open.	There is still excess pressure inside the 10 in 1 Handheld Steam Cleaner.	Press and hold the steam button and allow the 10 in 1 Handheld Steam Cleaner to run until all of the steam has been used. Carefully and slowly loosen the safety cap; do not remove it. Any remaining steam will slowly be released from the 10 in 1 Handheld Steam Cleaner. Allow it to cool for approximately 5 minutes and then remove the safety cap completely.

Specification

Input: 220–240 V ~ 50 Hz

Output: 1000 W

Water tank capacity: 250 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\perp$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\perp$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

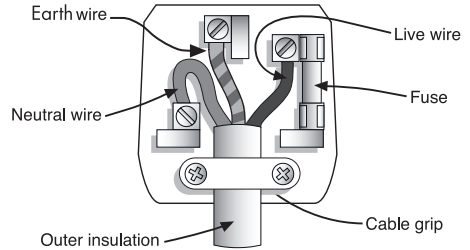

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



