

Beldray[®] Est 1872

Nobody Does It Better

2 in 1 Multifunctional Vacuum Cleaner Instruction Manual



Upright vacuum cleaner



Handheld vacuum cleaner



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free of dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



This appliance is fitted with a thermal cut-out device.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

2 in 1 Multifunctional Vacuum Cleaner

Extension handle tube

Removable floor head

Crevice tool

Instruction manual

Features

600 W power

Easily converts to a handheld unit

 
Washable HEPA filter

700 ml bagless dust container*

5 m power cord

Includes crevice tool

*400 ml working capacity

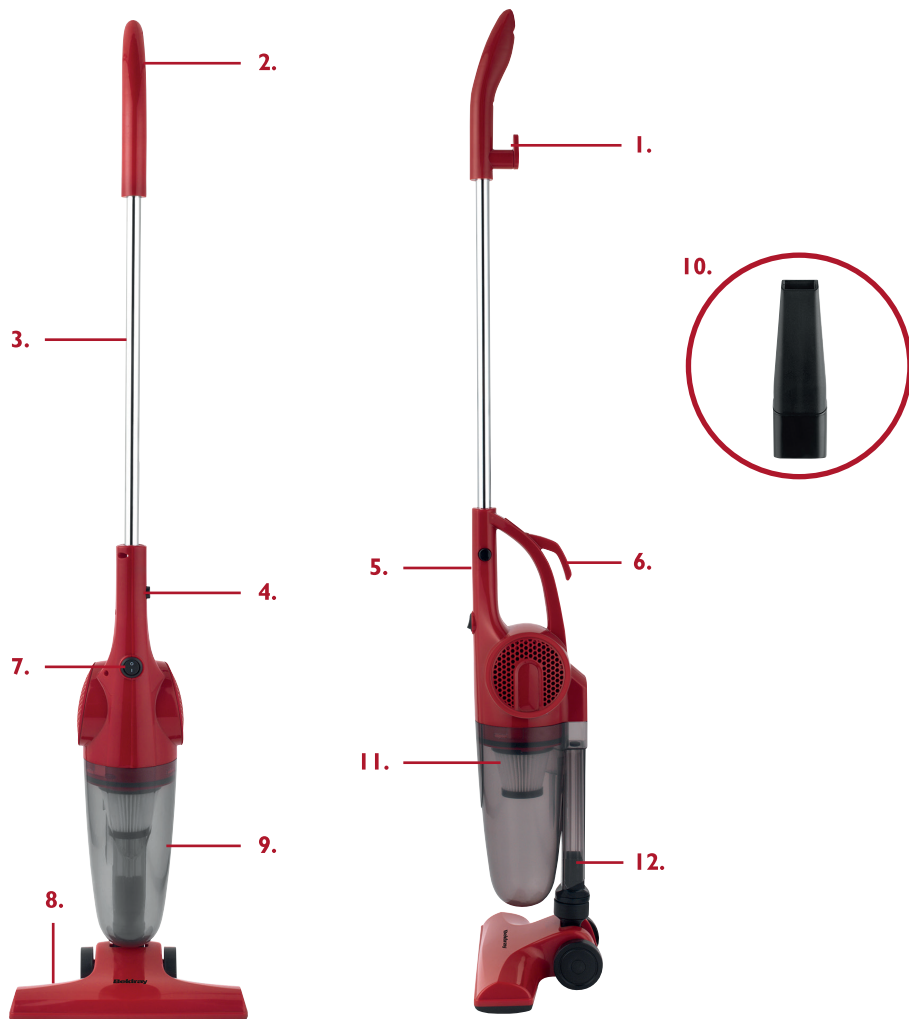


1. Quick-release cord hook
2. Extension tube handle
3. Extension tube
4. Extension tube release button
5. Handheld vac handle
6. Lower cord hook

7. On/Off power switch
8. Removable floor head
9. Bagless dust container
10. Crevice tool
11. HEPA filter
12. Suction nozzle


Instructions for Use

Assembling the 2 in 1 Multifunctional Vacuum Cleaner

 STEP 1: Insert the extension tube into the main body, until it locks into position.

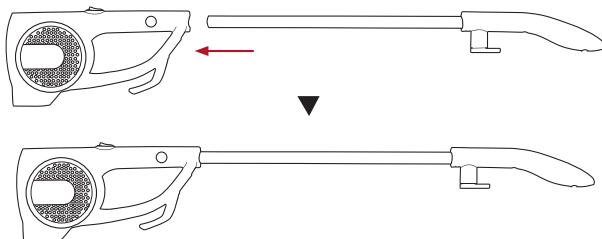

 STEP 2: Attach the floor brush or the crevice tool to the 2 in 1 Multifunctional Vacuum Cleaner by slotting the selected tool into the suction nozzle.

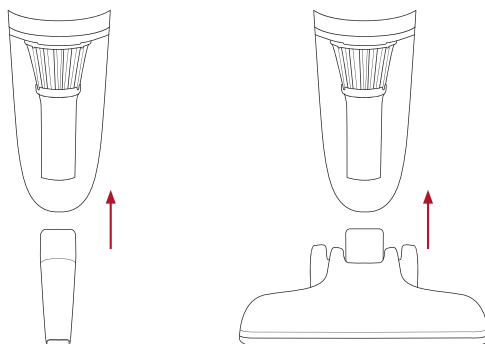

Using the 2 in 1 Multifunctional Vacuum Cleaner

Plug the 2 in 1 Multifunctional Vacuum Cleaner into the mains power supply.

To start the 2 in 1 Multifunctional Vacuum Cleaner, press the 'On/Off' power switch.

Ensure that the correct tool has been installed for the intended use (see 'Step 2' of the section entitled 'Assembling the 2 in 1 Multifunctional Vacuum Cleaner').

The floor brush is ideal for vacuuming carpets, whilst the crevice tool is intended for use on harder surfaces and those which are awkward to clean, such as on radiators, in corners and between sofa cushions.

Note: Do not use the 2 in 1 Multifunctional Vacuum Cleaner without the HEPA filter or dust container in position. Only fill the dust container to the maximum fill mark. Once the maximum fill mark has been reached, empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'. Ensure that the HEPA filter is regularly cleaned to preserve the suction of the 2 in 1 Multifunctional Vacuum Cleaner.

Winding and Unwinding the Power Cord

The 2 in 1 Multifunctional Vacuum Cleaner is equipped with a handy cord storage system. To use it, simply wind the power cord around the quick-release cord hook and the lower cord hook. To unwind the power cord, twist the quick-release cord hook either to the left or the right in order to release the cord from the stored position.

Using the Dust Filters

Once dust enters the dust container, the suction system keeps it moving in a swirling motion, in order to avoid reducing the suction. It is then filtered by the HEPA filter.

Note: Dirty or worn HEPA filters may cause damage to the motor.

 
Caution: The 2 in 1 Multifunctional Vacuum Cleaner should never be used without the HEPA filter in place.

Emptying the Dust Container

STEP 1: Turn the 2 in 1 Multifunctional Vacuum Cleaner off and unplug it from the mains power supply.


STEP 2: Holding the 2 in 1 Multifunctional Vacuum Cleaner by the handheld vac handle, grasp the dust container firmly and twist it in an anticlockwise direction to release it.

STEP 3: Empty the dust container over a bin slowly and carefully to reduce the amount of dust

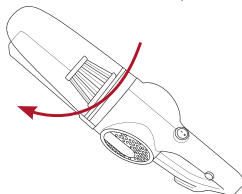

released back into the atmosphere.

 STEP 4: Refit the dust container onto the 2 in 1 Multifunctional Vacuum Cleaner main body,

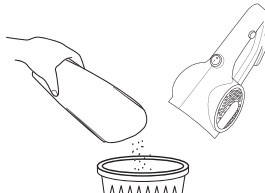

ensuring that the locking tabs are aligned with the corresponding slots. Twist the dust container in a clockwise direction to lock it into position.

Thermal Cut-Out Device

The 2 in 1 Multifunctional Vacuum Cleaner is fitted with a thermal cut-out device, which will activate if the motor overheats due to blocked air inlets. If the 2 in 1 Multifunctional Vacuum Cleaner cuts out, allow it to cool for approximately 1 hour, then empty the dust container and clean all of the filters.

Care and Maintenance

Wipe the external surface of the 2 in 1 Multifunctional Vacuum Cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the 2 in 1 Multifunctional Vacuum Cleaner.

Ensure that the HEPA filter is kept clean and is washed after every removal of the dust container.

Cleaning the Dust Container HEPA Filter

STEP 1: Remove the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Twist the HEPA filter in an anticlockwise direction to unlock it and then remove it from the 2 in 1 Multifunctional Vacuum Cleaner main body.

STEP 3: Hold the HEPA filter over a waste bin, preferably outdoors and gently shake out any dust and dirt.

STEP 4: Once the majority of the dust and dirt have been removed, rinse away any residue by running the HEPA filter under cold water. Allow to dry thoroughly.

STEP 5: Refit the HEPA filter onto the 2 in 1 Multifunctional Vacuum Cleaner main body and then twist it in a clockwise direction to lock it into position.

STEP 6: Replace the dust container as described in the section entitled 'Emptying the Dust Container'.

Note: The HEPA filter can only be accessed once the dust container has been removed.

Note: Do not dry the HEPA filter using any source of direct heat, such as radiators. Allow it to dry naturally.

Note: Do not use any detergents or harsh cleaning agents to clean the HEPA filter.

Note: It is recommended that the HEPA filter be cleaned at least once a month with clean water to keep the 2 in 1 Multifunctional Vacuum Cleaner performing at its best.

Do's and Don'ts

Do ensure that the dust container and HEPA filter are kept clean and regularly maintained to prolong the life of the 2 in 1 Multifunctional Vacuum Cleaner.

Do not use the 2 in 1 Multifunctional Vacuum Cleaner without the dust container and HEPA filter in position.

Do not fill the dust container above the maximum fill mark.

Do not use the 2 in 1 Multifunctional Vacuum Cleaner to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use the 2 in 1 Multifunctional Vacuum Cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Storage

The 2 in 1 Multifunctional Vacuum Cleaner can be lifted and transported easily using the handheld vac handle.

Never pull or lift the 2 in 1 Multifunctional Vacuum Cleaner by its power supply cord.

Ensure that the 2 in 1 Multifunctional Vacuum Cleaner is cool, clean and dry.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	<p>The hose/tube/suction nozzle is blocked.</p> <p>The dust container is almost full.</p> <p>The HEPA filter is blocked.</p>	<p>Disconnect the accessories and remove the blockage.</p> <p>Empty the dust container.</p> <p>Clean the HEPA filter.</p>
The 2 in 1 Multifunctional Vacuum Cleaner has cut-out.	The thermal cut-out device has activated due to restricted airflow.	Unplug the 2 in 1 Multifunctional Vacuum Cleaner from the mains power supply and allow it to cool for approximately 1 hour. Empty the dust container and clean the HEPA filter.

Specification

Product code: BEL0498R

Rated Voltage: 220–240 V AC

Rated Wattage: 600 W

Frequency: 50/60 Hz

Notes

Notes

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

 
Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 If in doubt consult a qualified electrician who will be pleased to do this for you.

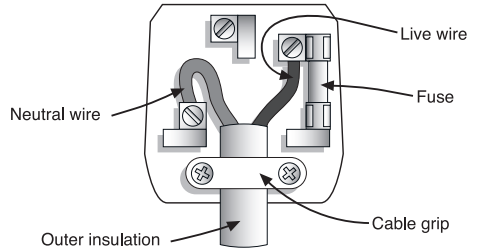

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD060515/MD131015/V4