

Beldray[®]

Est 1872

Nobody Does It Better

 
Cordless Wet and Dry Vac Instruction Manual



Spills



Portable

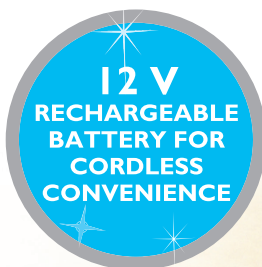

THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of the exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.

This appliance is fitted with a 12 V DC 1800 mAh Ni-Mh battery.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Cordless Wet and Dry Vac

12 V rechargeable battery unit

Washable filter with waterproof cover

Dust container

Mains power adaptor

Wall mountable charging base with accessory holders

Crevice tool

Brush tool

Squeegee nozzle

Features

12 V rechargeable battery

Up to 20 minutes of operation time

Washable filter

Metallic, high-gloss finish

Description of Parts



- | | |
|--|-----------------------------------|
| 1. Cordless Wet and Dry Vac main unit | 6. Crevice tool |
| 2. 12 V rechargeable battery unit | 7. Brush tool |
| 3. Washable filter with waterproof cover | 8. Squeegee nozzle |
| 4. Wall mountable charging base with accessory holders | 9. On/Off switch |
| 5. Dust container | 10. Indicator light |
| | 11. Dust container release button |

Instructions for Use

Installing the Wall Mountable Charging Base with Accessory Holders

The wall mountable charging base with accessory holders can be placed onto a flat, stable surface or fixed to a wall, dependent upon use and should be located close to a mains power supply, so that it is within reach of the mains power adaptor. To install the wall mountable charging base with accessory holders onto a wall:

STEP 1: Using a pencil, mark the positions of two screw holes, 37 mm apart, onto the wall. Ensure that the markings are level.

STEP 2: Drill where the holes have been marked, ensuring that the holes do not exceed 7 mm in diameter and insert suitable wall mount fixings ((not included) or suitable wall fixings depending upon the structure of the wall). If in any doubt, consult a qualified professional.

STEP 3: Insert suitable wall mount screws (not included) into the wall and tighten, ensuring that a 5 mm gap is left between the wall and the head of each screw.

STEP 4: Carefully hook the wall mountable charging base with accessory holders onto the two screws. If the wall mountable charging base with accessory holders feels loose, tighten the screws slightly and then refit the wall mountable charging base with accessory holders.

STEP 5: Store the attachments on the accessory holders and slide the Cordless Wet and Dry Vac onto the wall mountable charging base, ensuring that it engages with the supporting ribs.

Note: Ensure that the mounting wall is suitable for carrying the wall mountable charging base with accessory holders. If unsure, ask a qualified engineer.

Note: The squeegee nozzle cannot be stored on the accessory holders but can instead be fitted to the Cordless Wet and Dry Vac.

Caution: Ensure that there are no electrical, plumbing or gas supplies buried beneath the wall's surface. These services normally run vertically or horizontally behind the wall and the electrical wiring will radiate from the socket, possibly in more than one direction. Testers are available from good DIY stores. If in any doubt, consult a qualified professional.

Charging the Cordless Wet and Dry Vac

Before first use, the Cordless Wet and Dry Vac must be charged for approximately 5–6 hours. Subsequent charging times will vary dependant upon use. If the Cordless Wet and Dry Vac runs down completely during use, it may take up to 5–6 hours to fully recharge the battery.

STEP 1: Clip the Cordless Wet and Dry Vac onto the wall mountable charging base with accessory holders.

STEP 2: Plug in and switch on the mains power adaptor at the mains power supply; the indicator light will flash red, to signal that the Cordless Wet and Dry Vac is correctly docked and then will illuminate red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate green.

Note: Always ensure that the Cordless Wet and Dry Vac is turned off before charging. Whilst charging, the Cordless Wet and Dry Vac may become warm. Always switch off and unplug the mains power adaptor from the mains power supply once the battery is fully charged.

Warning: Never recharge the Cordless Wet and Dry Vac whilst liquid is in the dust container; always empty and dry the dust container after vacuuming liquid.

Using the Cordless Wet and Dry Vac

STEP 1: To use the Cordless Wet and Dry Vac, detach it from the wall mountable charging base with accessory holders.

STEP 2: Flick the 'On/Off' switch forward to turn on the Cordless Wet and Dry Vac.

Note: Do not use the Cordless Wet and Dry Vac without the washable filter or dust container in position. Ensure that the washable filter is regularly cleaned to preserve the suction of the Cordless Wet and Dry Vac.

Note: When using the Cordless Wet and Dry Vac to pick up spillages such as water or tea, ensure that the liquid is emptied as soon as possible. Do not allow liquid to reach past the maximum fill line on the dust container.

Caution: Do not use the Cordless Wet and Dry Vac to pick up flammable liquid.

Caution: Do not mix wet and dry functions; ensure that the dust container is empty of any debris before attempting to clean up liquid and thoroughly dried before dry vacuuming.

Selecting the Correct Attachment

Attachment	Function
Crevice tool	Ideal for vacuuming up fine dust particles or for cleaning narrow openings.
Brush tool	Best for use on upholstery, where dirt is likely to be harder to remove through suction alone.
Squeegee nozzle	Suitable for vacuuming up wet spills. Note: When using the Cordless Wet and Dry Vac to clean up spillages, ensure that the liquid is emptied from the unit as soon as possible after cleaning. Caution: Do not clean up flammable liquid.

Installing the Attachments

All of the attachments can be easily installed onto the Cordless Wet and Dry Vac by firmly inserting them onto the dust container opening.

Mixing Wet and Dry Functions

To preserve the life of the Cordless Wet and Dry Vac and to ensure optimum performance, do not mix wet and dry functions.

Ensure that the dust container has been emptied and is clear of any debris or dust before attempting to vacuum liquid.

 
Do not allow liquid to flow into the opening of the waterproof cover. Never tilt the Cordless Wet and Dry Vac backwards; this will cause water to enter the waterproof cover.

Emptying the Dust Container


The dust container must be emptied regularly to maintain performance.

The dust container should also be emptied if there is a reduction in suction power.


STEP 1: Hold the Cordless Wet and Dry Vac with the dust container facing downwards. Press the dust container release button and carefully remove the dust container from the Cordless Wet and Dry Vac main unit.

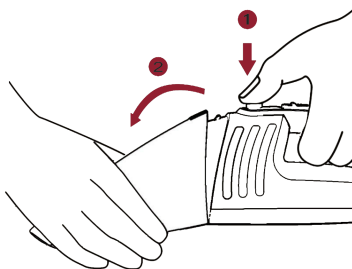

 STEP 2: Remove the washable filter.

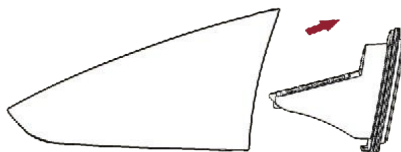


 STEP 3: Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

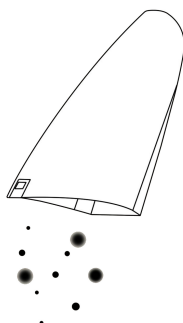

STEP 4: If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly before replacing.

 STEP 5: Refit the washable filter and dust container.

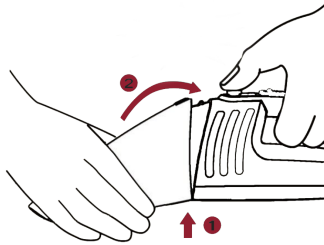

Note: It is recommended that the dust container is emptied outdoors. The washable filter and dust container should be thoroughly cleaned at least once a month. This can be done by rinsing them in cold, detergent-free water.

Cleaning the Dust Container Washable Filter

To clean the washable filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the washable filter under cold water. Allow it to dry thoroughly. Do not dry the washable filter using any source of direct heat, such as radiators. Allow it to dry naturally.

Do not use any detergents or harsh cleaning agents to clean the washable filter. Refit the washable filter and dust container as described in the section entitled 'Emptying the Dust Container'.

It is recommended that the washable filter be cleaned at least once a month with clean water to keep the Cordless Wet and Dry Vac performing at its best.

Replacing the Dust Container Washable Filter

Remove the washable filter.

Unfasten the screws on the waterproof cover.

Carefully remove the old filter cloth and replace it with a new one.

Refit the waterproof cover and secure it into position using the screws.

Replace the washable filter.

Do's and Don'ts

DO check that the washable filter is kept clear of obstruction.

DO make sure that the washable filter is regularly cleaned to preserve the suction of the Cordless Wet and Dry Vac.

DO ensure that any liquid is emptied immediately after picking up spillages.

DO clean the dust container and washable filter at least once a month.

DON'T use the Cordless Wet and Dry Vac without the washable filter or dust container in position.

DON'T use the Cordless Wet and Dry Vac to pick up flammable liquid.

DON'T empty the dust container indoors.

Care and Maintenance

Always unplug the Cordless Wet and Dry Vac from the mains power supply before attempting any cleaning or maintenance.

Wipe the Cordless Wet and Dry Vac main unit with a soft, damp cloth and dry thoroughly.

Do not immerse the Cordless Wet and Dry Vac main unit in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the Cordless Wet and Dry Vac.

Ensure that the washable filter is kept clean and is replaced when it becomes worn.

Storage

Ensure that the Cordless Wet and Dry Vac is cool, clean and dry.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The Cordless Wet and Dry Vac will not charge.	The mains power adaptor is not connected.	Ensure that the mains power adaptor is inserted correctly into the Cordless Wet and Dry Vac and that it is switched on at the mains power supply.
	The Cordless Wet and Dry Vac is not turned off.	Ensure that the Cordless Wet and Dry Vac is turned off before charging.
The Cordless Wet and Dry Vac's suction is reduced.	The nozzle or attachment is blocked.	Remove the attachment and clear any obstructions.
	The dust container is full.	Empty the dust container.
	The washable filter is blocked.	Clean the washable filter.
	The Cordless Wet and Dry Vac battery is running out of charge.	Recharge the Cordless Wet and Dry Vac battery following the instructions in the section entitled 'Charging the Cordless Wet and Dry Vac'.

Battery Removal and Disposal

The Cordless Wet and Dry Vac is fitted with a sealed, Ni-Mh battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Cordless Wet and Dry Vac, remove the dust container following the instructions in the section entitled 'Emptying the Dust Container' and then unfasten the screws on the side of the Cordless Wet and Dry Vac main unit. Carefully slide off the side to give access to the battery.

Withdraw the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to your local recycling station. Contact local government offices for further details.

Specifications

Product code: BEL0499

Mains supply: 230 V 50 Hz

Adaptor Output: 15 V DC 400 mA

Battery: 12 V 1800 mAh Ni-Mh

Charging time: 5–6 hours approx.

Notes

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2015 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD110815/MD220915/V5