

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Turbo Sonic Spray Mop

### Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance away from heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Battery Safety

Check that the battery compartment is secure.

Only batteries of the same or equivalent type as those recommended should be used with this appliance.

Batteries are to be inserted with the correct polarity.

Replace a full set of batteries at any one time.

Remove any batteries from the appliance when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Seek medical advice immediately if batteries have been swallowed.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries must be removed from the appliance before being charged.

Rechargeable batteries should only be recharged under adult supervision.

Where possible, remove batteries from the appliance when not in use.

Exhausted batteries must be removed and disposed of safely.

The supply terminals are not to be short-circuited.

Do not short-circuit batteries.

Do not store batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not expose batteries to heat or fire as they may explode.

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not subject the batteries to mechanical shock.

Do not dispose of batteries in household waste.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This appliance requires 4 x AA batteries (not included).

## Care and Maintenance

Wipe the spray mop with a soft, damp cloth and allow to dry thoroughly. Hand-wash the microfibre pad in warm, soapy water and allow to dry naturally.

### Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

### In the Box

Handle with detergent trigger

Lower tube

Vibrating mop head

900 ml refillable mop cartridge

Microfibre pad

Instruction manual

### Features

Vibrating function for more effective cleaning

Great for cleaning hardwood, tiles and other sealed, bare-floor surfaces

900 ml refillable mop cartridge


Powerful jet spray function

Metal hanging hook

Includes 1 microfibre pad

4 x AA batteries required (not included)

## Description of Parts

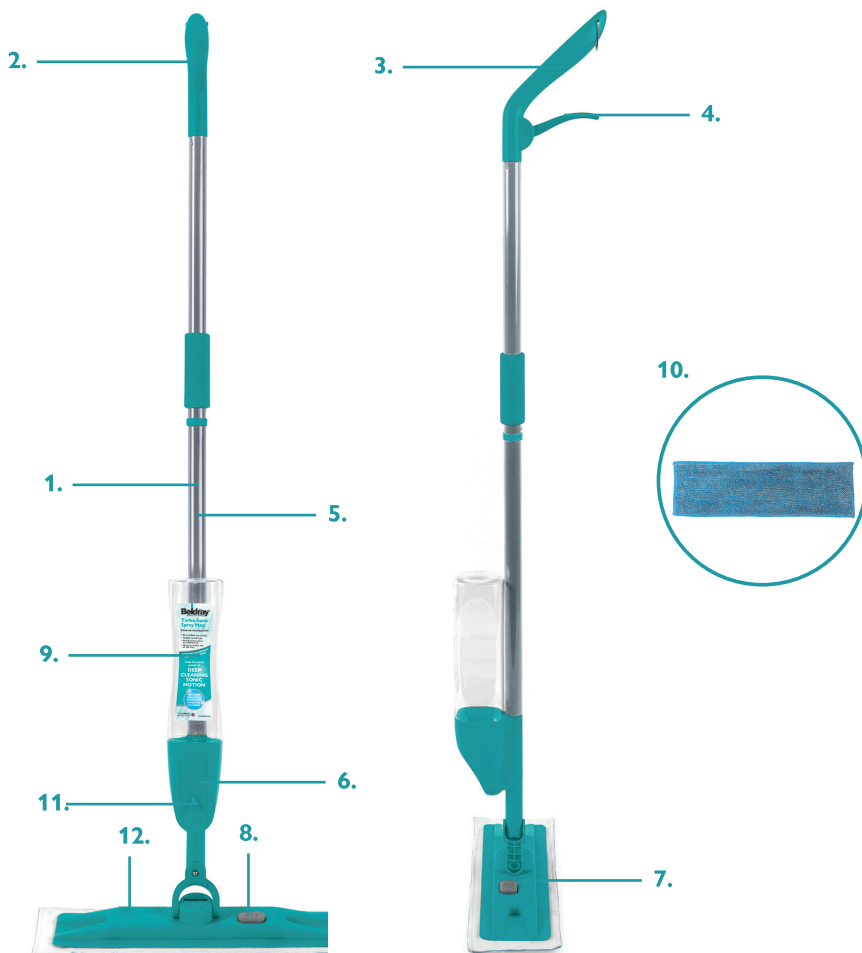

1. Turbo Sonic Spray Mop main unit
2. Handle
3. Metal hanging hook
4. Detergent trigger
5. Lower tube
6. Cartridge holder

7. Vibrating mop head
8. Power button
9. 900 ml refillable mop cartridge
10. Microfibre pad
11. Jet spray
12. Battery compartment

## Instructions for Use

### Assembling the Turbo Sonic Spray Mop

**STEP 1:** Attach the lower tube to the vibrating mop head by pushing it downward until it locks into position.

**STEP 2:** Insert the handle into the lower tube until it locks into position.

**STEP 3:** Position the vibrating mop head over the microfibre pad and press down firmly.

### Battery Installation

The spray mop requires 4 x AA batteries (not included) for use:

**STEP 1:** Locate the battery compartment; this can be found on top of the vibrating mop head.

**STEP 2:** To access the battery compartment, slide away the battery cover.

**STEP 3:** Place the batteries into the slots in the battery compartment, so that the polarity matches the diagram shown in the battery compartment.

**STEP 4:** Replace the battery cover.

**Note:** Secure the battery cover before use.

### Filling the Mop Cartridge

**STEP 1:** Detach the mop cartridge from the cartridge holder by inverting the spray mop, so that the vibrating mop head is at the top and then carefully pull the mop cartridge down and away from the cartridge holder.

**STEP 2:** Fill up the mop cartridge with water or diluted detergent.

**STEP 3:** With the spray mop still inverted, replace the mop cartridge by carefully pushing a full one up into the cartridge holder, until it locks into position.

**Warning:** Check that the mop cartridge is the correct way up when removing it from the lower tube to prevent spillages.

### Using the Turbo Sonic Spray Mop

**STEP 1:** Assemble the spray mop following the instructions in the section entitled 'Assembling the Turbo Sonic Spray Mop'.

**STEP 2:** Fill the mop cartridge following the instructions in the section entitled 'Filling the Mop Cartridge'.

**STEP 3:** Control the jet spray function by gently squeezing the detergent trigger.

**STEP 4:** For more effective cleaning, activate the vibrating function by pressing the 'Power' button on the vibrating mop head.

### Storage

Before storing the spray mop, check that it has dried fully and that the mop cartridge is securely attached.

Store in a cool, dry place.

### Specifications

Product code: BEL0501

Power: 4 x AA batteries (not included)



### UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3** YEAR  
GUARANTEE

\* To be eligible for the extended guarantee,  
go to <http://guarantee.upgs.com/beldray>  
and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)





Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD250618/MD000000/V1

