

Beldray[®] Est 1872

Nobody Does It Better

Cordless Quick Vac Lite Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of the exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.

This appliance is fitted with a 21.6 V 2200 mAh li-ion battery (non-removable).

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Cordless Quick Vac Lite

Telescopic extension tube

Flexible extension hose

Floor brush

Crevice tool

Small brush tool

Mains power adaptor

Instruction manual

Features

21.6 V rechargeable lithium battery

Cyclonic vacuum technology

Converts to a handheld unit

Powerful suction

600 ml dust container*

20–25 minutes operating time

2–3 hours charge time

Lightweight: 1.3 kg**

Flexible, extendable hose

*200 ml working capacity

**Weight is for handheld unit only

Description of Parts



1. Cordless Quick Vac Lite motor unit
2. Telescopic extension tube
3. Telescopic extension tube button
4. Flexible extension hose
5. Floor brush
6. Crevice tool
7. Small brush tool
8. On/Off switch

9. 600 ml removable dust tank*
10. Dust tank release switch
11. Dust tank empty lever
12. Removable filter housing
13. Washable filter
14. Charging port
15. Air inlet

*200 ml working capacity

Instructions for Use

Before First Use

Before using the Cordless Quick Vac Lite for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the Cordless Quick Vac Lite in water or any other liquid.

Charging the Cordless Quick Vac Lite

Before first use, the Cordless Quick Vac Lite must be charged for approximately 3–4 hours. Subsequent charging will take approximately 2–3 hours.

STEP 1: Connect the mains power adaptor to the charging port on the Cordless Quick Vac Lite.

STEP 2: Plug the mains power adaptor into the mains power supply; the indicator light will flash red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will stop flashing and remain lit.

Note: Whilst charging, the Cordless Quick Vac Lite may become warm and cannot be operated. If the Cordless Quick Vac Lite is left charging for prolonged periods of time the indicator light will extinguish, this is not a fault and is intended for energy saving purposes. Always ensure that adaptor is unplugged from the mains power supply once the Quick Vac Lite is fully charged.

Warning: Do not use any mains power adaptor other than that supplied, as using an alternative will cause hazard.

Assembling the Cordless Quick Vac Lite

The Cordless Quick Vac Lite comes preassembled. If there are any hard to reach or narrow areas, then the telescopic extension tube is ideal. The telescopic extension tube needs to be fitted into position on the air inlet, followed by the required cleaning attachment.

Using the Cordless Quick Vac Lite

STEP 1: To use the Cordless Quick Vac Lite, disconnect the mains power adaptor and unplug it from the mains power supply.

STEP 2: Turn on the Cordless Quick Vac Lite by flicking the On/Off switch to the 'On' position.

Note: The indicator light will illuminate blue during use. Do not use the Cordless Quick Vac Lite without the removable filter or dust tank in position. Ensure that the removable filter is regularly cleaned to preserve the suction of the Cordless Quick Vac Lite.

Note: The usage time for the Cordless Quick Vac Lite is approximately 20 minutes.

Note: Cool air will emit from around the On/Off switch; this is not a fault, as the air will keep the On/Off switch cool.

Using the Flexible Extension Hose

STEP 1: Fit the flexible extension hose onto the air inlet.

STEP 2: Push the crevice or small brush tool onto the end of flexible extension hose.

STEP 3: Turn on the Cordless Quick Vac Lite by flicking the On/Off switch to the 'On' position.

Note: The flexible extension hose will only fit one way onto the air inlet.

Using the Floor Brush

STEP 1: Fit the telescopic extension tube onto the air inlet.

STEP 2: Push the floor brush attachment onto the end of the telescopic extension tube.

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and slide out the tube.

STEP 4: Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

STEP 5: Turn on the Cordless Quick Vac Lite by flicking the On/Off switch to the 'On' position.

Using the Crevice or Small Brush Tool

STEP 1: Fit the telescopic extension tube or flexible extension hose onto the air inlet, if required.

STEP 2: Push the crevice or small brush tool onto the end of the telescopic extension tube, end of the flexible extension hose or onto the air inlet if the telescopic extension tube is not being used.

STEP 3: Turn on the Cordless Quick Vac Lite by flicking the On/Off switch to the 'On' position.

Note: The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses or other places that are hard to reach. The small brush tool is good for cleaning curtains, shelves, books and other delicate objects.

Emptying the Dust Tank

STEP 1: To turn off the Cordless Quick Vac Lite, flick the On/Off switch to the 'Off' position.

STEP 2: Press the dust tank release switch and carefully remove the dust tank from the Cordless Quick Vac Lite motor unit.

STEP 3: Holding the dust tank over a bin or rubbish bag, press down the dust tank empty lever to release the dust tank hatch. Empty the dust tank slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 4: To close the dust tank, simply push the lid closed until it locks back into position.

STEP 5: Replace the dust tank by aligning the bottom with the base of the Cordless Quick Vac Lite motor unit. Push the dust tank in towards the motor unit, until it locks into position.

Note: Always ensure that the dust tank is secured into position and the dust tank release switch is not activated before using the Cordless Quick Vac Lite.

Cleaning the Sponge Filter

STEP 1: The sponge filter can only be accessed when the dust tank is open. Remove the dust tank by pressing the dust tank release switch and pull it away from the Cordless Quick Vac Lite motor unit. Remove the lid from the dust tank by rotating it in an anticlockwise direction and then lift it off.

STEP 2: Pull the removable filter housing away from the dust tank by using the handle.

STEP 3: Turn the top of the removable filter housing in a clockwise direction and then lift it off to access the sponge filter.

STEP 4: Gently pull the sponge filter out of the removable filter housing and shake it, until the majority of the dust has been removed. Rinse the sponge filter under clean, warm water and allow it to dry thoroughly.

STEP 5: Once the sponge filter has fully dried, slot it back into the removable filter housing.

STEP 6: Refit the removable filter housing, ensuring that the locking tabs are aligned with the corresponding slots in the dust tank.

Note: Do not clean the sponge filter using detergent or use external heat sources, such as a radiator to dry the sponge filter.

Warning: Only the black sponge filter is removable and washable. Do not attempt to remove or clean the white fabric within the removable filter housing.

Dos and Don'ts

DO check that the sponge filter is kept clear of obstruction.

DO make sure that the dust tank and sponge filter are cleaned regularly to preserve suction and prolong the life of the Cordless Quick Vac Lite.

DO clean the dust tank and sponge filter at least once a month.

DO NOT use the Cordless Quick Vac Lite without the sponge filter or dust tank in position.

DO NOT use the Cordless Quick Vac Lite to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

DO NOT use the Cordless Quick Vac Lite to pick up water or any other liquid, as this poses risk of an electric shock.

Care and Maintenance

Wipe the external surface of the Cordless Quick Vac Lite with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the Cordless Quick Vac Lite.

Ensure that the sponge filter is kept clean after every removal of the dust tank.

To clean the inside of the dust tank, it is possible to remove the centre filter.

Storage

Ensure that the Cordless Quick Vac Lite is cool, clean and dry.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The Cordless Quick Vac Lite will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the Cordless Quick Vac Lite and then plug it in and switch it on at the mains power supply.
The suction is poor.	The telescopic extension tube or air inlet is blocked. The dust tank is almost full. The sponge filter is blocked.	Disconnect the attachment and remove the blockage. Empty the dust tank following the instructions in the section entitled 'Emptying the Dust Tank.' Clean the filter following the instructions in the section entitled 'Cleaning the Dust Container Filter'.

Battery Removal and Disposal

The Cordless Quick Vac Lite is fitted with a 21.6 V 2200 mAh li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Cordless Quick Vac Lite, unfasten the screws and dismantle the product to gain access to the battery. This will require a crosshead screwdriver (not included).

Withdraw the battery and cut the connections using electrically insulated cutters.

To dispose of the exhausted battery unit, take it to your local recycling station. Contact your local government offices for further details.

Specifications

Product code: BEL0514EH

Battery: 21.6 V 2200 mAh li-ion (included)

25.8 V DC charger (included)

Dust tank capacity: 600 ml*

*200 ml working capacity

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD101215/MD181215/V4