

Beldray[®] Est 1872

Nobody Does It Better

Window Cleaning Vacuum Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully before use and retain for future reference.



**This product is not designed to pick up spills.
Only use this product in a vertical position, do not use it in a horizontal position.**

If the product is used in a horizontal position, water may leak out of the vents. This could cause injury to the user or damage to the product.

Using the product in a horizontal position will void the warranty.



Safety Instructions

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of the reach of children.

Keep the appliance and its power adaptor away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance with hot water or caustic cleaning detergents.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not leave the appliance unattended whilst connected to the mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

The use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Avoid storing in direct sunlight.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

To dispose of any batteries, take them to a local recycling station.

Contact the local government offices for further details.
This product is fitted with a 3.7 V 2000 mAh Li-ion secondary battery (rechargeable).

Battery Removal and Disposal

The battery must be disposed of at the end of the appliances life.
To remove the battery from the window vacuum, unfasten the screws and dismantle the appliance to gain access to the battery. This will require a cross-head screwdriver (not included).
Remove the battery and unclip the live and neutral terminal connections using electrically insulated cutters.
To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

Care and Maintenance

Before attempting any cleaning or maintenance, always turn off the window vacuum and ensure that it is unplugged from the mains power supply.
Clean the microfibre wipe pad in warm, soapy water; rinse and dry thoroughly.
Release the squeegee head by twisting it in an anticlockwise direction and then pull it away from the window vacuum main body.
Wipe the window vacuum main body, squeegee head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.
The window vacuum should be cleaned after each use.
Do not use harsh or abrasive cleaners or detergents.
Never immerse the window vacuum main body in water or any other liquid.

Getting Started

Remove the appliance from the box.
Remove any packaging from the appliance.
Place the packaging inside the box and either store or dispose of safely.

In the Box

Window Cleaning Vacuum main body
Squeegee head
280 ml spray bottle
Spray nozzle head
Wiper attachment
Nozzle clip
Microfibre wipe pad
Mains power adaptor
Instruction manual

Features

Lightweight and compact

Built-in 50 ml water tank

25–30 minutes continuous use

3.7 V Li-ion rechargeable battery (needs checking as artwork will need updating)

2–3 hours charge time

Spray bottle and microfibre wipe pad included

Description of Parts



1. Window Cleaning Vacuum main body

2. Squeegee head

3. On/Off button

4. Indicator light

5. 50 ml water tank

6. Water tank plug

7. Charging port

8. Max. fill level

9. 280 ml spray bottle

10. Spray nozzle head

11. Wiper attachment with
a microfibre wipe pad

12. Nozzle clip

Instructions for Use

Before First Use

Before using the window vacuum for the first time, wipe it with a soft, damp cloth and dry thoroughly. Do not immerse the window vacuum in water or any other liquid.

Ensure that the squeegee head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

Charging the Window Cleaning Vacuum

Before first use, the window vacuum must be charged for approx. 3–4 hours. Subsequent charging times will take approx. 2–3 hours.

STEP 1: Connect the lead from the mains power adaptor to the charging port on the window vacuum.

STEP 2: Plug the mains power adaptor into the mains power supply; the indicator light will flash to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate fully.

Note: Whilst charging, the window vacuum may become warm.

Caution: Exercise caution when charging the window vacuum; ensure that it is on a dry, stable surface away from other appliances.

Warning: Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

Assembling the Window Cleaning Vacuum

Attach the squeegee head by inserting it onto the top of the window vacuum main body; the arrow indicators must be aligned. Twist the squeegee head in a clockwise direction to secure it into position.

Assembling the Spray Bottle

STEP 1: Attach the wiper attachment to the top of the spray nozzle head.

STEP 2: Feed the suction hose through the nozzle clip; the spray nozzle head should face away from the lip.

STEP 3: Gently press in the lugs on the bottom of the wiper attachment and insert the assembled wiper attachment/spray nozzle head into the nozzle clip, until it locks into position.

STEP 4: Add the spray head to the top of the spray bottle and twist it in a clockwise direction to secure it into position.

STEP 5: Pull the microfibre wipe pad over the wiper attachment, allowing the elastic edges to hold it into position. Secure it using the hook and loop tape.

Using the Window Cleaning Vacuum

STEP 1: Fill the spray bottle with a mixture of water and diluted window cleaning concentrate.

STEP 2: Use the spray bottle and the microfibre wipe pad to wash over the area of window to be cleaned.

STEP 3: To turn on the window vacuum, press the 'On/Off' button; push it again to turn it off.

STEP 4: Place the squeegee head against the window surface in a vertical position.

STEP 5: Clean the window from the top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears on the window surface.

STEP 6: The window vacuum can now be used to remove any excess water remaining on the window surface. Whilst switched on, hold the window vacuum vertically where the excess water has collected and allow it to suck up the liquid.

Note: To lock the nozzle on the spray bottle when it is not in use, twist it in a clockwise direction.
The indicator light on the window vacuum will flash blue approx. 10–15 seconds before the battery runs out of charge.

Emptying the Water Tank

STEP 1: Ensure that the window vacuum is turned off and unplugged from the mains power supply.

STEP 2: Detach the water tank plug from the base of the water tank and tilt to drain away any excess water.

Note: The water tank should be emptied after each use.
Warning: Do not allow the water tank to fill beyond the 50 ml Max. fill level, as this may cause water to leak from the vents and cause damage to the window vacuum.

Storage

Before storing in a cool, dry place, ensure that the window vacuum is cool, clean and dry. The window vacuum may need to be recharged after storage, before the next use.

Specifications

Product code: BEL0537

Battery: 3.7 V 2000 mAh Li-ion battery

5 V DC 700 mA charger (included)

Tank volume: 50 ml

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 1 year guarantee



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD090216/MD120417/V3

