

Beldray[®]

Est 1872

Nobody Does It Better

Quick Steam Lite Instruction Manual



Hard and
sealed floors



Windows and
mirrors



Taps and
sanitaryware

UP TO 10
DIFFERENT
CLEANING
FUNCTIONS



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance out of the reach of children when it is in use or when it is cooling down.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions. Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.

Caution: Always wear suitable shoes when using the appliance. Do not wear slippers or open-toed footwear.

Warning: Danger of scalding. Exercise caution when using the appliance.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Quick Steam Lite

Filler cap

3 extension tubes

Floor head

2 floor head cloths

General nozzle

Flexible hose

Mini mop head

Angled nozzle

3 plastic round brushes

Window/mirror cleaner

Mini mop head cloth

350 ml measuring jug

Funnel

Instruction manual

Features

1400 W steam power

250 ml water tank

5 m power cord

2 floor head cloths


10 minutes of continuous steam

Chemical-free cleaning

Fast heat up, less than 1 minute

No waiting. Instant refill tank

Description of Parts

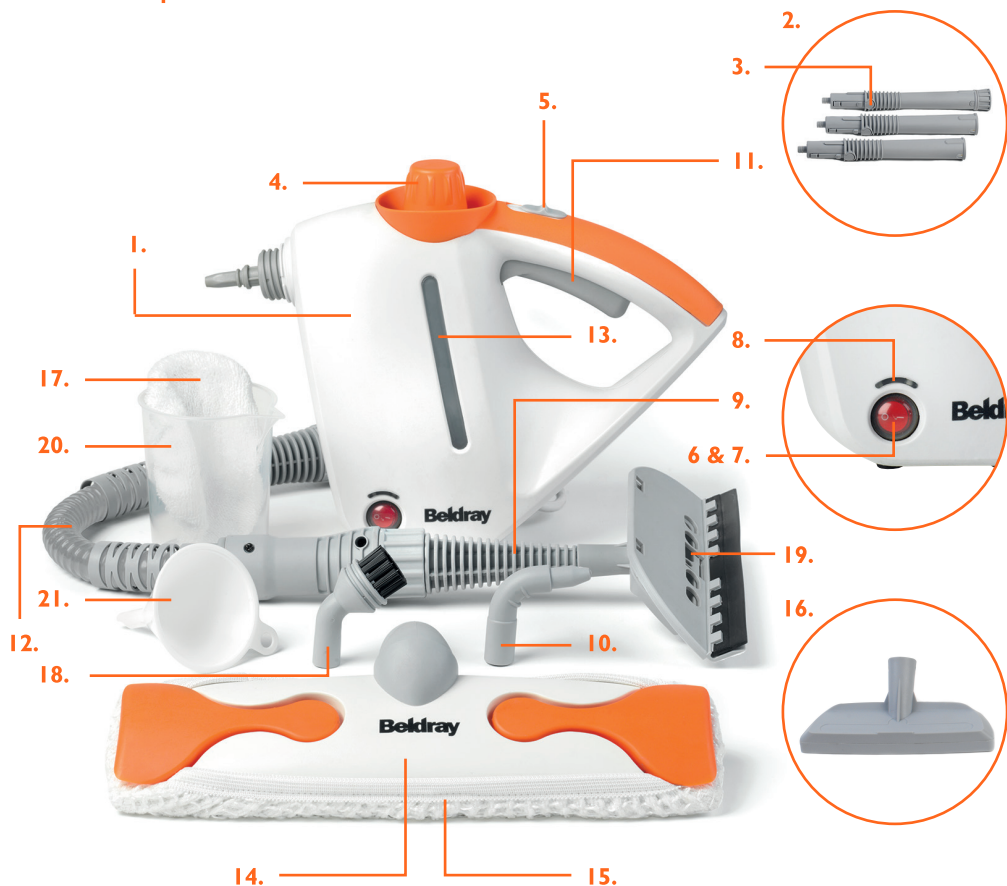

- | | | |
|----------------------------------|--------------------------------|---------------------------|
| 1. Quick Steam Lite main body | 8. Green ready indicator light | 15. Floor head cloth |
| 2. Extension tube (s) | 9. General nozzle | 16. Mini mop head |
| 3. Extension tube release button | 10. Angled nozzle | 17. Mini mop head cloth |
| 4. Filler cap | 11. Steam button | 18. 3 round brushes |
| 5. Safety lock | 12. Flexible hose | 19. Window/mirror cleaner |
| 6. On/Off switch | 13. 250 ml water tank | 20. 350 ml measuring jug |
| 7. Red power indicator light | 14. Floor head | 21. Funnel |

Instructions for Use

Before First Use

Before using the Quick Steam Lite for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the Quick Steam Lite with a soft, damp cloth and dry thoroughly.

Assembling the Quick Steam Lite

Accessories can be installed onto the end of the general nozzle or flexible hose when more reach is required.

Installing the General Nozzle

STEP 1: Hold the Quick Steam Lite steady, then push the general nozzle firmly onto the Quick Steam Lite main body. Twist the locking nut in a clockwise direction to secure the general nozzle into position. If the general nozzle is to be used with the flexible hose, attach it in the same way.

STEP 2: To remove the general nozzle, twist the locking nut in an anticlockwise direction and then pull the general nozzle away from the Quick Steam Lite main body.

Installing the Flexible Hose

STEP 1: Hold the Quick Steam Lite steady, then push the flexible hose firmly onto the Quick Steam Lite main body. Twist the locking nut in a clockwise direction to secure the flexible hose into position.

STEP 2: To remove the flexible hose, twist the locking nut in an anticlockwise direction and then pull the flexible hose away from the Quick Steam Lite main body.

Installing the Extension Tube

STEP 1: Hold the Quick Steam Lite steady, then push the first piece of extension tube firmly onto the Quick Steam Lite main body. Twist the locking nut in a clockwise direction to secure the extension tube into position.

STEP 2: Add the second piece of extension tube by pushing it firmly onto the end of the first. Repeat for the final piece of extension tube.

STEP 3: To remove the extension tube, press the release button and pull the end piece away from the second. Repeat for the second piece of extension tube.

STEP 4: Remove the first piece of extension tube by twisting the locking nut in an anticlockwise direction and then pull the extension tube away from the Quick Steam Lite main body.

Installing the Round Brushes or Angled Nozzle

STEP 1: Install the general nozzle (as instructed in the section entitled 'Installing the General Nozzle').

STEP 2: Push the accessory firmly into place over the end of the general nozzle.

Installing the Floor Head

STEP 1: Install the extension tube (as instructed in section entitled 'Installing the Extension Tube').

STEP 2: Push the floor head firmly into place over the end of the extension tube.

Installing the Floor Head Cloth

STEP 1: Pull the floor head cloth over the floor head, ensuring that it is secured using the spring-loaded clips.

STEP 2: To remove the floor head cloth, release it from the spring-loaded clips, then pull it off and away from the floor head.

Caution: Allow the Quick Steam Lite and floor head to cool thoroughly before attempting to install or remove the floor head cloth.

Installing the Mini Mop Head

STEP 1: Install the general nozzle (as instructed in the section entitled 'Installing the General Nozzle').

STEP 2: Push the mini mop head firmly into place over the end of the general nozzle.

Installing the Mini Mop Head Cloth

STEP 1: Pull the mini mop head cloth over the mini mop head, allowing the elastic edge to hold it in position.

STEP 2: To remove the mini mop head cloth, pull it off and away from the mini mop head.

Caution: Allow the Quick Steam Lite and mini mop head to cool thoroughly before attempting to install or remove the mini mop head cloth.

Installing the Window/Mirror Cleaner

STEP 1: Install the mini mop head (as instructed in the section entitled 'Installing the Mini Mop Head').

STEP 2: Hook the two small hooks on the window/mirror cleaner onto the suspension slots on the mini mop head and push the window/mirror cleaner into position.

STEP 3: To remove the window/mirror cleaner, push the tab holding it in position forward and pull; this will release the window/mirror cleaner. Unfasten the hooks from the suspension slots to separate the two parts.

Note: Hold the window/mirror cleaner approximately 30 cm away from any glass for the first 30 seconds of use; this will preheat it.

Caution: Never use the Quick Steam Lite on frosted or cold glass, as this may cause damage or crack the glass.

Filling the Water Tank

STEP 1: Place the Quick Steam Lite onto a flat, stable surface.

STEP 2: Remove the filler cap by twisting it in an anticlockwise direction.

STEP 3: Fill up the measuring jug to the 250 ml mark.

STEP 4: Position the funnel inside the opening of the Quick Steam Lite and then pour the contents of the measuring jug into the funnel.

STEP 5: Replace the filler cap by twisting it in a clockwise direction, until secure.

Note: Ensure that the water tank is not filled past the maximum level (250 ml).

Warning: Never place aromatic, alcoholic or detergent products into the water tank, as this will cause damage to the Quick Steam Lite and void the warranty.

Filling the Water Tank During Use

STEP 1: Switch off and unplug the Quick Steam Lite from the mains power supply, ensuring that the 'On/Off' switch is in the 'Off' position.

STEP 2: Press and hold the steam button and allow the Quick Steam Lite to run until all of the water has been used.

STEP 3: Carefully and slowly loosen the filler cap by twisting it in an anticlockwise direction and then remove it.

STEP 4: Fill the water tank using the measuring jug and funnel, as outlined in the section entitled 'Filling the Water Tank'.

STEP 5: Replace the filler cap by twisting it in a clockwise direction, until secure.

STEP 6: Turn on the Quick Steam Lite by flicking the 'On/Off' switch to the 'On' position.

Note: The water tank can be refilled immediately after use, as there is no need to wait for it to cool down.

Using the Quick Steam Lite

STEP 1: Plug in and switch on the Quick Steam Lite at the mains power supply.

STEP 2: Turn on the Quick Steam Lite by flicking the 'On/Off' switch to the 'On' position. The red power indicator light will illuminate.

STEP 3: The Quick Steam Lite will take approximately 20–30 seconds to heat up; after this time, the green ready indicator will illuminate, indicating that the Quick Steam Lite is ready to use.

STEP 4: To operate the steam function, slide the safety lock forwards so that it is in the 'unlocked' position and then press and hold the steam button.

STEP 5: When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: Ensure that the safety lock has been activated before plugging in and switching on the Quick Steam Lite. This will prevent any steam from escaping before it is needed.

Note: It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Warning: The accessories will become hot during use; do not touch these parts, as this could cause injury by scalding.

Using the Quick Steam Lite to Clean Clothes

STEP 1: Install the mini mop head (as instructed in the section entitled 'Installing the Mini Mop Head') and then attach the mini mop head cloth, following the instructions in the section entitled 'Installing the Mini Mop Head Cloth'.

STEP 2: Hang the clothes to be steamed, slide the safety lock forwards so that it is in the 'unlocked' position and then press and hold the steam button. Move the mini mop head over the clothes to steam them.

STEP 3: When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: Always follow the care instructions on the garments to be steam cleaned.

Using the Quick Steam Lite to Clean Doors, Windows and Glass

STEP 1: Install the window/mirror cleaner (as instructed in the section entitled 'Installing the Window/Mirror Cleaner'.

STEP 2: Slide the safety lock forwards so that it is in the 'unlocked' position and then press and hold the steam button. Move the window/mirror cleaner over the area to be cleaned.

STEP 3: When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: When cleaning windows, it is advised to use the steam button in short bursts.

Note: Hold the window/mirror cleaner approximately 30 cm away from any glass for the first 30 seconds of use; this will preheat it.

Caution: Never use the Quick Steam Lite on frosted or cold glass, as this may damage or crack the glass.

Using the Quick Steam Lite to Clean Sealed Flooring

STEP 1: Install the extension tube (as instructed in the section entitled 'Installing the Extension Tube '), then attach the floor head and floor head cloth following the instructions in the sections entitled 'Installing the Floor Head' and 'Installing the Floor Head Cloth'.

STEP 2: Slide the safety lock forwards so that it is in the 'unlocked' position and then press and hold the steam button. Move the floor head over the affected areas of the sealed flooring to remove dirt and stains.

STEP 3: When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: Do not use the Quick Steam Lite on any unsealed hard floor surfaces or surfaces that have been treated with wax, as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Warning: Never use the floor head without the floor head cloth, as this will cause damage to the floor.

Function and Accessory Usage

Required Use	Accessory
Cleaning or steam ironing garments.	Mini mop head with mini mop head cloth.
Cleaning ovens, hobs and BBQ equipment.	Round brush.
Cleaning sofas, cushions or other heavy materials.	Mini mop head with mini mop head cloth.
Cleaning tiles and sealed grout.	General nozzle or round brush.
Cleaning taps and sanitaryware.	General nozzle, angled nozzle or round brush.
Cleaning shower screens, mirrors and glass.	Window/mirror cleaner.
Cleaning bathtubs, sinks, toilets and other bathroom accessories.	General nozzle, angled nozzle or round brush.
Cleaning sealed flooring.	Floor head with floor head cloth.
Cleaning toys, tables and work surfaces	General nozzle, angled nozzle or round brush.
Cleaning awkward, hard to reach areas.	General nozzle or angled nozzle and flexible hose.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the Quick Steam Lite from the mains power supply and allow it to cool sufficiently.

Press and hold the steam button and allow the Quick Steam Lite to run until all of the water has been used.

Carefully and slowly loosen the filler cap by twisting it in an anticlockwise direction and then remove it.

Ensure that there is no remaining water in the water tank.

Wipe the Quick Steam Lite with a soft, damp cloth and allow to dry thoroughly.

Clean the hard plastic accessories in warm, soapy water; rinse and dry thoroughly.

The Quick Steam Lite and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

To clean the floor head cloths and mini mop head cloth, follow the washing instructions on the care labels.

Warning: Never immerse the electrical components in water or any other liquid.

Storage

Before storing the Quick Steam Lite, ensure that it has cooled and dried fully.

Check that the water tank is completely empty.

Remove the floor head cloth and mini mop head cloth, ensuring that they have been cleaned according to the instructions in the 'Care and Maintenance' section.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
Steam pressure is low.	The water tank has been overfilled.	Carefully empty some of the water out of the water tank.
Steam pressure has reduced.	The water tank is nearly empty.	Refill the water tank (as instructed in the section entitled 'Filling the Water Tank').
The steam button does not work.	The safety lock is in the 'locked' position.	Slide the safety lock forwards so that it is in the 'unlocked' position.

Specifications

Product code: BEL0554

Input: 220–240 V~50/60 Hz

Output: 1400 W

Water tank capacity: 250 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{\perp}{\equiv}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{\perp}{\equiv}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{\perp}{\equiv}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

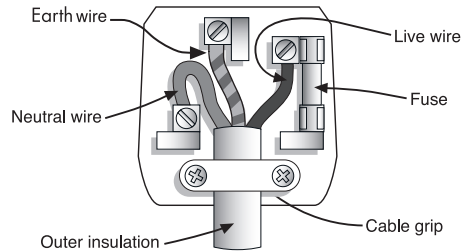

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



