

# Beldray<sup>®</sup> Est 1872

Nobody Does It Better

## Multicyclonic PET<sup>+</sup>

Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children. Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit. If the vacuum cleaner cuts out, press the power button to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

## Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Clean the filters after every removal of the dust container.

To clean the inside of the dust container it is possible to remove the cyclonic cone.

## Dos and Don'ts

### Do:

Check that the filters are kept clear of obstruction.

Make sure that the dust container and filters are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.

Keep the pet turbo brush free from a build-up of dust and dirt.

Clean the pet turbo brush on a regular basis.

### Don't:

Use the vacuum cleaner without the filters or dust container in position.

Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Empty the dust container indoors.

Pull or lift the vacuum cleaner by its power supply cord.



## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Multicyclonic Pet+

Suction hose

Telescopic extension tube

Floor brush

2 in 1 crevice and brush tool

Pet turbo brush

Instruction manual

## Features

700 W high efficiency motor

Variable speed control

Multicyclonic vacuum technology

Large 2.8 litre dust container

 
6 m power cord

Telescopic extension tube

Auto cord rewind

Includes high efficiency floor brush, turbo brush tool for pet hair and 2 in 1 crevice and brush tool

## Description of Parts

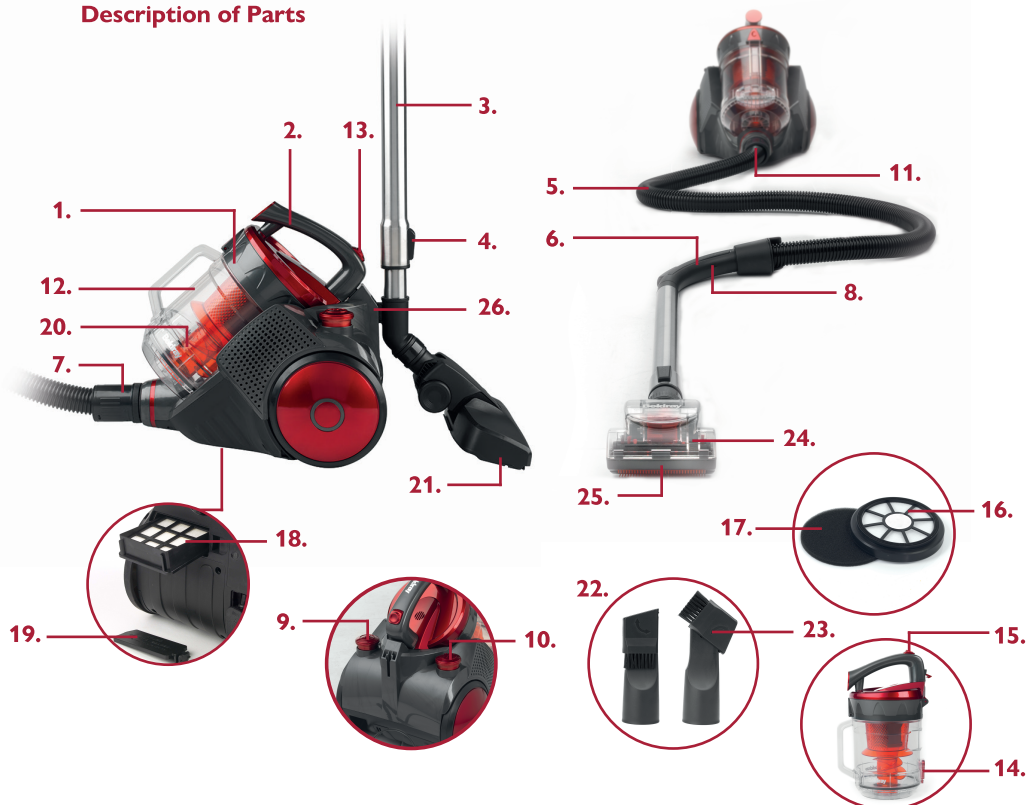

1. Multicyclonic Pet+ main unit
2. Handle
3. Telescopic extension tube
4. Telescopic extension tube button
5. Suction hose
6. Suction hose neck
7. Locking end
8. Air valve
9. Power button/variable speed control
10. Cord rewind button
11. Air inlet
12. Dust container
13. Dust container release button

14. Dust container base release catch
15. Dust container lid release button
16. Washable filter
17. Sponge filter
18. HEPA exhaust filter
19. HEPA exhaust filter cover
20. Cyclonic cone
21. Floor brush
22. 2 in 1 crevice and brush tool
23. Fabric brush head
24. Pet turbo brush
25. Pet turbo brush removable head
26. Storage clip

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

### Assembling the Multicyclonic Pet+

Before fitting any accessories into the air inlet, check that the vacuum cleaner is disconnected from the mains power supply.

**STEP 1:** Fit the dust container by pushing it onto the base of the vacuum cleaner main unit, aligning the indent on the base of the dust container with the knob on the unit until it clicks.

 
**STEP 2:** To fit the suction hose, insert the locking end into the air inlet and twist it in a clockwise direction until it locks into position.

To remove the suction hose, twist the suction hose in an anticlockwise direction and pull away it away from the main unit.

### Using the Telescopic Extension Tube

The 2 in 1 crevice and brush tool fits onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

**STEP 1:** Fit the telescopic extension tube by pushing the large opening of the telescopic extension tube over the end of the suction hose neck (1).

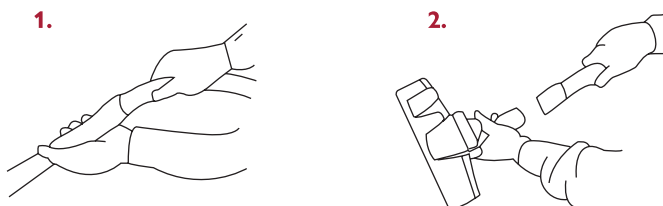

**STEP 2:** Push the chosen attachment onto the end of the telescopic extension tube (2).



**STEP 3:** Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.

**STEP 4:** Release the telescopic extension tube button to lock the telescopic extension tube into position at the selected length.

## Using the Floor Brush

  **STEP 1:** Push the floor brush onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

**STEP 2:** Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

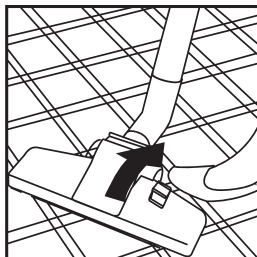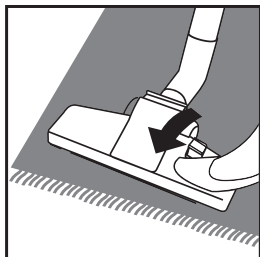

**STEP 3:** Carefully pull out the power supply cord until it is at a suitable length and then plug it into the mains power supply; do not exceed the red mark.

**STEP 4:** Turn on the vacuum cleaner by pressing the power button; press the power button again to switch it off.

**Note:** Open the air valve on the floor brush when vacuuming carpets. Use the variable speed control to adjust the power by rotating it in a clockwise direction; rotate in an anticlockwise direction to decrease the speed.

## Using the 2 in 1 Crevice and Brush Tool or Pet Turbo Brush

The 2 in 1 crevice and brush tool can be used as a fabric brush, ideal for upholstery, sofas and chairs, or as a crevice tool, ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach.

To use the 2 in 1 crevice and brush tool as a normal brush tool for shelves, cupboards and windowsills, simply twist the brush out.

The pet turbo brush is intended for removing pet hairs from carpets and upholstery. The removable brush helps agitate fabric to remove pet hairs easily. This can be clipped on.

**STEP 1:** Push the desired tool onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

**STEP 2:** Turn on the vacuum cleaner by pressing the power button; press the power button again to switch it off. Twist to adjust the power.

**Note:** Do not use the suction hose neck without an accessory attached.

**Warning:** The pet turbo brush must not be used on any pets; it is for use on carpets and upholstery only.

### After Use

**STEP 1:** Turn off the vacuum cleaner by pressing the power button.

**STEP 2:** Switch off and unplug the vacuum cleaner from the mains power supply.

**STEP 3:** Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum.

**STEP 4:** The vacuum cleaner can be stored compactly by clipping the telescopic extension to the back of the vacuum cleaner. This will keep the floor brush horizontal and the unit stable.

**Warning:** Hold onto the plug to guide the power supply cord back into the vacuum cleaner. Failure to do so may cause damage to the vacuum cleaner or injury to the user.

### Cleaning the Pet Turbo Brush

After regular use, the pet turbo brush may become clogged by pet hair and other debris. To maintain optimum performance, it needs to be cleaned frequently.

**STEP 1:** Remove the pet turbo brush from the telescopic extension tube or suction hose.

**STEP 2:** Detach the removable head by pushing down on the two tabs and lifting the removable head away from the pet turbo brush.

**STEP 3:** Unscrew the locking ring from the pet turbo brush air inlet by rotating it in an anticlockwise direction. This will enable access to the brush bar, belt and impeller.

**STEP 4:** The brush bar and impeller can now be lifted out of the pet turbo brush, allowing for any built-up debris to be removed.

**STEP 5:** Once the pet turbo brush has been cleaned thoroughly, replace the brush bar, checking that the belt is attached correctly and that the spindle end of the impeller is correctly aligned with the corresponding slot on the brush bar.

**STEP 6:** Reattach the top back onto the pet turbo brush, aligning the locking tabs at the front first, and then pushing the top into position to secure.

**STEP 7:** Screw the locking ring back into position by rotating it in a clockwise direction on the pet turbo brush air inlet.

**Note:** Take care when cleaning the pet turbo brush due to the number of small parts.

Keep the pet turbo brush free from a build-up of dust and dirt.  
Clean the pet turbo brush bar on a regular basis.

### Emptying the Dust Container

Before emptying the dust container, switch off and unplug the vacuum cleaner from the mains power supply. It is recommended to empty the dust container outdoors.

**STEP 1:** Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release button and pulling the dust container away.

**STEP 2:** Holding the dust container over a bin or refuse bag, push the dust container base release catch to open the base of the dust container. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. Shake the dust container gently to dislodge any stubborn dust.

**STEP 3:** To close the dust container, push the base closed until the release catch clicks into place.

**STEP 4:** Replace the dust container by pushing it into the vacuum cleaner main unit, aligning the indent on the base of the dust container with the knob on the unit.

**Warning:** Do not use the vacuum cleaner if the dust container is filled past the max. fill mark, as this could damage the unit or cause injury to the user.

### Cleaning the Dust Container, Washable Filter and Sponge Filter

The washable filter and sponge filter can only be accessed when the dust container has been removed. The cyclonic cone can be removed from the dust container to make cleaning easier.

**STEP 1:** Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

**STEP 2:** Once the dust container is empty, open the dust container lid by pressing the dust container lid release button and lifting it up.

**STEP 3:** Holding the handle, remove the washable filter from the top of the cyclonic cone by pulling it away. Turn the washable filter over and separate it from the sponge filter.

**STEP 4:** Hold the filters over a waste bin, preferably outdoors and gently shake off any dust and debris. Once the majority of the dust and dirt has been removed, clean off any residue by rinsing the filters under cold water. Allow to dry thoroughly.

**STEP 5:** Close the dust container lid, then twist the cyclonic cone in an anticlockwise direction and lift it out of the dust container. Gently shake off any dust and debris over a waste bin. Rinse any residue using cold water and allow to dry thoroughly.

**STEP 6:** Wash the dust container and cyclonic cone in clean, warm water and allow to dry thoroughly.

**STEP 7:** Once all of the parts have dried fully, reinsert the cyclonic cone by aligning the tabs with the locking slots until it fits into place, so that the opening matches the indent on the washable filter.

**STEP 8:** Open the dust container lid by pressing the dust container lid release button and lifting it up. Fit the filter into the top of the dust container and secure the lid by pushing down until it clicks.



**Note:** If the dust container, cyclonic cone, washable filter and sponge filter are not cleaned regularly, the thermal cut-out device will activate. For further details, see the section entitled 'Thermal Cut-out Device'.

**Warning:** Do not clean the filters using detergent. Always allow the filters to air dry; never use external heat sources, such as a radiator to dry them. Do not wring or twist the sponge filter as this will cause damage; gently squeeze it.

### **Cleaning the HEPA Exhaust Filter**

The HEPA exhaust filter is located on the base of the vacuum cleaner.

**STEP 1:** To remove the HEPA exhaust filter for cleaning, remove the HEPA exhaust filter cover by pushing in the locking tab.

**STEP 2:** Remove the HEPA exhaust filter by sliding it out of the exhaust filter housing.

**STEP 3:** Shake off the HEPA exhaust filter until the majority of the dust has been removed, then wash under clean, warm water and allow to dry thoroughly.

**STEP 4:** Once the HEPA exhaust filter has dried fully, slot it back into the exhaust filter housing and replace the HEPA exhaust filter cover.

**Warning:** Do not clean the HEPA exhaust filter using detergent. Always allow the HEPA exhaust filter to air dry; never use external heat sources, such as a radiator to dry.

### **Storage**

The floor brush can be positioned into the storage clip for easy storage.

Check that the vacuum cleaner is cool, clean and dry before storing in a clean, dry place.

## Troubleshooting

| Symptom  | Possible Cause   | Solution   |
|--|--|--|
| The suction is poor.                               | The telescopic extension tube, floor brush, 2 in 1 crevice and brush tool, pet turbo brush or air inlet is blocked.                | Disconnect the attachment and clear the blockage.  |
|  | The dust container is almost full.   | Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.   |
|  | The filters are blocked.   | Clean the filters following the instructions in the section entitled 'Cleaning the Dust Container, Washable Filter and Sponge Filter' and 'Cleaning the HEPA Exhaust Filter'.        |
| The vacuum cleaner has cut out or stopped working. | The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect the vacuum cleaner. | Switch off and disconnect the vacuum cleaner from the mains power supply.<br>Empty the dust container and clean the filters.<br>Allow the vacuum cleaner to cool for approx. 1 hour. |

## Specifications

Product code: BEL0555

Rated Voltage: 220–240 V ~ 50–60 Hz

Rated Wattage: 700 W

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

 
The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

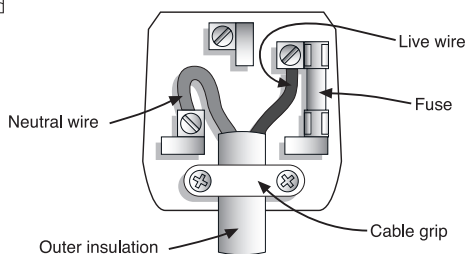

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## **UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3** YEAR  
GUARANTEE

\* To be eligible for the extended guarantee,  
go to <http://guarantee.upgs.com/beldray>  
and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD100818/MD000000/V1

