

Beldray[®]

Est 1872

Nobody Does It Better

10 in 1 Handheld Steam Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear. The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently. Press and hold the steam button and run the steam cleaner until all of the water has been used; this will reduce the pressure inside the steam cleaner.

Carefully and slowly loosen the safety cap by simultaneously pushing it down and twisting it in an anticlockwise direction; do not fully remove it. Once the safety cap has been loosened, any remaining steam will be released slowly from the steam cleaner. Allow it to cool for approx. 5 minutes and then remove the safety cap completely.

Drain any remaining water from the water tank. If there is scale build-up, use a commercial descaling agent, following the manufacturer's instructions.

Wipe the steam cleaner with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water; rinse and dry thoroughly. The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mini mop head cloth is machine washable on a low heat setting. Always use a mild detergent and lay flat to dry. Never use bleach or fabric softener when washing the mini mop head cloth.

Warning: Never immerse the electrical components in water or any other liquid.

Descaling the Water Tank and Accessories

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam cleaner.

Removing Limescale

Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month.

When removing limescale, it is recommended to use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturer's instructions.

Warning: Do not leave the steam cleaner unattended whilst removing limescale.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

10 in 1 Handheld Steam Cleaner

Safety cap

General nozzle

Flexible hose

Mini mop head

Angled nozzle

Plastic round brushes (qty. 3)

Window/mirror cleaner

Mini mop head cloth

Measuring jug

Funnel

Instruction manual

Features


1100 W steam power

250 ml water tank

5 m power cord

Chemical-free cleaning

Description of Parts

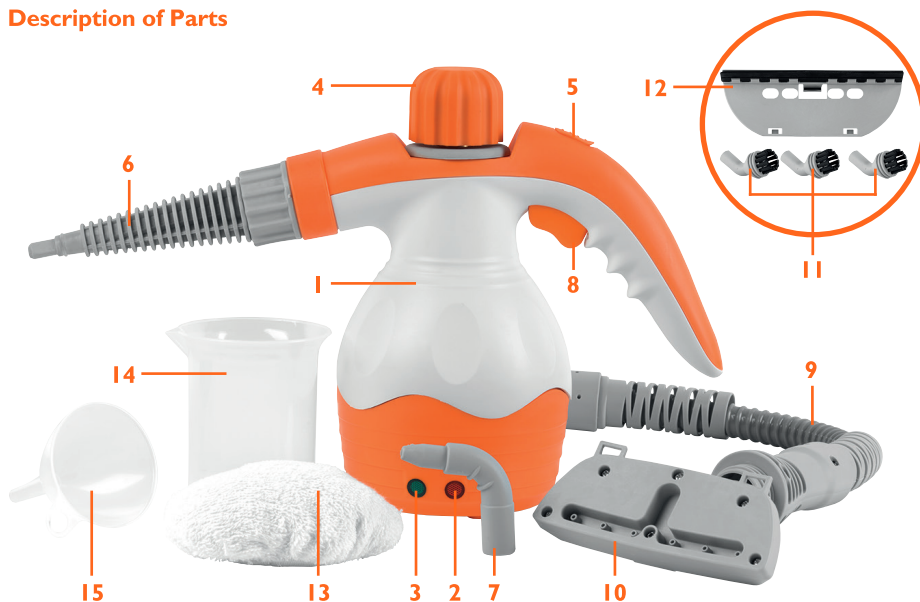

1. 10 in 1 Handheld Steam Cleaner main body
2. Red power indicator light
3. Green ready indicator light
4. Safety cap
5. Safety lock
6. General nozzle
7. Angled nozzle

8. Steam button
9. Flexible hose
10. Mini mop head
11. Round brushes
12. Window/mirror cleaner
13. Mini mop head cloth
14. Measuring jug
15. Funnel

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

Assembling the 10 in 1 Handheld Steam Cleaner

Accessories can be installed onto the end of the general nozzle or onto the flexible hose. The flexible hose provides an extended reach, ideal for awkward corners and hard-to-clean areas.

Attaching the General Nozzle

STEP 1: Holding the steam cleaner steady, push the general nozzle firmly onto the steam cleaner and twist the locking nut in a clockwise direction to secure the general nozzle into position.

STEP 2: To remove the general nozzle, twist the locking nut in an anticlockwise direction and then pull it away from the steam cleaner.

Attaching the Flexible Hose

STEP 1: Holding the steam cleaner steady, push the flexible hose firmly onto the steam cleaner and twist the locking nut in a clockwise direction to secure the flexible hose into position.

STEP 2: To remove the flexible hose, twist the locking nut in an anticlockwise direction and then pull the flexible hose away from the steam cleaner.

Attaching the Round Brush(es) or Angled Nozzle

To use one of the round brushes or the angled nozzle, the general nozzle or flexible hose must be in place, following the instructions in the previous section.

STEP 1: Once the flexible hose or general nozzle is secure, push the round brush or angled nozzle into place over the end of the chosen attachment.

STEP 2: To remove the round brush or angled nozzle, pull it away from the general nozzle firmly.

Warning: Exercise caution when using any of the round brushes, as they have very sharp bristles. Never hold the round brushes by the bristles; always use the main body.

Attaching the Mini Mop Head

The mini mop head can be attached onto the general nozzle or can be used with the flexible hose. If required, secure the flexible hose into place before attaching the mini mop head, following the instructions in the section entitled 'Attaching the Flexible Hose'.

STEP 1: Push the mini mop head firmly into place over the end of the general nozzle or flexible hose and twist it in a clockwise direction to secure it into position.

STEP 2: To remove the mini mop head, pull it away from the general nozzle or flexible hose.

STEP 3: Attach the mini mop head cloth by pulling it over the mini mop head, allowing the elasticated edges to hold it into position. Carefully remove the mini mop head cloth by pulling it away from the mini mop head.

Caution: Allow the steam cleaner and the mini mop head to cool thoroughly before attempting to install or remove the mini mop head cloth.

Attaching the Window/Mirror Cleaner

STEP 1: Install the mini mop head following Step 1 in the section entitled 'Attaching the Mini Mop Head'.

STEP 2: Fasten the two small hooks on the window/mirror cleaner to the suspension slots on the mini mop head and then push them into position.

STEP 3: To remove the window/mirror cleaner, push the tab holding it in position forward and then pull; this will release the window/mirror cleaner from its held position. Unfasten the hooks from the suspension slots to separate the two parts.

Caution: Never use the steam cleaner on frosted or cold glass, as this may damage or crack the glass.

Filling the Water Tank

Check that the steam cleaner is turned off and unplugged from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner on a flat, stable surface.

STEP 2: Remove the safety cap by simultaneously pushing it down and twisting it in an anticlockwise direction.

STEP 3: Fill the measuring jug with cold water.

STEP 4: Using the funnel, carefully pour the contents of the measuring jug into the water tank, making sure that it does not overflow.

STEP 5: Replace the safety cap by twisting it in a clockwise direction, until secure.

Note: The water tank has a minimum capacity of 100 ml and a maximum capacity of 250 ml. The water may take a couple of seconds to rise; allow time for this before adding in more, making sure that the water tank is not overfilled. Overfilling the water tank could cause excess water to be produced in the place of steam.

If the water tank becomes empty during use, turn off the steam cleaner and allow it to cool down before carefully and slowly loosening the safety cap to gradually release the pressure from the steam cleaner. Allow it to cool fully before refilling the water tank following the instructions in the section entitled 'Filling the Water Tank'.

Caution: Allow the steam cleaner to fully cool before attempting to fill the water tank.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use. The safety cap will not open if the steam cleaner has built-up pressure. Allow the steam cleaner to fully cool and then press the steam button; if no steam is emitted, carefully and slowly loosen the safety cap.

Using the 10 in 1 Handheld Steam Cleaner

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Attach any accessories as required.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply. The red power indicator light will illuminate to signal that the steam cleaner is preheating; this will take approx. 2–3 minutes. Once the steam cleaner has reached the correct temperature, the green ready indicator light will illuminate, signalling that the steam cleaner is ready to use.

STEP 4: To operate the steam cleaner, slide the safety lock backwards to the unlocked position and then press and hold the steam button. When the steam function is no longer needed, release the steam button; the safety lock will automatically activate.

Note: Ensure that the safety lock has been activated before plugging in and switching on the steam cleaner at the mains power supply. This will prevent any steam escaping before it is needed.

It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

The safety lock does not need to be held in the 'Unlocked' position, as it will remain so as long as the steam button is being pressed.

The water tank will supply approx. 8–9 minutes of continuous steam when filled with 250 ml water.

Caution: The steam cleaner will become hot during use.

Using the 10 in 1 Handheld Steam Cleaner to Refresh Clothes

STEP 1: Install the mini mop head and attach the mini mop head cloth following the instructions in the section entitled 'Attaching the Mini Mop Head'.

STEP 2: Hang the clothes to be steamed.

STEP 3: Slide the safety lock backwards to the unlocked position and then press and hold the steam button. Move the mini mop head over the garment to gently steam the fabric.

Note: Always follow the instructions on the garment care label.

Using the 10 in 1 Handheld Steam Cleaner to Clean Windows and Glass

STEP 1: Install the window/mirror cleaner, following the instructions in the section entitled 'Attaching the Window/Mirror Cleaner'.

STEP 2: Slide the safety lock backwards to the unlocked position and then press and hold the steam button. Move the window/mirror cleaner over the area to be cleaned.

Note: When cleaning windows, it is advised to use the steam button in short bursts. Hold the window/mirror cleaner approx. 30 cm away from any glass for the first 30 seconds of use; this will preheat it.

Caution: Never use the steam cleaner on frosted or cold glass, as this may damage or crack the glass.

Function and Accessory Usage

Required Use	Accessory
Cleaning or steam ironing garments.	Mini mop head with mini mop head cloth.
Ovens, hobs and BBQ equipment.	Round brush.
Sofas, cushions or other heavy materials.	Mini mop head with mini mop head cloth.
Tiles and sealed grout.	General nozzle or round brush.
Taps and sanitaryware.	General nozzle, angled nozzle or round brush.
Shower screens, mirrors and glass.	Window/mirror cleaner.
Bathtubs, sinks, toilets and other bathroom accessories.	General nozzle, angled nozzle or round brush.
Car upholstery.	Mini mop head with mini mop head cloth.
Outer surface of car alloys.	Angled nozzle or round brush.
Toys, tables and work surfaces	General nozzle, angled nozzle or round brush.
Awkward, hard-to-reach areas.	General nozzle or angled nozzle and flexible hose.

Troubleshooting

Problem	Possible Reason	Possible Solution
Reduced or no steam/ abnormal noise.	The water tank may be empty. The attachment or accessory may be blocked. There is no power to the steam cleaner. There may be a limescale build-up.	Add water to refill the water tank. Clean the attachment or accessory. Make sure that the steam cleaner is plugged into the mains power supply. Descal the steam cleaner using the instructions in the 'Removing Limescale' section.
The steam cleaner does not turn on.	There is a blown fuse or breaker. The power cord is not plugged in.	Check the fuse by replacement or reset the breaker. Plug the power cord into a working mains power supply.
Water is being emitted with no steam.	The water tank has been overfilled.	Switch off and unplug the steam cleaner from the mains power supply and allow it to cool thoroughly. Release the pressure, empty the water tank and then refill it with 250 ml of water.
The steam button does not work.	The safety lock is in the 'locked' position.	Slide the safety lock backwards so that it is in the 'unlocked' position.

Storage

Before storing the steam cleaner in a cool, dry place, ensure that it has cooled and dried fully. Check that the water tank is empty. Remove the mini mop head cloth, ensuring that it has been cleaned according to the instructions in the 'Care and Maintenance' section.

Specifications

Product code: BEL0573
Input: 220–240 V ~ 50/60 Hz
Output: 950–1100 W

Water tank capacity: 250 ml
Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

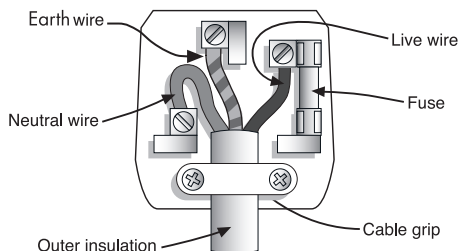

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Congratulations on your purchase!

Go to <http://guarantee.upgs.com/beldray>
to register your product for a 12 month guarantee.

The Beldray brand stands for reliability, trust and consumer loyalty.
Our fantastic range of products includes everything that you need to
keep your home clean and tidy.

View our full range of household essentials at **www.beldray.com**



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.



CD191115/MD020517/V2