

Beldray[®]

Est 1872

Nobody Does It Better

12 in 1 Multifunctional Steam Cleaner Instruction Manual

Foldable
handle



Handheld
unit

EASILY
CONVERTS INTO A
HANDHELD
UNIT



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not use the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions. Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never leave the appliance stationary on a floor area for longer than 15 seconds.

Always unplug the appliance after use and before any cleaning or maintenance.


Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear.

 **Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding. Exercise caution when using the appliance.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Steam cleaner main body

Handheld unit

Precision shaped mop head

2 mop head pads

Accessory adaptor

Small round brush

Large round brush

Angled nozzle

Grouting tool

Scraping tool

Garment and upholstery steamer cloth

Window/mirror cleaner

Carpet glider

250 ml measuring jug

Instruction manual

Features

1500 W steam power

350 ml removable water tank

Ready to use in 25 seconds

15–20 minutes of continuous steam

Multifunctional – handheld and upright

5 m power cord

Chemical-free cleaning

Description of Parts



1. Steam cleaner main body
2. Handheld unit
3. Foldable handle
4. Foldable handle release button
5. Upright steam button
6. Handheld unit release button
7. Handheld power button
8. Handheld steam button (on the back)
9. Lower cord storage clip

10. Upper cord storage clip
11. Precision shaped mop head
12. Mop head release button
13. Carpet glider
14. 350 ml removable water tank
15. Water tank cap
16. Water tank release button(s)
17. Adjustable steam control
18. Steam nozzle
19. Window/mirror cleaner
20. Small round brush

21. Large round brush
22. Accessory adaptor
23. Angled nozzle
24. Grouting tool
25. Scraping tool
26. Garment and upholstery steamer cloth
27. 2 mop head pads
28. 250 ml measuring jug

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, ensure that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the steam cleaner with a soft, damp cloth and dry thoroughly.

Assembling the I2 in I Multifunctional Steam Cleaner

Using the Foldable Handle

Press the foldable handle release button and simultaneously open out the foldable handle by lifting it away from the steam cleaner main body, until it locks into the upright position.

Attaching the Precision Shaped Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body onto the precision shaped mop head, until the precision shaped mop head spindle clicks into place.

STEP 2: Always attach the precision shaped mop head using both hands, ensuring that it is locked securely into position.


STEP 3: To remove the precision shaped mop head, simultaneously press the mop head release button and pull the steam cleaner main body upward.

Note: The precision shaped mop head will only fit one way onto the steam cleaner main body; ensure that it is correctly aligned.

Warning: Never force the steam cleaner main body onto the precision shaped mop head, as this could damage the steam cleaner.

Attaching the Mop Head Pad

Lay the mop head pad on the floor, then position the precision shaped mop head over it and press down firmly (A). The design of the precision shaped mop head will hold the mop head pad securely in place.

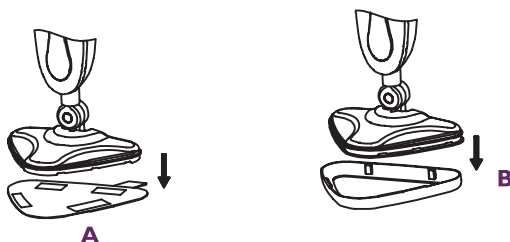

Note: The mop head pad must be installed correctly before use.

Attaching the Carpet Glider

STEP 1: Lay the carpet glider on the carpet.

STEP 2: Place the precision shaped mop head with the mop head pad attached (see the section entitled 'Attaching the Mop Head Pad'), into the carpet glider (B). The precision shaped mop head simply sits in the carpet glider to enable the steam cleaner to move with ease across the carpet. If the flooring is uneven, the carpet glider may dislodge.

Note: The carpet glider should only be used on carpets. If the carpet glider easily falls off, remove it along with the mop head pad and then reassemble, ensuring that the mop head pad is visible at the back of the precision shaped mop head.

Filling the Water Tank

STEP 1: Ensure that the steam cleaner is unplugged from the mains power supply.

STEP 2: Detach the water tank from the steam cleaner main body by pressing the two water tank release buttons.

STEP 3: Remove the water tank cap by twisting it in an anticlockwise direction.

STEP 4: Fill up the measuring jug to the 250 ml mark and then pour the contents into the water tank.

STEP 5: Replace the water tank cap by twisting it in a clockwise direction.

STEP 6: Refit the water tank to the steam cleaner main body.

Note: The water may take a couple of seconds to rise, so allow time for this before adding in more, ensuring that the water tank is not overfilled.

Warning: Never place, aromatic, alcoholic or detergent products into the water tank, as this will cause damage to the steam cleaner and void the warranty.

Filling the Water Tank During Use

As an Upright Steam Cleaner

STEP 1: Ensure that the steam operation is deactivated by pressing the power button.

STEP 2: Remove the water tank cap by twisting it in an anticlockwise direction.

STEP 3: Fill up the measuring filter jug to the 250 ml mark and then pour the contents into the water tank.

STEP 4: Replace the water tank cap by twisting it in a clockwise direction.

STEP 5: To reactivate the steam operation, press the power button.

Note: Do not overfill the water tank.

Warning: Never place aromatic, alcoholic or detergent products into the water tank, as this will cause damage to the steam cleaner and void the warranty.

As a Handheld Steamer

STEP 1: Ensure that the steam operation is deactivated by pressing the handheld steam power button.

STEP 2: Remove the water tank cap by twisting it in an anticlockwise direction.

STEP 3: Fill up the measuring filter jug to the 250 ml mark and then pour the contents into the water tank.

STEP 4: Replace the water tank cap by twisting it in a clockwise direction.

STEP 5: To reactivate the steam operation, press the handheld steam button.

Note: Do not overfill the water tank.

Warning: Never place aromatic, alcoholic or detergent products into the water tank, as this will cause damage to the steam cleaner and void the warranty.

Using the I2 in I Multifunctional Steam Cleaner

As an Upright Steam Cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the I2 in I Multifunctional Steam Cleaner'.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: The water tank will illuminate red to indicate that the steam cleaner is heating up; this will take approximately 25 seconds. Once the steam cleaner has reached the correct temperature, the water tank will illuminate blue, indicating that the steam cleaner is now ready to use.

STEP 5: To activate the steam operation, press and hold the upright steam button. Steam will run continuously until the water tank is empty or the steam button is released.

STEP 6: Control the steam operation using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

Note: A full water tank will supply approximately 15–20 minutes of steam. The water tank will illuminate red and flash if it becomes empty.

Caution: The power button is deactivated when the handheld unit is inserted into the main body. Do not attempt to use the steam cleaner as a handheld steamer whilst the handheld unit is inserted into the main body.

As a Handheld Steamer

STEP 1: Press the handheld unit release button and then carefully pull the handheld unit away from the steam cleaner main body.

STEP 2: Remove the precision shaped mop head, if it is attached.

STEP 3: Insert the accessory adaptor into the steam nozzle until it locks into position.

STEP 4: Attach the required accessory by aligning the arrow indicators and turning it in a clockwise direction until secure.

STEP 5: Plug in and switch on the steam cleaner at the mains power supply.

STEP 6: To turn on the steam cleaner, press the handheld unit power button.

STEP 7: The water tank will illuminate red to indicate that the steam cleaner is heating up; this will take approximately 25 seconds. Once the steam cleaner has reached the correct temperature, the water tank will illuminate blue, indicating that the steam cleaner is now ready to use.

STEP 8: To activate the steam operation, press and hold the steam button. Steam will run continuously until the steam button is released or the water tank is empty.

Note: The handheld unit steam button will only be active once the handheld unit has been removed from the steam cleaner main body. If using the steam cleaner vertically, it is recommended to only do so for short periods of time, as prolonged vertical use can reduce the steam output.

Accessories

Accessory	Suggested Use	Further Usage Information
Accessory Adaptor	For precision cleaning of places or crevices that are not readily accessible.	The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner.
Window/Mirror Cleaner	Ideal for a streak-free shine, cleaning shower screens, mirrors and glass.	Always ensure that the glass is not cold or frozen, as the hot steam may damage the surface. Always use the lowest steam setting to prevent damage to the surface.
Small Round Brush Large Round Brush	Both round brush accessories are perfect for cleaning ovens, hobs, showers, BBQs, taps and sanitaryware.	Always ensure that hot surfaces have cooled sufficiently to room temperature before using the round brushes, to avoid damage.
Angled Nozzle	Good for those hard to reach places, such as stovetops, taps and sinks.	Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at the non-permanent stain, whilst holding a clean cloth near to the marked area to capture any loosened dirt.
Grouting tool	Ideal for cleaning grout in kitchens and bathrooms.	Use a low steam setting and apply light pressure.
Scraping Tool	Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard to remove substances. Ideal for use on surfaces such as hobs and ovens or for helping to de-ice the freezer.	Always ensure that hot surfaces have cooled sufficiently to room temperature before using the scraping tool, to avoid damage.
Garment and Upholstery Steamer Cloth	Steaming garments, curtains, tablecloths, carpets etc.	Ideal for removing wrinkles from garments, leaving them crease-free and great for refreshing and cleaning upholstery.
Mop Head Pad	For the general cleaning of hard floors.	Use a low steam setting for wood floors and a higher steam setting for tiled floors.
Carpet Glider	For ease of use on carpets.	To prevent carpets from becoming wet, use a low steam setting.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank and clean it after every use.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the precision shaped mop head in warm, soapy water; rinse and dry thoroughly.

The steam cleaner water tank and accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The mop head pad is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the mop head pad.

Warning: Do not turn on the steam cleaner during cleaning.

Never immerse any electrical components in water or any other liquid.

Descaling the Water Tank and Accessories

If calcium deposits begin to build up inside the water tank or accessories, this may be due to living in a hard water area.

It is recommended to use demineralised water with the steam cleaner if living in a hard water area.

Removing Limescale

Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month.

When removing limescale, it is recommended to use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturers instructions.

Warning: Do not leave the steam cleaner unattended during the limescale removal process or during use.

Troubleshooting

Problem	Possible Reason	Possible Solution
Reduced or no steam/abnormal noise.	<p>The water tank may be empty.</p> <p>The steam nozzle may be blocked.</p> <p>There is no power to the steam cleaner.</p> <p>There may be a limescale build-up.</p> <p>The adjustable steam control is set to the 'Off' position.</p>	<p>Add water to refill the water tank.</p> <p>Clean the steam nozzle.</p> <p>Make sure that the steam cleaner is plugged into the mains power supply.</p> <p>Descale the steam cleaner using the instructions in the 'Removing Limescale' section.</p> <p>Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam.</p>
The steam cleaner does not turn on.	<p>There is a blown fuse or breaker.</p> <p>The power cord is not plugged in.</p> <p>The internal fuse is blown.</p>	<p>Check the fuse by replacement or reset the breaker.</p> <p>Plug the power cord into a working mains power supply.</p> <p>Contact customer services for further advice.</p>

Storage

Before storing the steam cleaner, ensure that it has cooled and dried fully.

Check that the water tank is empty.

Remove the mop head pad, making sure that it has been cleaned according to the instructions in the 'Care and Maintenance' section.

The steam cleaner can be stored with ease by using the foldable handle; simply press the foldable handle release button and carefully push the foldable handle down towards the back of the steam cleaner main unit.

Store in a cool, dry place.

Note: Ensure that the cord has been stowed away securely and is not too tight at the point of connection to the unit.

Specifications

Product code: BEL0574SAFOB

Input: 220–240 V~50/60 Hz

Output: 1500 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

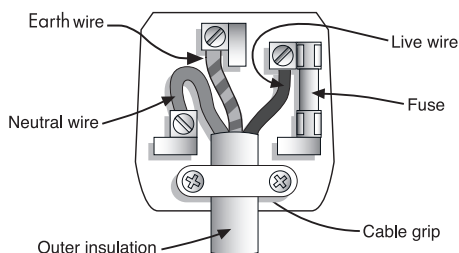

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Disposal	
 CARD PACKAGING widely recycled	 PLASTIC PACKAGING not currently recycled

Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD210416/MD000000/V1