

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Garment Steamer

### Instruction Manual

READY  
TO USE IN  
UNDER  
1 MINUTE



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is in use or when it is cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.



**Hot surface** – do not touch the hot section or heating components of the appliance.



**Warning:** Danger of scalding.

## Dos and Don'ts

### Do:

Always hold the garment steamer by the insulated handle.

Exercise caution when using the garment steamer, as the surface and steam head will get very hot.

Exercise caution when using the fabric brush attachment.

Keep the steam head at least 20 cm away from the garment steamer main unit.

Always unplug the appliance during filling, after use and before any cleaning or user maintenance.

Always follow the garment manufacturer's care instructions.

### Do not:

Direct the steam head at people or animals.

Tip or tilt the garment steamer once it has been filled with water, as this will cause boiling water to leak from the steam head and could cause serious injury.

Position the garment steamer too closely to the surface of the fabric or apply too much pressure, as this could cause damage to the fabric.

Hold the garment steamer by the body or steam head, as it will be very hot.

Press the fabric brush attachment too firmly onto the garment.

Twist the hose or block the steam holes.

## Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the garment steamer from the mains power supply and allow it to cool sufficiently (for approx. 30 minutes).

**STEP 1:** Remove the water tank and drain the contents.

**STEP 2:** Detach the hose and the extension tube.

**STEP 3:** Drain away any remaining water from the reservoir within the garment steamer. To do this, loosen the water release valve on the bottom of the garment steamer by holding it over a sink, suitable container or outdoors and turn the water release valve in an anticlockwise direction.

**STEP 4:** Wipe the garment steamer main unit and accessories with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaners or scourers.

Never immerse the garment steamer main unit in water or any other liquid.

**Note:** The garment steamer does not need to be disassembled for storage.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

## In the Box

Garment Steamer

Steam head and hose

Extension tube

Hanger with built-in steam head rest

Hanger extension tube adaptor

Water tank

Fabric brush attachment


Instruction manual

## Features

1500 W power  
1 litre detachable water tank  
Ready to use in under 1 minute  
35 minutes of continuous steam  
Powerful vertical steam  
Variable steam control with 3 settings  
360 ° rotating hanger  
Adjustable height for easy storage

## Description of Parts

1. Garment Steamer main unit
2. Steam head
3. Hose
4. Hose lock
5. Hose attachment point
6. Extension tube
7. Extension tube recess
8. Extension tube lock
9. Height-adjustment locks
10. Steam head rest
11. Hanger
12. Hanger arm release button(s)
13. Extension tube adaptor
14. Water tank
15. Water tank handle
16. Water release valve
17. Variable steam control (Nylon/Silk, Wool, Cotton/Linen)
18. Power indicator light
19. Fabric brush attachment

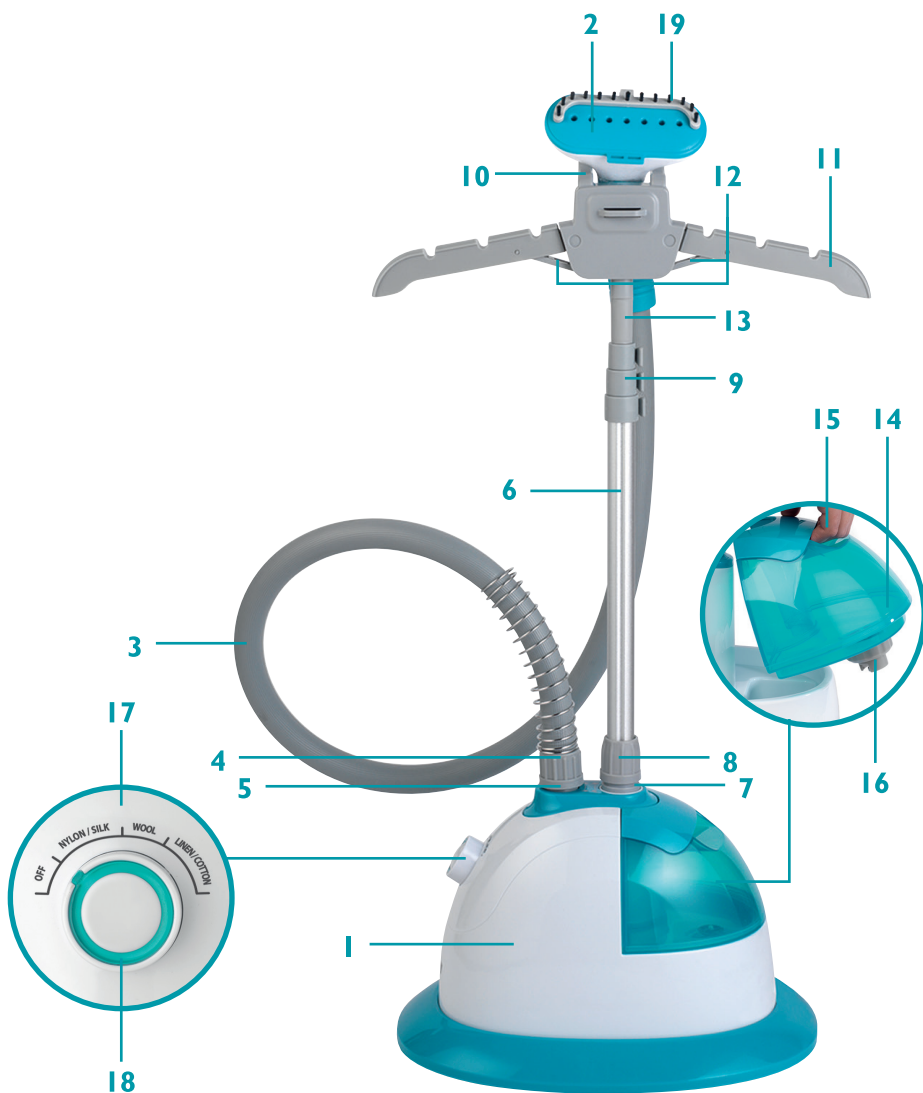

## Before First Use

Before using the garment steamer for the first time, wipe the garment steamer main unit and accessories with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the garment steamer main unit in water or any other liquid.

Allow the unit to steam for 3–4 minutes to remove any impurities that may have been left behind during production.

It is recommended to steam an old piece of cotton prior to steaming the preferred garment to check that any impurities have been removed.

**Note:** When using the garment steamer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the garment steamer.

## Instructions for Use

### Assembling the Garment Steamer

**STEP 1:** Insert the larger end of the extension tube into the extension tube recess on the top of the garment steamer main unit.

**STEP 2:** Secure the extension tube into position by twisting the extension tube lock in a clockwise direction.

**STEP 3:** To adjust the height of the extension tube, open the height-adjustment lock and then pull the extension tube upwards until the desired height is reached. Secure into position by closing the height-adjustment lock.

**STEP 4:** Attach the hanger and built-in steam head rest to the top of the extension tube by inserting the extension tube adaptor into the bottom of the hanger and then fit it onto the top of the extension tube. The steam head rest should be able to freely rotate once in position.

**STEP 5:** Insert the free end of the hose into the hose attachment point at the front of garment steamer main unit and then twist the hose lock in a clockwise direction.

**STEP 6:** Place the steam head in-between the hooks on the steam head rest.

**STEP 7:** To open up the hanger to hang garments, pull both arms outwards until they lock into position. To collapse the hanger arms, press the release buttons and simultaneously move each arm inwards.

**STEP 8:** If the fabric brush attachment is required, carefully secure it onto the steam head by inserting the locking tab into the corresponding slot.



## Using the Garment Steamer

**STEP 1:** Before switching the garment steamer on at the mains power supply, remove the water tank from the garment steamer main unit by holding the water tank handle and lifting it upwards.

**STEP 2:** Unscrew the cap on the bottom of the water tank and then fill it with water. Once full, replace the cap and refit the water tank.

**STEP 3:** Place the garment steamer onto a flat, stable surface (the floor is recommended).

**STEP 4:** Plug in and switch on the garment steamer at the mains power supply.

**STEP 5:** Switch on the garment steamer by turning the variable steam control to 'Silk/Nylon', 'Wool' or 'Cotton/Linen', depending upon the type of garment to be steamed.

**STEP 6:** The power indicator light will illuminate to signal that the garment steamer is heating up and will start producing steam after approx. 60 seconds.

**STEP 7:** Hang the garment to be steamed on the hanger.

**STEP 8:** Press the steam head gently against the fabric and carefully steam the garment using long, straight downwards movements to remove any wrinkles or creases.

**STEP 9:** Switch off the garment steamer by turning the variable steam control to the 'Off' position.

**Note:** If the water tank is not empty and it is removed during use, water will collect in the recess underneath. This is normal and is not a fault.

**Caution:** During operation, the hose and extension tube will get very hot; exercise extreme caution.

**Warning:** Do not fill the water tank with hot water or any cleaning fluids/detergents other than those supplied or highlighted. Never twist the hose or block the steam holes, as this could damage the garment steamer and potentially cause a hazard.

## Troubleshooting

Problem	Reason	Solution
The garment steamer does not heat up.	There is no power reaching the garment steamer.	Connect the plug to the mains power supply and switch it on.
	The variable steam control is set to the 'Off' position.	Turn the variable steam control to either 'Silk', 'Linen' or 'Hemp', depending upon the garment to be steamed.
	The fuse has blown.	Replace the fuse with one of the same rating.
No steam is being emitted from the garment steamer.	There is insufficient water in the water tank.	Switch off the garment steamer by turning the variable steam control to the 'Off' position and then switch the garment steamer off at the mains power supply. Refill the water tank.
The steam head is dripping excess water.	There is condensation inside the hose.	Remove the hose and then turn the steam head upside down to rid it of any excess water.
The hose makes a buzzing noise.	The hose is tangled.	Untangle the hose.
	The steam head is lower than the garment steamer base.	Make sure that the steam head is used above the garment steamer main unit.

The power indicator light does not illuminate.	The fuse has blown.  There is no power reaching the garment steamer.	Replace the fuse with one of the same rating.  Connect the plug to the mains power supply and switch it on.
--	--	---

## Storage

Before storing in a cool, dry place, check that the garment steamer and accessories are cool, clean and dry.

Never wrap the cord tightly around the garment steamer; wrap it loosely to avoid causing damage.

## Specifications

Product code: BEL0578

Input: 220–240 V ~ 50/60 Hz

Output: 1500 W



## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

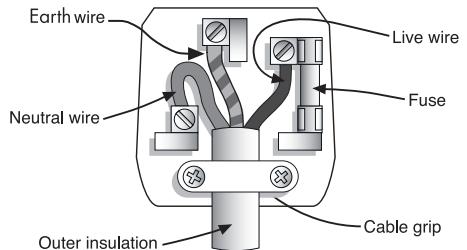

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

### UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3** YEAR  
GUARANTEE

\* To be eligible for the extended guarantee,  
go to <http://guarantee.upgs.com/beldray>  
and register your product.



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD110418/MD000000/V1

