

Beldray[®]

Est 1872

Nobody Does It Better

22.2 V Cordless Quick Vac Lite

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery pack should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

If the battery pack becomes exhausted, it should be removed from the appliance to avoid leakage.

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery pack out of reach of children.

Avoid storing the battery pack in direct sunlight.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not store above 60 °C.

Do not expose the battery pack to heat or fire as they may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in household waste.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a rechargeable 22.2 V 2200 mAh Li-ion battery pack (non-removable).

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

22.2 V Cordless Quick Vac Lite main unit

Telescopic extension tube

Flexible extension hose

Floor brush

360 ° rotating brush

Crevice tool

Upholstery tool

Small brush tool

Mains power adaptor

Instruction manual

Features

22.2 V rechargeable lithium-ion battery

Cyclonic vacuum technology

Converts to a handheld unit

Powerful suction

500 ml dust container

20–25 minutes operating time

2–3 hours charge time

Lightweight: 1.5 kg*

Flexible, extendable hose

*Weight is for handheld unit only

Description of Parts



- | | | | |
|----|-----------------------------------|-----|-------------------------------|
| 1. | Cordless Quick Vac Lite main unit | 10. | On/Off button |
| 2. | Telescopic extension tube | 11. | LED indicator display |
| 3. | Telescopic extension tube button | 12. | 500 ml removable dust tank |
| 4. | Flexible extension hose | 13. | Dust tank release handle |
| 5. | Floor brush | 14. | Dust tank empty lever |
| 6. | 360 ° rotating brush | 15. | Removable HEPA filter housing |
| 7. | Crevice tool | 16. | Washable HEPA filter |
| 8. | Upholstery tool | 17. | Charging port |
| 9. | Small brush tool | 18. | Air inlet |

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

Assembling the Cordless Quick Vac Lite

STEP 1: Charge the battery following the instructions in the section entitled 'Charging the Battery'.

STEP 2: Add the required cleaning attachment into position on the air inlet.

Note: To use the telescopic extension tube, fit it into position on the air inlet. Then fit the required cleaning attachment.

Charging the Battery

Before first use, the vacuum cleaner battery must be charged for approximately 3–4 hours. Subsequent charging will take approximately 2–3 hours.

STEP 1: Ensure that the vacuum cleaner is turned off.

STEP 2: Connect the mains power adaptor to the charging port on the battery unit.

STEP 3: Plug the mains power adaptor into the mains power supply. The light on the LED indicator display that is closest to the On/Off button will flash red and the other lights will progressively flash and then illuminate green, as the battery charges. Once the battery is fully charged, all lights on the LED indicator display will stop flashing and remain illuminated.

Note: The first light on the LED display will flash red to signal when the battery needs to be charged. Whilst charging, the battery unit may become warm. Always ensure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

Warning: Do not use any mains power adaptor other than that supplied, as using an alternative will increase the risk of injury and/or damage to the vacuum cleaner.

Using the Cordless Quick Vac Lite

STEP 1: To use the vacuum cleaner, disconnect the mains power adaptor from the battery unit after unplugging it from the mains power supply.

STEP 2: Turn on the vacuum cleaner by pressing the On/Off button.

Note: The LED indicator lights represent battery charge and will illuminate during use. Three green and one red light signal that the battery is fully charged; the LED indicator lights will extinguish one at a time as the battery runs out of charge. The usage time for the vacuum cleaner is approximately 20–25 minutes.

Warning: Do not use the vacuum cleaner without the removable HEPA filter or dust tank in position. Ensure that the removable HEPA filter is regularly cleaned to preserve the suction of the vacuum cleaner.

Using the Flexible Extension Hose

STEP 1: Fit the flexible extension hose onto the air inlet.

STEP 2: Push the crevice or small brush tool onto the end of flexible extension hose.

STEP 3: Turn on the vacuum cleaner by pressing the On/Off button.

Note: The flexible extension hose will only fit one way onto the air inlet.

Using the Floor Brush

STEP 1: Fit the telescopic extension tube onto the air inlet.

STEP 2: Push the floor brush attachment onto the end of the telescopic extension tube.

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and slide out the tube.

STEP 4: Select which setting on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

STEP 5: Turn on the vacuum cleaner by pressing the On/Off button.

Using the Crevice or Small Brush Tool

STEP 1: Fit the telescopic extension tube or flexible extension hose onto the air inlet.

STEP 2: Push the crevice or small brush tool onto the end of the telescopic extension tube or the end of the flexible extension hose. If no extension is required, push the crevice or small brush tool onto the end of the air inlet.

STEP 3: Turn on the vacuum cleaner by pressing On/Off button.

Note: The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses or other places that are hard to reach. The small brush tool is good for cleaning curtains, shelves, books and other delicate objects.

Using the 360 ° Rotating Brush Tool

STEP 1: Fit the flexible extension hose onto the air inlet.

STEP 2: Push the 360 ° rotating brush tool onto the end of the flexible extension hose.

STEP 3: Turn the end of the 360 ° rotating brush tool until the head is set at the desired angle.

STEP 4: Turn on the vacuum cleaner by pressing On/Off button.

Note: The 360 ° rotating brush tool is good for cleaning stairs, in corners and awkward crevices. It is recommended to only use the 360 ° rotating brush tool with the flexible extension hose.

Using the Upholstery Tool

STEP 1: Fit the flexible extension hose onto the air inlet.

STEP 2: Push the upholstery tool onto the end of the flexible extension hose.

STEP 3: Turn on the vacuum cleaner by pressing On/Off button.

Note: The upholstery tool is ideal for removing dust and dirt from folds in fabrics. It is recommended to only use the upholstery tool with the flexible extension hose.

Emptying the Dust Tank

STEP 1: To turn off the vacuum cleaner, press the On/Off button.

STEP 2: Whilst holding the vacuum cleaner main unit secure, remove the dust tank by pulling it away from the vacuum cleaner main unit with the release handle.

STEP 3: Holding the dust tank over a bin or rubbish bag, press down the dust tank empty lever to release the dust tank hatch. Empty the dust tank slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 4: To close the dust tank, simply push the lid closed until it locks back into position.

STEP 5: Replace the dust tank by aligning it with the vacuum cleaner main unit and then push it in, until it locks into position.

Note: Always ensure that the dust tank is secured into position before using the vacuum cleaner.

Cleaning the Removable HEPA Filter

STEP 1: The removable HEPA filter can only be accessed when the dust tank is open. Remove the dust tank by pulling it away from the main unit with the release handle.

STEP 2: Ensuring that the dust tank is empty, press down the dust tank empty lever to release the dust tank hatch.

STEP 3: Invert the dust tank, then turn the removable HEPA filter housing in an anticlockwise direction and remove it.

STEP 4: Remove the removable HEPA filter out of the removable HEPA filter housing using the opening at the base and then shake it, until the majority of the dust has been removed. Rinse the removable HEPA filter under clean, warm water and allow it to dry thoroughly for 24–36 hours.

STEP 5: Once the removable HEPA filter has fully dried, slot then open end of the removable HEPA filter back into the removable HEPA filter housing.

STEP 6: Refit the removable HEPA filter housing, ensuring that the locking tabs are aligned with the corresponding slots in the dust tank.

Note: Do not clean the removable HEPA filter using detergent or use external heat sources, such as a radiator to dry it.

Warning: Do not reassemble or use the vacuum cleaner until the removable HEPA filter has fully dried, as this could cause damage.

Dos and Don'ts

Do:

Check that the removable HEPA filter is kept clear of obstruction.

Make sure that the dust tank and removable HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Clean the dust tank and removable HEPA filter at least once a month.

Don't:

Use the vacuum cleaner without the removable HEPA filter or dust tank in position.

Use the vacuum cleaner to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Auto Cut-Off Device

Filters must be cleaned regularly. If they become blocked, the overheat cut-out device may activate. If the vacuum cleaner cuts out:

STEP 1: Switch it off and allow it to cool for 1 hour.

STEP 2: Empty the dust container and clean the filters.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Ensure that the removable HEPA filter is kept clean after every removal of the dust tank.

To clean the inside of the dust tank, it is possible to remove the filter housing.

Storage

Ensure that the vacuum cleaner is cool, clean and dry.

Store the mains power adaptor separately, ensuring that it is not bent at the connections, which would cause damage to the wires.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the vacuum cleaner and then plug it in and switch it on at the mains power supply.
The suction is poor.	The telescopic extension tube or air inlet is blocked. The dust tank is almost full. The removable HEPA filter is blocked.	Disconnect the attachment and remove the blockage. Empty the dust tank following the instructions in the section entitled 'Emptying the Dust Tank'. Clean the filter following the instructions in the section entitled 'Cleaning the Dust Container Filter'.
The vacuum cleaner has stopped working.	The auto cut-off device has activated due to restricted airflow.	Switch the vacuum off and allow it to cool for 1 hour. Empty the dust container and clean the filters.

Battery Removal and Disposal

The vacuum cleaner is fitted with a 22.2 V 2200 mAh Li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the vacuum cleaner, unfasten the screws and dismantle the product to gain access to the battery. This will require a crosshead screwdriver (not included).

Withdraw the battery and cut the connections using electrically insulated cutters.

To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

Specifications

Product code: BEL0581V2

Battery: 22.2 V 2200 mAh Li-ion (included)

26.5 V DC charger (included)

Dust tank capacity: 500 ml

Notes

Notes

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact the local authority for details of where to take the item for recycling.



Disposal	
 CARD PACKAGING widely recycled	 PLASTIC PACKAGING not currently recycled

Manufactured and distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD230216/MD280616/V3