

Beldray[®]

Est 1872

Nobody Does It Better

12 in 1 Steam Cleaner Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, kamdean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions. Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never force the steam unit onto the mop head as this could potentially damage the appliance.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Never leave the appliance stationary on a floor area for longer than 15 seconds.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Always wear suitable shoes when using the appliance and when

changing the accessories. Do not wear slippers or open-toed footwear. The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank once the steam cleaner main body has cooled and clean it after every use.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the precision shaped mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pad is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry.

Never use bleach or fabric softener when washing the microfibre mop head pad.

Warning: Do not turn on the steam cleaner during cleaning.

Never immerse any electrical components in water or any other liquid.

Descaling the Water Tank and Accessories

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam cleaner.

Removing Limescale

Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month.

When removing limescale, it is recommended to use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturer's instructions.

Warning: Do not leave the steam cleaner unattended whilst removing limescale.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

I2 in 1 Multifunctional Steam Cleaner main body	Angled nozzle
Handle	Grouting tool
Extension tube	Scraping tool
Precision shaped mop head	Garment and upholstery steamer cloth
Microfibre mop head pad (qty. 2)	Window/mirror cleaner
Accessory adaptor	Carpet glider
Wire round brush	250 ml measuring jug
Large round brush	Funnel
	Instruction manual

Features

1500 W power	15–20 minutes of continuous steam
350 ml water tank	Multifunctional – handheld and upright
Ready to use in 25 seconds	5 m power cord
Variable steam control	Chemical-free cleaning

Description of Parts



- | | |
|--|--|
| 1. 12 in 1 Multifunctional Steam Cleaner main body | 13. Adjustable steam control |
| 2. Handle | 14. Steam nozzle |
| 3. Handle release button | 15. Window/mirror cleaner |
| 4. Extension tube | 16. Wire round brush |
| 5. Lower cord storage clip | 17. Large round brush |
| 6. Upper cord storage clip | 18. Accessory adaptor |
| 7. Precision shaped mop head | 19. Angled nozzle |
| 8. Accessory release button | 20. Grouting tool |
| 9. Carpet glider | 21. Scraping tool |
| 10. 350 ml water tank | 22. Garment and upholstery steamer cloth |
| 11. Water tank cap | 23. 2 microfibre mop head pads |
| 12. Power indicator light | 24. 250 ml measuring jug |
| | 25. Funnel |

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, check that it is switched off and unplugged from the mains power supply.

Clean the exterior surface of the steam cleaner with a soft, damp cloth and dry thoroughly.

Assembling the I2 in I Multifunctional Steam Cleaner

Attaching the Handle

STEP 1: Making sure that the locking tabs are aligned with the corresponding slots, insert the handle into the extension tube until it locks into position.

STEP 2: Insert the assembled handle section into the steam cleaner main body until it clicks into place.

Note: The assembled handle can be removed from the steam cleaner main body for storage by pressing the handle release button.

Attaching the Precision Shaped Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body onto the precision shaped mop head, until the precision shaped mop head spindle clicks into place.

STEP 2: To remove the precision shaped mop head, simultaneously press the accessory release button and pull the steam cleaner main body away in an upwards direction.

Note: Always attach the precision shaped mop head using both hands, checking that it is locked securely into position.
The precision shaped mop head will only fit one way onto the steam cleaner main body; it must be correctly aligned.

Warning: Never force the steam cleaner main body onto the precision shaped mop head, as this could damage the steam cleaner.

Attaching the Microfibre Mop Head Pad

STEP 1: Remove the precision shaped mop head from the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

STEP 2: Attach the microfibre mop head pad onto the precision shaped mop head by aligning the hook and loop tabs.

STEP 3: Place the precision shaped mop head with the microfibre mop head pad attached, into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the precision shaped mop head to the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

Note: The microfibre mop head pad must be installed correctly before use and the carpet glider should only be used on carpets. The hook and loop tabs on the microfibre mop head pad need to be securely attached to those on the precision shaped mop head. If the carpet glider becomes loose during use, remove it along with the microfibre mop head pad and then reassemble; the microfibre mop head pad should be visible at the back of the carpet glider.

Filling the Water Tank

Always make sure that the steam cleaner is turned off and unplugged from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner main body horizontally on a flat, stable surface.

STEP 2: Carefully lift up the water tank cap.

STEP 3: Fill up the measuring jug to the 250 ml mark.

STEP 4: Using the funnel, carefully pour the contents of the measuring jug into the water tank, taking care not to overfill it.

STEP 5: Gently press the water tank cap closed, until it is secure.

Note: The water may take a couple of seconds to rise, so allow time for this before adding in more, ensuring that the water tank is not overfilled.

Caution: Do not attempt to fill the water tank whilst the steam cleaner is turned on, as this could cause damage to the unit. Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the I2 in I Multifunctional Steam Cleaner

As an Upright Steam Cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the I2 in I Multifunctional Steam Cleaner'.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: Turn the adjustable steam control clockwise until a click is heard. The power indicator light will illuminate green, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature (approx. 25 seconds), steam operation will automatically activate.

STEP 5: Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

As a Handheld Steamer

STEP 1: Remove the handle by pressing the handle release button and pull it up and away from the steam cleaner main body.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Insert the accessory adaptor into the steam nozzle, until it locks into position.

STEP 4: Attach the required accessory by aligning the small and large locking tabs on the accessory adaptor with the corresponding slots on the accessory. Turn the accessory in a clockwise direction, to secure it into position; the arrow indicators must be aligned.

STEP 5: Plug in and switch on the steam cleaner at the mains power supply.

STEP 6: Turn the adjustable steam control clockwise until a click is heard. The power indicator light will illuminate green, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature (approx. 25 seconds), steam operation will automatically activate.

STEP 7: Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

Note: A full water tank will supply approx. 15–20 minutes of continuous steam. Steam will run continuously until the water tank is empty or the adjustable steam control is in the 'Off' position.

Caution: Do not attempt to use the steam cleaner as a handheld steamer whilst the handle is inserted.

Never leave the appliance stationary on a floor area for longer than 15 seconds.

The handheld unit will become hot during use.

Accessories

Accessory	Suggested Use	Further Usage Information
Accessory Adaptor	For precision cleaning of places or crevices that are not readily accessible.	The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner.
Window/ Mirror Cleaner	Ideal for a streak-free shine, cleaning shower screens, mirrors and glass.	Always guarantee that the glass is not cold or frozen and that the lowest steam setting is selected to prevent damage to the surface.
Wire Round Brush Large Round Brush	Both round brush accessories are perfect for cleaning ovens, hobs, showers, BBQs, taps and sanitaryware.	The wire round brush is best for removing ingrained dirt from scratch-resistant surfaces. The large round brush is best for stubborn stains and removing residue from kitchen and bathroom surfaces. Allow hot surfaces to cool to room temperature before using the round brushes.
Angled Nozzle	Good for those hard to reach places, such as stovetops, sanitaryware, taps and sinks.	Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at the non-permanent stain, whilst holding a clean cloth near to the marked area to capture any loosened dirt.
Grouting Tool	Ideal for cleaning grout in kitchens and bathrooms.	Use a low steam setting and apply light pressure.
Scraping Tool	Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard to remove substances. Ideal for use on surfaces such as hobs and ovens or for helping to de-ice the freezer.	Allow hot surfaces to cool to room temperature before using the scraping tool.

Garment and Upholstery Steamer Cloth	Steaming garments, curtains, tablecloths, carpets and upholstery.	Ideal for removing wrinkles from garments, leaving them crease-free and great for refreshing and cleaning upholstery.
Microfibre Mop Head Pad	For the general cleaning of hard floors.	Use a low steam setting for wood floors and a higher steam setting for tiled floors.
Carpet Glider	For ease of use on carpets.	To prevent carpets from becoming wet, use a low steam setting.

Warning: Exercise caution when using the wire round brush, as it has very sharp bristles. Never hold the wire round brush by the bristles, always use the main body.

Troubleshooting

Problem	Possible Reason	Possible Solution
Reduced or no steam/ abnormal noise.	<p>The water tank may be empty.</p> <p>The steam nozzle may be blocked.</p> <p>There is no power to the steam cleaner.</p> <p>There may be a limescale build-up.</p> <p>The adjustable steam control is set to the 'Off' position.</p>	<p>Add water to refill the water tank.</p> <p>Clean the steam nozzle.</p> <p>Make sure that the steam cleaner is plugged into the mains power supply.</p> <p>Descale the steam cleaner using the instructions in the 'Removing Limescale' section.</p> <p>Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam.</p>
The steam cleaner does not turn on.	<p>There is a blown fuse or breaker.</p> <p>The power cord is not plugged in.</p>	<p>Check the fuse by replacement or reset the breaker.</p> <p>Plug the power cord into a working mains power supply.</p>
The handle is stuck in the steam cleaner main body.	The handle clip may be stiff due to limited or no use.	Press the handle release button and push the handle down simultaneously.

Storage

Before storing the steam cleaner in a cool, dry place, check that it is cool, clean and dry and that the water tank is empty.

Remove the microfibre mop head pad, making sure that it has been cleaned according to the instructions in the 'Care and Maintenance' section.

Specifications

Product code: BEL0598

Input: 220–240 V ~ 50/60 Hz

Output: 1500 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

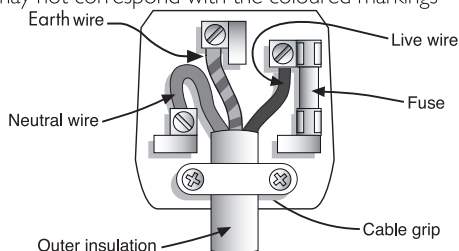

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 1 year guarantee



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD180417/MD250717/V2

