

Beldray[®] Est 1872

Nobody Does It Better

22.2 V Cordless Quick Vac Lite Instruction Manual



**22.2 V
LI-ION
BATTERY**



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged; only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The battery pack should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

If the battery pack becomes exhausted, it should be removed from the appliance to avoid leakage.

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep battery pack out of reach of children.

Avoid storing battery pack in direct sunlight.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not store above 60 °C.

Do not expose battery unit to heat or fire as they may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in your household waste.

To dispose of the exhausted battery pack, take it to a local recycling station.

Contact the local government offices for further details.

This appliance is fitted with a 22.2 V 2200 mAh Li-ion battery pack (non-removable).

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

22.2 V Quick Cordless Lite main unit

2 aluminium extension tubes

Flexible hose

Floor brush

Slim crevice tool

2 in 1 brush and crevice tool

Mains power adaptor

Instruction manual

Features

22.2 V rechargeable lithium-ion battery

Removable battery pack

Cyclonic vacuum technology

Powerful suction

Flexible, extendable hose

300 ml dust container



20 minutes operating time

3–4 hours charging time

Lightweight: 1.2 kg*

*Weight is for handheld unit only

Description of Parts

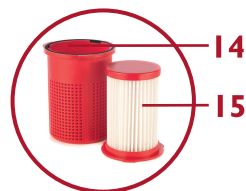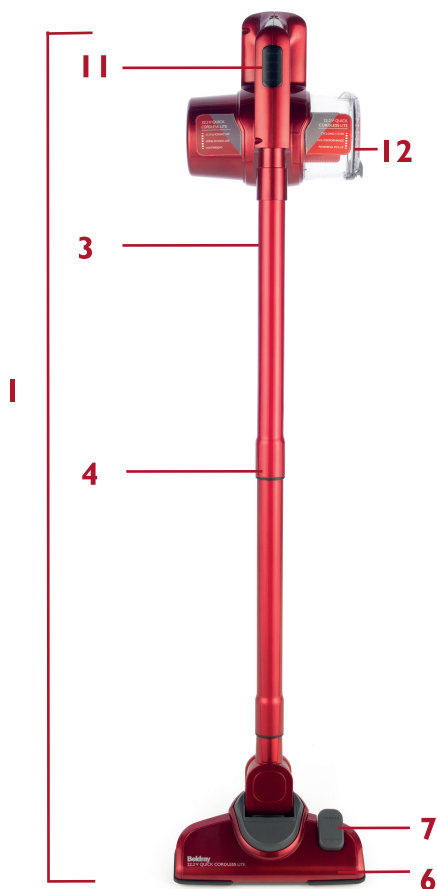

1. Quick Cordless Lite main unit
2. Removable battery pack
3. Battery pack release button
4. Aluminium extension tubes
5. Flexible hose
6. Floor brush
7. Floor brush switch
8. Slim crevice tool
9. 2 in 1 brush and crevice tool

10. Power trigger
11. LED display
12. 300 ml removable dust container
13. Dust container lid release
14. Removable HEPA filter housing
15. Washable HEPA filter
16. Charging port
17. Air inlet

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, wipe it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

Charging the Battery

Before first use, the vacuum cleaner battery must be charged for approximately 4–5 hours. Subsequent charging will take approximately 3–4 hours.

STEP 1: Ensure that the vacuum cleaner is turned off.

STEP 2: Connect the mains power adaptor to the charging port on the battery unit.

STEP 3: Plug the mains power adaptor into the mains power supply. The lights on the LED display will flash progressively as the battery charges. Once the battery is fully charged, all the lights on the LED display will remain illuminated.

Warning: Do not use any mains power adaptor other than that supplied, as using an alternative will increase the risk of injury and/or damage to the vacuum cleaner.

Using the Quick Cordless Lite

STEP 1: To use the vacuum cleaner, unplug it from the mains power supply and disconnect the power adaptor from the battery.

STEP 2: Turn on the vacuum cleaner by holding the power trigger.

STEP 3: Turn off the vacuum cleaner by releasing the power trigger.

Note: The lights on the LED display represent battery charge and will illuminate during use. The lights will extinguish one at a time as the battery charge depletes. The usage time for the vacuum cleaner is approximately 20 minutes.

Warning: Do not use the vacuum cleaner without the removable HEPA filter or dust container in position. Ensure that the removable HEPA filter is regularly cleaned to preserve the suction and prolong the life of the vacuum cleaner.

Using the Flexible Hose

The flexible hose can be extended to 1.25 m to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Fit the flexible hose onto the air inlet.

STEP 2: Push the slim crevice tool or 2 in 1 brush and crevice tool onto the end of the extension hose.

STEP 3: Turn on the vacuum cleaner by holding the power trigger.

STEP 4: Turn off the vacuum cleaner by releasing the power trigger.

Using the Floor Brush

STEP 1: Fit one aluminium extension tube onto the air inlet, then add the second tube onto the end of the first.

STEP 2: Push the floor brush attachment onto the end of the second aluminium extension tube.

STEP 3: Select which floor brush setting is required for the floor type by pressing the floor brush switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

STEP 4: Turn on the vacuum cleaner by holding the power trigger.

Using the Slim Crevice Tool

STEP 1: Fit the aluminium extension tube or flexible hose onto the air inlet.

STEP 2: Push the slim crevice tool onto the end of the aluminium extension tube or the end of the flexible hose. If no extension is required, push the slim crevice tool onto the end of the air inlet.

STEP 3: Turn on the vacuum cleaner by holding the power trigger.

Note: The slim crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses or other places that are hard to reach.

Using the 2 in 1 Brush and Crevice Tool

The 2 in 1 brush and crevice tool can be used as an upholstery brush, to gently vacuum car seats, sofas and curtains. The wide nozzle function can be used to cover larger surface areas when vacuuming hard to reach places.

STEP 1: Fit the aluminium extension tube or flexible hose onto the air inlet.

STEP 2: Push the 2 in 1 brush and crevice tool onto the end of the aluminium extension tube or the end of the flexible hose. If no extension is required, push the 2 in 1 brush and crevice tool onto the end of the air inlet.

STEP 3: Select the function required by rotating the brush head around the tip of the tool.

STEP 4: Turn on the vacuum cleaner by holding the power trigger.

Emptying the Dust Container

It is recommended to empty the dust container outdoors.

STEP 1: Whilst securely holding the vacuum cleaner main unit, remove the dust container by gripping it firmly and rotating it in an anticlockwise direction.

STEP 2: Once the dust container is loose, pull it away from the vacuum cleaner main unit.

STEP 3: Holding the dust container over a bin or refuse bag, pull the dust container lid release to open the dust container. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 4: To close the dust container, push the lid closed until it locks back into position.

STEP 5: Replace the dust container by aligning it with the vacuum cleaner main unit and then push it in and rotate it until it locks into position.

Note: Always ensure that the dust container is secured into position before using the vacuum cleaner.

Cleaning the Removable HEPA Filter

The HEPA filter can only be accessed when the dust container has been removed.

STEP 1: Remove the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, open the dust container lid. Hold the HEPA filter housing and rotate it in an anticlockwise direction to unlock it, so that it can be removed from the dust container.

STEP 3: Pull the HEPA filter out of the HEPA filter housing using the handle at the base. Shake the filter until the majority of the dust has been removed.

STEP 4: Rinse the removable HEPA filter under clean, warm water and allow it to dry thoroughly for approximately 24 hours.

STEP 5: Once the HEPA filter is fully dry, slot the end of the removable HEPA filter back into the HEPA filter housing.

STEP 6: Refit the HEPA filter housing, ensuring that the locking tabs are aligned with the corresponding slots on the dust container. Twist the HEPA filter housing in a clockwise direction to lock it back into position.

Note: Do not clean the HEPA filter using detergents or use external heat sources such as radiators to dry it.

Warning: Do not reassemble or use the vacuum cleaner until the removable HEPA filter is fully dry, as this could cause damage.

Dos and Don'ts

Do:

Check that the removable HEPA filter is kept clear of obstruction.

Make sure that the dust tank and removable HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Clean the dust container and removable HEPA filter at least once a month.

Don't:

Use the vacuum cleaner without the removable HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Ensure that the removable HEPA filter is kept clean after every removal of the dust container.

To clean the inside of the dust container, it is possible to remove the HEPA filter housing.

Storage

Ensure that the vacuum cleaner is cool, clean and dry.

Store the mains power adaptor separately, ensuring that it is not bent at the connections, which would cause damage to the wires.

Store in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the vacuum cleaner and then plug it in and switch it on at the mains power supply.
The suction is poor.	The accessory or air inlet is blocked.	Disconnect the accessory and remove the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The removable HEPA filter is blocked.	Clean the filter following the instructions in the section entitled 'Cleaning the Removable HEPA Filter'.

Battery Removal and Disposal

The vacuum cleaner is fitted with a 22.2 V 2200 mAh Li-ion battery, which must be disposed of at the end of the appliances life.

To remove the battery from the vacuum cleaner, unfasten the screws and dismantle the product to gain access to the battery. This will require a crosshead screwdriver (not included).

Remove the battery and cut the connections using electrically insulated cutters.

To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

Specifications

Product code: BEL0625

Battery: 22.2 V 2200 mAh Li-ion (included)

27.8 V 0.6 A DC charger (included)

Dust tank capacity: 300 ml

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Manufactured by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD, UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD280916/MD061016/V2