

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Window Cleaning Vacuum

### Instruction Manual



Clean



Vacuum



Streak-free

NO DRIPS  
NO STREAKS  
QUICK &  
EASY



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)



**Please read all of the instructions carefully before use and retain for future reference.**



**This product is not designed to pick up spills.**

**Only use this product in a vertical position, do not use it in a horizontal position.**

**If the product is used in a horizontal position, water will leak out of the vents. This could cause injury to the user or damage to the product.**

**Using the product in a horizontal position will void the warranty.**



## **Safety Instructions**

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. Only qualified electricians should carry out repairs if the power adaptor, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged. Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of reach of children.

Keep the appliance and its power adaptor away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails.

Do not fit any parts other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance with hot water, caustic cleaning detergents or window cleaning solutions.

Do not use the appliance for anything other than its intended use.

Do not leave the appliance unattended whilst connected to the mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

The use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not store the appliance in direct sunlight or in high humidity conditions.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

## **Battery Safety**

The battery unit should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

Once the battery is exhausted, it should be removed from the appliance to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery unit out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose the battery to heat or fire as it may explode.

Do not subject the battery to mechanical shock.

Do not dispose of the exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station. Contact your local government offices for further details.

This appliance is fitted with a 3.7 V 1700 mAh Li-ion secondary (rechargeable) battery.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Window Cleaning Vacuum main body

Squeegee vacuum head

Removable 130 ml water tank

5 V 1 A DC power adaptor

Instruction manual

## Features

Lightweight and compact

Removable 130 ml water tank

25–30 minutes continuous use

3.7 V rechargeable battery

Leaves windows and mirrors with a streak-free finish

## Description of Parts



- 1. Window Cleaning Vacuum main body
- 2. Squeegee vacuum head
- 3. On/Off button
- 4. 130 ml removable water tank
- 5. Water tank release button
- 6. Water tank plug

- 7. Charging port
- 8. Handle
- 9. 130 ml Max. fill level
- 10. Squeegee vacuum head locking tab/release button
- 11. Charging indicator light

## Instructions for Use

### Before Using the Window Cleaning Vacuum

Before using the Window Cleaning Vacuum for the first time, wipe the main body and squeegee vacuum head with a soft, damp cloth and dry thoroughly. Do not immerse the Window Cleaning Vacuum main body in water or any other liquid.

Ensure that the squeegee vacuum head is free from any debris (e.g. hair) that could ruin the streak-free finish or damage the surface of the glass.

### Assembling the Window Cleaning Vacuum

**STEP 1:** Attach the squeegee vacuum head by inserting it onto the top of the Window Cleaning Vacuum main body, until it locks into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

**STEP 2:** Ensure that the water tank is secure, with the water tank plug firmly in position. Failure to do so will result in water leaking from the main body, which could result in damage to the Window Cleaning Vacuum or injury to the user.

**Note:** The squeegee vacuum head will only clip onto the Window Cleaning Vacuum main body one way. The water tank and the main body of the Window Cleaning Vacuum will come assembled but can be dismantled for cleaning, following the instructions in the section entitled 'Care and Maintenance'.

### Charging the Window Cleaning Vacuum

Before first use, the Window Cleaning Vacuum must be charged fully. This will take approximately 3–4 hours.

**STEP 1:** Plug the mains power adaptor into the mains power supply.

**STEP 2:** Connect the lead from the mains power adaptor to the charging port on the Window Cleaning Vacuum. The indicator light will flash to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate fully.

**Note:** Whilst charging, the Window Cleaning Vacuum may become warm. Exercise caution when charging the Window Cleaning Vacuum; ensure that it is stood upright on a dry, stable surface away from other appliances.

**Warning:** Do not leave the Window Cleaning Vacuum unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the Window Cleaning Vacuum from the mains power supply immediately.

### Using the Window Cleaning Vacuum

**STEP 1:** Switch off and unplug the Window Cleaning Vacuum from the mains power supply and then disconnect the mains power adaptor from the Window Cleaning Vacuum main body.

**STEP 2:** Using warm, soapy water and a sponge or soft cloth, wash over the area of the window to be cleaned.

**STEP 3:** To turn on the Window Cleaning Vacuum, press the 'On/Off' button.

**STEP 4:** Place the squeegee vacuum head against the window surface in a vertical position.

**STEP 5:** Clean the window from the top to bottom, in long, straight, downward movements. This will avoid leaving drip marks or smears and will leave the window with a streak-free finish.

**STEP 6:** The Window Cleaning Vacuum can be used to remove any excess water remaining on the window surface. Whilst switched on, hold the Window Cleaning Vacuum vertically where the excess water has collected and allow it to suck up the liquid.

**STEP 7:** Turn off the Window Cleaning Vacuum by pressing the 'On/Off' button.

**Note:** Ensure that the water tank plug is securely fitted to avoid leakage from the water tank.

**Warning:** Do not use the Window Cleaning Vacuum to pick up anything other than water or diluted detergent. Glass cleaning solutions should not be used, as they could result in damage to the Window Cleaning Vacuum or injury to the user.

### Emptying the Water Tank

**STEP 1:** Ensure that the Window Cleaning Vacuum is switched off and unplugged from the mains power supply.

**STEP 2:** Remove the water tank by pressing the water tank release button and then pulling it out and away from the Window Cleaning Vacuum main body.

**STEP 3:** Unplug the water tank plug from the front of the water tank and tilt to drain away any excess water.

**STEP 4:** Reattach the water tank plug and then reinsert the water tank into the Window Cleaning Vacuum main body, until it clicks into position. Always ensure that the water tank plug is secured back into position after emptying the water tank.

**Note:** The water tank should be emptied after each use.

**Warning:** Do not allow the water tank to fill beyond the 130 ml Max. fill level.

## Care and Maintenance

Always turn off the Window Cleaning Vacuum and ensure that it is unplugged from the mains power supply before attempting any cleaning or maintenance.

**STEP 1:** Remove the water tank following the instructions in the section entitled 'Emptying the Water Tank'.

**STEP 2:** Detach the squeegee vacuum head by pressing the squeegee vacuum head locking tab and pulling the squeegee vacuum head upwards and away from the Window Cleaning Vacuum main body.

**STEP 3:** Wipe the Window Cleaning Vacuum main body, squeegee vacuum head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

**Note:** The Window Cleaning Vacuum should be cleaned after each use.

## Storage

Before storing, ensure that the water tank has been emptied and that the Window Cleaning Vacuum is cool, clean and dry.

Store in a cool, dry place.

**Note:** If the battery is flat, it is recommended to charge the Window Cleaning Vacuum slightly before storage. This will help to prolong the life of the battery. The Window Cleaning Vacuum may need to be recharged after storage, before the next use.

## Battery Removal and Disposal

The Window Cleaning Vacuum is fitted with a 3.7 V 1700 mAh Li-ion secondary (rechargeable) battery, which must be disposed of at the end of the appliances life.

To remove the battery from the Window Cleaning Vacuum, unfasten the screws and dismantle the product to gain access to the battery. This will require a TX10 Torx screwdriver (not included).

Remove the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery unit, take it to the local recycling station. Contact the local government offices for further details.

## Specifications

Product code: BEL0629V2

Battery: 3.7 V 1700 mAh Li-ion battery (included)

5 V 1 A DC charger (included)

Water tank volume: 130 ml

## **UP Global Sourcing**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:  
UP Global Sourcing,  
Victoria Street, Manchester OL9 0DD, UK  
+44 (0)333 577 9820  
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.  
CD290416/MD000000/V1