

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## AIRGO CORDLESS

Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## **Battery Safety**

The supply terminals are not to be short-circuited.

In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Avoid storing in direct sunlight.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for further details. This product is fitted with a 21.6 V 2150 mAh Li-ion battery (non-removable).

## **Battery Removal and Disposal**

The vacuum cleaner is fitted with a 21.6 V 2150 mAh Li-ion battery unit, which must be disposed of at the end of the appliances life.

To remove the battery from the vacuum cleaner, unfasten the screw and dismantle the product to gain access to the battery. This will require a crosshead screwdriver (not included).

Withdraw the battery and unclip the live and neutral terminal connections. To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

## **Care and Maintenance**

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents cleaning agents to clean any part of the vacuum cleaner.

Ensure that the filters are kept clean and are replaced when they become worn.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

AirGo Cordless

DC power adaptor

Instruction manual

## Features

High performance

Quick recharge time: 4 hours

Long-lasting battery power: up to 50 minutes operating time

Ergonomic and ultra lightweight: 3.1 kg

## Description of Parts



1. AirGo Cordless main unit
2. Power switch
3. Upper handle
4. Lower handle
5. Power indicator light
6. Abnormal operation light
7. Floor head
8. Brush bar
9. Brush bar release button
10. Charging port

11. Dust container
12. Dust container release button
13. Dust container lid
14. Dust container base
15. Dust container push release clip
16. Dust container twist release
17. Washable filter
18. Exhaust vent
19. Exhaust filter

## Instructions for Use

### Before First Use


Before using the vacuum cleaner for the first time, wipe all parts with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Assembling the AirGo Cordless

Assemble the vacuum cleaner by slotting the upper handle into the lower handle until it clicks, making sure that the power switch on the upper handle is facing towards the front (**Fig. 1**).

 (Fig. 1)

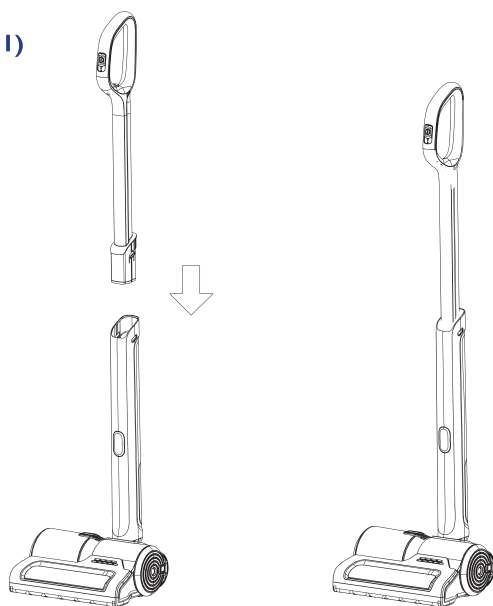

### Charging the AirGo Cordless

Before first use, the vacuum cleaner must be charged for approx. 4 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4 hours to fully recharge.

**STEP 1:** Connect the lead from the power adaptor to the charging port on the back of the vacuum cleaner.

**STEP 2:** Plug the power adaptor into the mains power supply; the power indicator light will flash progressively as the battery charges. Once the battery is fully charged, the power indicator light will become solid and the vacuum cleaner will automatically stop charging, to preserve the lifespan of the battery.

**Warning:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

### Using the AirGo Cordless

**STEP 1:** Ensure that the vacuum cleaner is unplugged from the mains power supply.

**STEP 2:** To turn on the vacuum cleaner, slide the power button; the power indicator light will illuminate blue to signal that it has powered on.

**STEP 3:** The vacuum cleaner has a dual speed motor; the low speed setting will give 50 minutes of operation and the high speed setting will give 25 minutes of operation. Slide the power button half way down for the low speed setting and all the way down for the high speed setting.

**STEP 4:** Turn off the vacuum cleaner by sliding the power button back up.

### Abnormal Operation Light

The abnormal operation light is located on the left-hand side of the floor head. This will illuminate if the dust container is overfilled or if the brush bar stops rotating due to a build-up of debris. If this happens, follow the instructions in the sections entitled 'Cleaning the Washable Filter' and the 'Cleaning the Floor head'.


### Emptying the Dust Container

Before emptying the dust container, ensure that the vacuum cleaner is switched off and unplugged from the mains power supply.


It is recommended to empty the dust container outdoors.

**STEP 1:** Press and hold the dust container release button (**Fig. 2**) and then carefully pull the dust container away from the vacuum cleaner main unit (**Fig. 3**).

**Fig. 2**

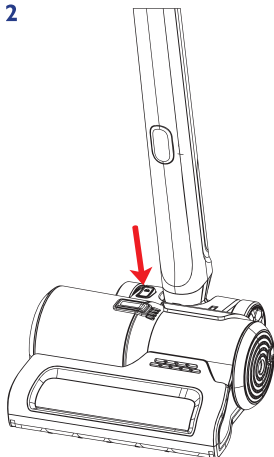 


**Fig. 3**

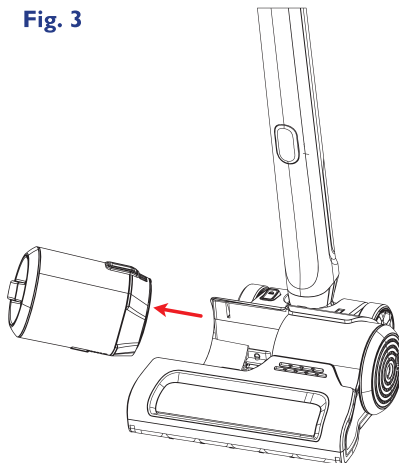 



**STEP 2:** Open the dust container lid by rotating it in a clockwise direction (**Fig. 4**).

 **Fig. 4**

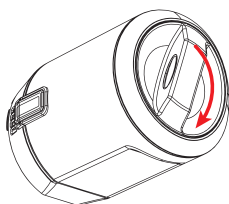


**STEP 3:** Holding the dust container over a bin or refuse bag, empty out the larger dust particles slowly and carefully to reduce the amount of dust released back into the atmosphere.

**STEP 4:** Reattach the dust container lid, making sure that it is aligned properly by twisting it in an anticlockwise direction to secure it into position.

**STEP 5:** Press the dust container push release clip to open the base (**Fig. 5**).

 
**Fig. 5**

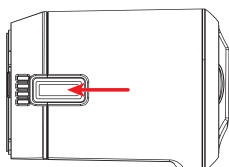

**STEP 6:** Holding the dust container over a bin or refuse bag, empty out the finer dust particles slowly and carefully to reduce the amount of dust released back into the atmosphere.

**STEP 7:** Reattach the dust container to the vacuum cleaner by aligning the arrow on the dust container with the arrow on the floor head, pushing it into the unit, until it clicks (**Fig. 7**).

 **Fig. 7**

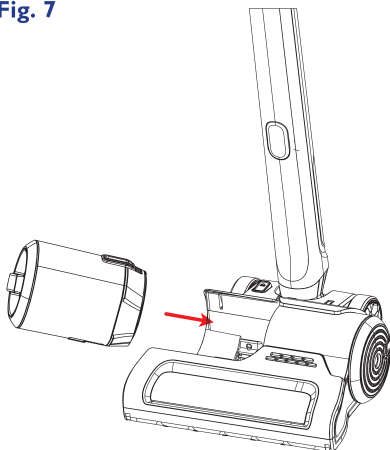

**Note:** The dust container can be cleaned once emptied by rinsing it under clean, warm water. Allow it to dry thoroughly for approximately 24 hours before refitting.

Do not use the vacuum cleaner without the dust container in position.

### **Cleaning the Washable Filter**

The washable filter can only be accessed when the dust container has been removed from the vacuum cleaner main unit.

Keeping the filter free from any obstructions helps to preserve suction and prolong the life of the vacuum cleaner by allowing air to flow freely around the unit.

**STEP 1:** Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

**STEP 2:** Pull the filter housing out of the dust container using the handles by rotating it in a clockwise direction.

**STEP 3:** Separate the filters, hold them over an outside bin or refuse bag and gently shake off any dust and dirt. Once the majority has been removed, rinse away any residue under cold water. Repeat for the filter housing. Allow them to dry thoroughly.

**STEP 4:** Once the filters have fully dried, refit them back into the filter housing. Place the filter housing back into the dust container, lock by rotating it in anticlockwise direction and then replace the dust container onto the vacuum cleaner, aligning the arrow on the dust container with the arrow on the floor head.

**Note:** It is recommended that the filters be cleaned every three weeks with clean water to keep the vacuum cleaner performing at its best. Replace the filters when they become worn. Do not clean the filters using detergent. Never use external heat sources, such as a radiator to dry the filters.

### **Cleaning the Exhaust Filter**

The exhaust filter is located on the side of the vacuum cleaner.

**STEP 1:** To remove the exhaust filter, push the clip on the exhaust vent and pull the vent away from the vacuum cleaner main unit.

**STEP 2:** Take the exhaust filter out of the vent and shake it over an outside bin or refuse sack until the majority of the dust and debris has been removed. Rinse it under clean, warm water and allow it to dry naturally.

**STEP 3:** Once the exhaust filter has dried fully, slot it back into the exhaust vent and replace the vent back onto the vacuum cleaner main unit.

**Warning:** Do not use the vacuum cleaner without the exhaust filter in place.

## Cleaning the Floor head

It is important to clean the floor head and brush bar on a regular basis, as this will help to maintain optimum cleaning performance. The brush bar can be removed from the floor head for easy cleaning.

**STEP 1:** Ensure that the vacuum cleaner is switched off and unplugged from the mains power supply.

 
**STEP 2:** Slide the brush bar release button and lift the brush bar latch (**Fig. 8**).

**STEP 3:** Using a screwdriver, unlock the brush bar lock by twisting it in a clockwise direction; this will allow the brush bar cover to be removed and give access to the brush bar (**Fig. 9**).

**STEP 4:** Lift the brush bar out of the floor head. Remove any built-up debris from the brush bar, inside the floor head and the air inlet.

**STEP 5:** Replace the brush bar, aligning the ends with the corresponding slots on the floor head.

**STEP 6:** Reattach the brush bar cover, twisting the lock in an anticlockwise direction to lock it securely into place. Shut the brush bar latch, making sure that the brush bar release button is in the locked position.

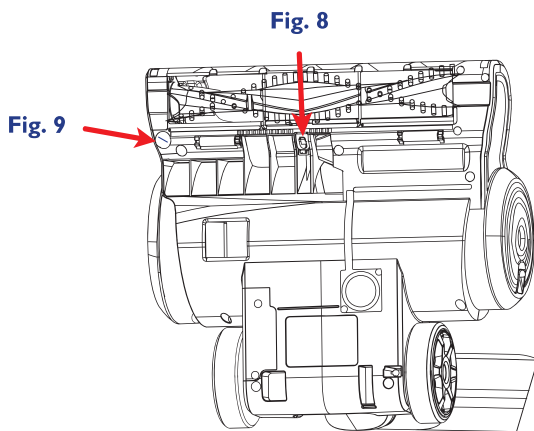

## Troubleshooting

|  |  |  |
|--|--|--|
| The vacuum cleaner will not charge.          | The mains power adaptor is not securely connected.   | Plug the mains power adaptor into the mains power supply, ensuring that it is switched on and then follow the instructions in the section entitled 'Charging the AirGo Cordless'.  |
| The suction is poor.                         | <p>The dust container is almost full.</p> <p>The filters are blocked.</p> <p>The floor head and brush bar have a build-up of debris.</p> | <p>Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.</p> <p>Clean the filters following the instructions in the sections entitled 'Cleaning the Washable Filter' and 'Cleaning the Exhaust Filter'.</p> <p>Clean the floor head and brush bar following the instructions in the section entitled 'Cleaning the Floor head'.</p> |
| The abnormal operation light is illuminated. | The brush bar has stopped rotating/the dust container is overfilled.   | Follow the instructions in the sections entitled 'Cleaning the Washable Filter' and the 'Cleaning the Floor Head'.   |

## Specifications

Product code: BEL0652

Battery: 21.6 V 2150 mAh Li-ion (included)

26.5 V charging adaptor (included)

Dust tank capacity: 1 litre

## Notes

**UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>  
to register your product for a 1 year guarantee



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD030417/MD000000/V1

