

# Beldray<sup>®</sup>


Est 1872

Nobody Does It Better

## Can Instruction Manual



Perfect for any  
liquid spills

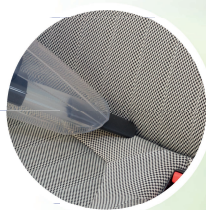

Perfect for  
use in cars



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories or adaptors.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

The hose should be checked regularly and must not be used if damaged.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Battery Safety

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery pack out of the reach of children.

Secondary battery packs need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.

Do not leave battery packs on charge for prolonged periods of time.

Do not use any charger other than that specifically provided for use with the product.

The supply terminals are not to be short-circuited.

Do not store above 60 °C. Avoid storing in direct sunlight.

Do not use any battery packs that are not designed for use with the product.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not dismantle, open or shred battery packs.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in household waste.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a non-removable 7.4 V 2200 mAh Li-ion battery pack.



## Care and Maintenance

Always unplug the vacuum cleaner from mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Do not immerse the vacuum cleaner in water or any other liquid.

Keep the washable filter clean after every removal of the dust container.

## Dos and Don'ts

### Do:

Check that the washable filter is kept clear of obstruction.

Make sure that the dust container and washable filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Empty any liquid immediately after picking up liquid spills.

Clean the dust container and washable filter at least once every three weeks.

### Don't:

Use the vacuum cleaner without the washable filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Empty the dust container indoors.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Cordless Wet and Dry Vac

Washable filter with waterproof cover

Dust container

Crevice tool

Squeegee nozzle

Wall-mountable charging base

with built-in mains power adaptor

Instruction manual

## Features

7.4 V rechargeable lithium-ion battery

4.5 hours charge time


Up to 20 minutes operating time

Includes crevice tool, squeegee tool  
and wall mountable charging base

Washable filter

Lightweight: less than 1 kg

## Description of Parts

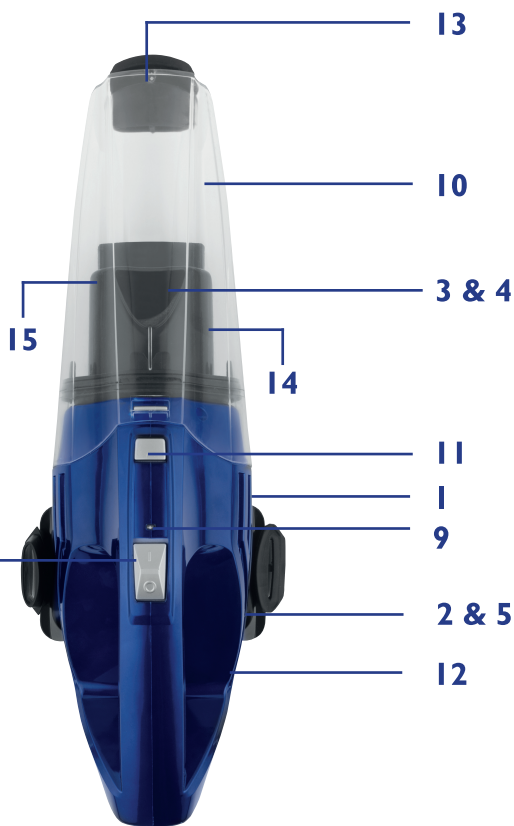

1. Cordless Wet and Dry Vac
2. 7.4 V rechargeable battery unit
3. Washable filter
4. Waterproof cover
5. Wall-mountable charging base
6. Crevice tool
7. Squeegee nozzle
8. On/off switch

9. Indicator light
10. Dust container
11. Dust container release button
12. Charging port
13. Air inlet
14. Liquid Max. fill mark (~)
15. Dry Max. fill mark (-)

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

### Installing the Wall-mountable Charging Base

The wall-mountable charging base can be placed onto a flat, stable surface or fixed to a wall. It should be located close enough to a mains power supply to allow it to be plugged in without overstretching the cable.

**STEP 1:** Using a pencil, mark the positions of two screw holes, 65 mm apart, on the desired surface. The markings should be horizontally aligned using a spirit level (not included).

**STEP 2:** Using a suitable drill bit, no larger than 5 mm in diameter, drill 30 mm deep pilot holes into the markings. Consult a qualified professional if required.

**STEP 3:** Firmly place the wall plugs into the pilot holes so that they sit flush with the surface of the wall.

**STEP 4:** Position the wall-mountable charging base onto the surface, aligning the holes on the surface with those on the wall-mountable charging base.

**STEP 5:** Insert the screws provided through the wall-mountable charging base and into the wall and tighten so that the wall-mountable charging base sits flush with the surface.

**STEP 6:** Place the attachments into the accessory holders and slide the vacuum cleaner into position on the wall-mountable charging base, ensuring that it engages with the supports.

**Note:** Check that the chosen surface is strong enough to support the wall-mountable charging base. Consult a qualified professional if required.

**Caution:** Check that there are no electrical, plumbing or gas supplies situated beneath the surface of the wall. These services normally run vertically or horizontally behind the wall, and the electrical wiring will radiate from the socket, possibly in more than one direction. Testers are available from good DIY stores. Consult a qualified professional if required.

## Charging the Cordless Wet and Dry Vac

Before using the vacuum cleaner, it must be charged for approx. 5–6 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery runs down completely during use, it may take up to 4 hours to fully recharge again.

**STEP 1:** Secure the vacuum cleaner into position on the wall-mountable charging base.

**STEP 2:** Plug in and switch on the mains power adaptor at the mains power supply; the indicator light will flash red to confirm that the vacuum cleaner is correctly docked and charging.

**STEP 3:** Once the battery is fully charged, the indicator light will stop flashing and will remain solid red.

**Note:** Turn off the vacuum cleaner before charging.

Whilst charging, the vacuum cleaner may begin to heat up and become warm; always switch off and unplug from the mains power supply when charging is complete.

**Warning:** Never recharge the vacuum cleaner whilst liquid is present inside the dust container. Always empty and dry the dust container after vacuuming liquid spills.

## Using the Cordless Wet and Dry Vac

The handheld vacuum cleaner comes with a crevice tool, ideal for reaching into awkward corners and recesses in fabrics. It also includes a squeegee nozzle, suitable for clearing up wet spillages.

**STEP 1:** To use the vacuum cleaner, disconnect it from the wall-mountable charging base.

**STEP 2:** Fit the selected attachment (crevice tool or squeegee nozzle), by firmly inserting it into the air inlet.

**STEP 3:** Turn on the vacuum cleaner by sliding the 'On/Off' switch forward to the 'On' position.

**Note:** The handheld vacuum cleaner can be used to clean up both wet and dry spillages but the two functions cannot be mixed. When using the vacuum cleaner to pick up liquid spillages, empty the liquid as soon as possible and that the vacuum cleaner is thoroughly dry before using as a regular vacuum cleaner. Similarly, empty the dust container of any debris before attempting to clean up liquid.

**Caution:** Do not overfill the vacuum cleaner; empty it before the contents reach the liquid Max. fill mark (~) or the dry Max. fill mark (—).

**Warning:** Do not use the vacuum cleaner to pick up flammable liquid. Do not use the vacuum cleaner without the washable filter or dust container in position. Clean the washable filter regularly to preserve the suction of the vacuum cleaner.

## Mixing Wet and Dry Functions

To preserve the life of vacuum cleaner and maintain optimum performance, **do not mix the wet and dry functions.**

Empty the dust container of any debris or dust before attempting to vacuum liquid.

Never tilt the vacuum cleaner backwards as this will allow liquid to enter the waterproof cover.

## Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

**STEP 1:** Hold the vacuum cleaner with the dust container facing downwards. Press the dust container release button and carefully remove the dust container from the vacuum cleaner.

**STEP 2:** Remove the washable filter.

**STEP 3:** Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

**STEP 4:** Refit the washable filter and dust container.

**Note:** It is recommended that the dust container is emptied outdoors.

## Cleaning the Washable Filter

The washable filter can only be accessed when the dust container is removed (following the instructions in the section entitled 'Emptying the Dust Container'.

**STEP 1:** Hold the washable filter out over a waste bin, preferably outdoors and gently shake off any dust and debris.

**STEP 2:** Once the majority of the dust and dirt has been removed, rinse away any residue by placing the washable filter under cold water. Allow to dry thoroughly.

**STEP 3:** Refit the washable filter and dust container following the instructions in the section entitled 'Emptying the Dust Container'.

**Note:** The washable filter and dust container should be thoroughly cleaned at least once every three weeks.

Do not clean the washable filter using detergent or use external heat sources, such as a radiator to dry it.

**Warning:** Do not reassemble or use the vacuum cleaner until the washable filter has fully dried, as this could cause damage.

## Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place.  
Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

## Troubleshooting

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Secure the vacuum cleaner onto the wall-mountable charging base and switch it on at the mains power supply.
	The vacuum cleaner is not turned off.	Check that vacuum cleaner is turned off before charging.
The vacuum cleaner's suction is reduced.	The air inlet or attachment is blocked.	Disconnect the attachment and clear any blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The washable filter is blocked.	Clean the filter following the instructions in the section entitled 'Cleaning the Washable Filter'.
	The battery is running out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Wet and Dry Vac'.
The vacuum cleaner has stopped working.	The battery has run out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Wet and Dry Vac'.



### Specifications

Product code: BEL0676

Battery: 7.4 V DC, 2200 mAh Li-ion (included)

Input: 100–240 V ~ 50/60 Hz

Adaptor: 9.6 V DC 500 mAh

IPX4

Dust container capacity: 500 ml

**Notes:**

**UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3**  
**YEAR**  
GUARANTEE

\* To be eligible for the extended guarantee, go to <http://guarantee.upgs.com/beldray> and register your product and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD180618/MD000000/V1

