

Beldray[®]

Est 1872

Nobody Does It Better

Turbo Plus⁺ Cordless Vacuum Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to make certain that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not remove from the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any accessories or adaptors other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not use this appliance if any of the openings are blocked.
Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
The hose should be checked regularly and must not be used if damaged.
Take care when equipping accessories with rotating parts as this could cause entrapment.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always check that the appliance has cooled fully after use before performing any cleaning or user maintenance.
Use of an extension cord with the appliance is not recommended.
Only use the appliance with the power supply unit provided.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

If batteries become exhausted, they should be removed from the product to avoid leakage.
In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.
If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
Keep batteries out of the reach of children.
Secondary batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.
Do not leave batteries on charge for prolonged periods of time.
Do not use any charger other than that specifically provided for use with the product.
The supply terminals are not to be short-circuited.
Do not store batteries haphazardly in a box or drawer where they may

short-circuit each other or be short-circuited by other metal objects.
Do not store above 60 °C. Avoid storing in direct sunlight.
Do not use any batteries that are not designed for use with the product.
Do not dispose of batteries in a fire.
Do not crush, puncture, dismantle or otherwise damage batteries.
Do not dismantle, open or shred secondary batteries.
Do not expose batteries to heat or fire as they may explode.
Do not subject batteries to mechanical shock.
Do not dispose of exhausted batteries in household waste.
To dispose of any batteries, take them to a local recycling station.
Contact the local government offices for further details.
This appliance is fitted with a 2150 mAh rechargeable Li-ion battery unit (non-removable).

Dos and Don'ts

Do:

Check that the HEPA filter is kept clear of obstruction.
Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.
Keep the electric floor brush is kept free from a build-up of dust and dirt.
Clean the brush bar on a regular basis.

Don't:

Use the vacuum cleaner without the HEPA filter or dust container in position.
Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Empty the dust container indoors.

Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.
Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.
Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the vacuum cleaner.
Keep the HEPA filter clean and replace when it becomes worn.

Getting Started

Remove the appliance from the box.
Remove any packaging from the appliance.
Place the packaging inside the box and either store or dispose of safely.

In the Box

Turbo Plus⁺ Cordless
Vacuum Cleaner
Battery charging station

Mains power adaptor
Electric floor brush
Crevice tool

Brush tool
Instruction manual

Features

14.8 V rechargeable lithium-ion battery
Multifunctional – handheld
and upright
Multidirectional swivel head
Powerful suction

Foldable handle
300 ml dust container
20–30 minutes operating time
Electric floor brush
Lightweight: 2.1 kg

Description of Parts



1. Turbo Plus⁺ Cordless Vacuum Cleaner main body
2. Upright vac 'On/Off' button
3. Upright vac suction nozzle
4. Foldable handle
5. Foldable handle release button
6. Handheld vac unit
7. Handheld vac handle

8. Handheld vac release button
9. Handheld vac 'On/Off' button
10. Handheld vac cradle
11. Handheld vac suction nozzle
12. Dust container
13. Dust container release button
14. HEPA filter
15. Indicator light

16. Electric floor brush
17. Electric floor brush release button
18. Brush tool
19. Crevice tool
20. Battery charging station
21. Battery charging socket
22. Accessory holder
23. Back rest

 
Instructions for Use

Assembling the Turbo Plus+ Cordless Vacuum Cleaner


STEP 1: Make sure that the charging station is unplugged from the mains power supply and then detach the vacuum cleaner from the battery charging station.

STEP 2: Fit the handheld vac unit by inserting the suction nozzle end into the handheld vac cradle and then push the handheld vac handle in towards the vacuum cleaner main body until it locks into position.

STEP 3: Insert the upright vac suction nozzle at the bottom of the vacuum cleaner main body into the electric floor brush, checking that the locking tab and pins are aligned, then push together until it locks into position.

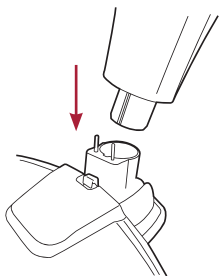

 STEP 4: Open out the foldable handle by lifting it away from the vacuum cleaner main body, until it locks into the upright position.

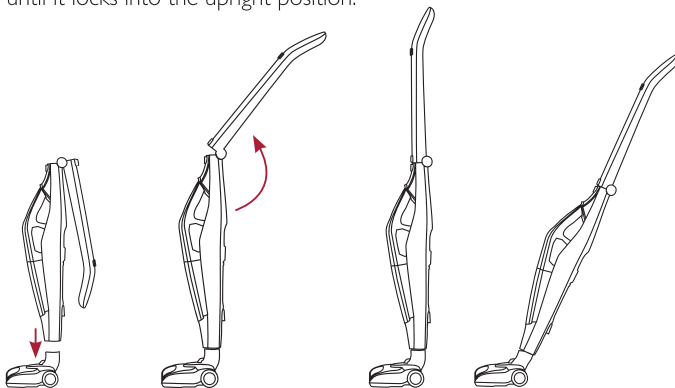

Assembling the Battery Charging Station

STEP 1: Position the battery charging station where it will be within reach of a mains power supply.

STEP 2: Attach the accessory holder to the base of the battery charging station.

STEP 3: Fit the back rest onto the base of the battery charging station.

STEP 4: Store the attachments on the accessory holder and slide the vacuum cleaner onto the battery charging station, checking that it fully engages with the battery charging socket.

STEP 5: Connect the lead from the mains power adaptor to the back of the battery charging station.

Charging the Turbo Plus+ Cordless Vacuum Cleaner

Before first use, the vacuum cleaner must be charged for approx. 3–4 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner runs down completely during use, it may take up to 3–4 hours to fully recharge the battery.

Using the Battery Charging Station

STEP 1: Slide the vacuum cleaner onto the battery charging station, aligning the slot on the reverse of the unit with the battery charging socket.

STEP 2: Plug the mains power adaptor into the mains power supply; the indicator light will flash red to confirm that the battery is charging. Once the battery is fully charged, the indicator light will illuminate red and the battery charging station will automatically stop charging, to preserve the lifespan of the battery.

Note: If the indicator light begins to flash rapidly, there has been a malfunction whilst charging. Remove the vacuum cleaner from the battery charging station and then repeat steps 1–3.

Warning: Do not use any adaptors other than the one supplied, as this could cause damage.

Do not pull the adaptor out an angle, as this could cause damage.

Using the Turbo Plus+ Cordless Vacuum Cleaner

The operating time of the vacuum cleaner will vary, depending upon the speed setting used. The vacuum cleaner will run for approx. 20 minutes when used on a higher speed setting and approx. 30 minutes when used on a normal speed setting.

Using as an Upright Vacuum Cleaner

STEP 1: Make sure that the vacuum cleaner is unplugged from the mains power supply and then detach it from the battery charging station.

STEP 2: Install the electric floor brush following the instructions in the section entitled 'Assembling the Turbo Plus+ Cordless Vacuum Cleaner'.

STEP 3: To turn on the vacuum cleaner, press the upright vac 'On/Off' button. The indicator light will flash red to signal that the vacuum cleaner has powered on.

STEP 4: If a higher speed is required, press the upright vac 'On/Off' button a second time.

STEP 5: Turn off the vacuum cleaner by pressing the upright vac 'On/Off' button once more.

Using as a Handheld Vacuum Cleaner

STEP 1: Make sure that the vacuum cleaner is unplugged from the mains power supply and then detach it from the battery charging station.

STEP 2: Press and hold the handheld vac release button and then using the handheld vac handle, carefully pull the handheld vac away from the vacuum cleaner main body.

STEP 3: Install the required attachment by inserting it into the handheld vac suction nozzle. The brush tool is great for use on upholstery, whilst the crevice tool is ideal for those awkward-to-clean areas.

STEP 4: To turn on the vacuum cleaner, press the handheld vac 'On/Off' button.

STEP 5: If a higher speed is required, press the handheld vac 'On/Off' button a second time.

STEP 6: Turn off the vacuum cleaner by pressing the handheld vac 'On/Off' button once more.

Emptying the Dust Container

It is important to empty the dust container regularly. This will help to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: Make sure that the vacuum cleaner is unplugged from the mains power supply and is detached from the battery charging station.

STEP 2: Press and hold the handheld vac release button and then using the handheld vac handle, carefully pull the handheld vac away from the vacuum cleaner main body.

 
STEP 3: If the vacuum cleaner has been used as a handheld vac, remove the attachment by carefully pulling it out of the handheld vac suction nozzle.

STEP 4: Hold the handheld vac with the dust container facing downwards. Push the dust container release button (1) and carefully remove the dust container from the handheld vac unit (2).

STEP 5: Carefully remove the HEPA filter and filter housing from the dust container (3) and empty it, disposing of any dust. If there is any dust or other residue remaining on the HEPA filter surface, clean it according to the instructions provided in the section entitled 'Cleaning the HEPA Filter'.

STEP 6: Empty the dust container over a bin, slowly and carefully to reduce the amount of dust released back into the atmosphere (4).

STEP 7: Reinsert the HEPA filter into the dust container and then refit the dust container to the handheld vac unit, aligning the locking clip.

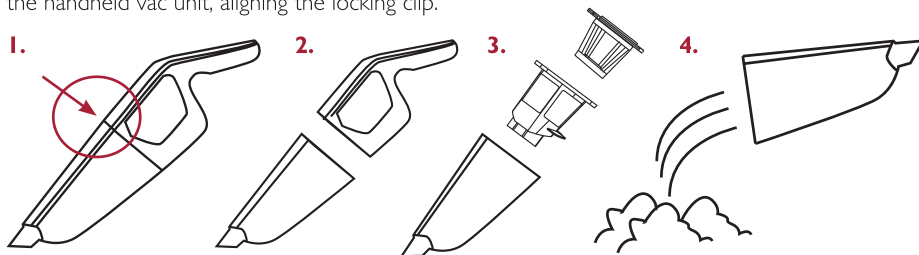

Cleaning the HEPA Filter

It is important to keep the HEPA filter free from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: Separate the HEPA filter and filter housing.

STEP 2: To clean the HEPA filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the HEPA filter under cold water. Allow it to dry thoroughly.

STEP 3: Once the HEPA filter has fully dried, refit it, along with the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

Note: It is recommended that the HEPA filter be cleaned at least once a month with clean water to keep the vacuum cleaner performing at its best. Do not clean the HEPA filter using detergent. Never use external heat sources, such as a radiator to dry the HEPA filter.

Cleaning the Electric Floor Brush

It is important to clean the electric floor brush on a regular basis, as this will help to maintain optimum cleaning performance.

The electric floor brush can be removed from the vacuum cleaner main body for easy cleaning. Always check that the electric floor brush is replaced correctly.

STEP 1: Remove the electric floor brush from the vacuum cleaner main body by pressing the electric floor brush release button and gently pulling the vacuum cleaner main body away from the electric floor brush.

STEP 2: Remove the locking tab from the base of the electric floor brush by using a flat head screwdriver (not included) to turn the lock to the 'unlocked' position.

STEP 3: Lift the brush unit out of the electric floor brush.

STEP 4: Using a thin tool, remove any built-up debris from the brush bar, inside the electric floor brush and the air inlet on the top of the floor brush.

STEP 5: After cleaning, replace the brush unit, correctly aligning the ends with the corresponding slots in the electric floor brush. Reinsert the locking tab and turn it to the 'locked' position using a flat head screwdriver (not included).

STEP 6: Insert the upright vac suction nozzle at the bottom of the vacuum cleaner main body into the electric floor brush, checking that the locking tab and pins are aligned and then push together until it locks into position.

Note: Do not immerse the electric floor brush in water or any other liquid.

Troubleshooting

| Symptom | Possible Cause | Solution |
|-------------------------------------|---|---|
| The vacuum cleaner will not charge. | The mains power adaptor lead is not securely connected. | Plug the mains power adaptor into the mains power supply, switch it on and then follow the instructions in the section entitled 'Charging the Turbo Plus+ Cordless Vacuum Cleaner'. |
| The suction is poor. | The suction nozzle is blocked. | Disconnect the attachment from the suction nozzle and remove the blockage. |
| | The dust container is almost full. | Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'. |
| | The HEPA filter is blocked. | Clean the HEPA filter following the instructions in the section entitled 'Cleaning the HEPA Filter'. |

Storage

Check that the vacuum cleaner and its accessories are cool, clean and dry before storing in a cool, dry place.

The vacuum cleaner can be stored with ease by using the foldable handle; simply press the foldable handle release button and carefully push the foldable handle down towards the back of the vacuum cleaner main body.

Specifications

Product code: BEL0685

19 V DC charging adaptor (included)

Battery: 14.8 V 2150 mAh Li-ion (included)

Dust tank capacity: 300 ml

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR
GUARANTEE

*** To be eligible for the extended guarantee,
go to <http://guarantee.upgs.com/beldray>
and register your product.**

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD030118/MD000000/V1

