

Beldray[®]

Est 1872

Nobody Does It Better

Quick Vac Lite

Instruction Manual



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children. Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust tank, cyclonic cone, washable filter and sponge filter are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit.

If the vacuum cleaner cuts out, press the power button to turn the unit off and unplug it from the mains power supply. Proceed to empty the dust tank, clean the filters and allow the vacuum cleaner to cool for approx. 1 hour before using again.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Make sure that the filters are kept clean and are cleaned after every removal of the dust container.

To clean the inside of the dust container, it is possible to remove the cyclonic cone.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Quick Vac Lite

Telescopic extension tube

Floor brush

Crevice tool

Brush tool

Instruction manual

Features

600 W high efficiency motor

Powerful suction

600 ml dust tank capacity

Washable filter

5 m power cord

Includes crevice tool and brush tools

Lightweight and ergonomic

Description of Parts



- | | |
|-------------------------------------|----------------------------------|
| 1. Quick Vac Lite main body | 8. Power button |
| 2. Air inlet | 9. 600 ml removable dust tank |
| 3. Telescopic extension tube | 10. Dust tank release button |
| 4. Telescopic extension tube button | 11. Dust tank base release catch |
| 5. Floor brush | 12. Cyclonic cone |
| 6. Brush tool | 13. Washable filter |
| 7. Crevice tool | 14. Sponge filter |

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, wipe it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

Using the Quick Vac Lite

The vacuum cleaner comes preassembled. If disassembled due to cleaning, switch off and unplug the vacuum cleaner from the mains power supply before refitting any accessories onto the air inlet.

STEP 1: Plug in and switch on the vacuum cleaner at the mains power supply.

STEP 2: Turn on the vacuum cleaner by pressing the power button. To turn off, press the power button again.

Warning: Do not use the vacuum cleaner without the washable filter, sponge filter, dust tank or cyclonic cone in position. Both filters and the dust tank must be regularly cleaned to preserve the suction and prolong the life of the vacuum cleaner.

Using the Telescopic Extension Tube

The floor brush, crevice tool and brush tool all fit onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Fit the telescopic extension tube onto the air inlet.

STEP 2: Push the floor brush, crevice tool or brush tool onto the end of telescopic extension tube and secure it into place.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

Using the Floor Brush

STEP 1: Fit the telescopic extension tube onto the air inlet.

STEP 2: Push the floor brush onto the end of the telescopic extension tube and secure it into place.

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube out.

STEP 4: Turn on the vacuum cleaner by pressing the power button.

Using the Crevice or Brush Tool

The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach. The brush tool is perfect for cleaning shelves, cupboards and windowsills.

STEP 1: Select which attachment is required and push it onto the end of the telescopic extension tube or the end of the air inlet.

STEP 2: Turn on the vacuum cleaner by pressing the power button.

STEP 3: To remove the attachment, turn off the vacuum cleaner by pressing the power button. Pull the attachment firmly away from the end of the telescopic extension tube or the end of the air inlet.

Emptying the Dust Tank

Do not use the vacuum cleaner if the dust tank is filled past the max. fill mark, as this could damage the unit or cause injury to the user.

Before emptying the dust tank, check that the vacuum cleaner is switched off and unplugged from the mains power supply. It is recommended to empty the dust tank outdoors.

STEP 1: Whilst securely holding the vacuum cleaner main unit, remove the dust tank by pressing the dust tank release button and pulling it away from the vacuum cleaner.

STEP 2: Holding the dust tank over a bin or refuse bag, pull the dust tank base release catch to open the dust tank. Empty the dust tank slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 3: To close the dust tank, push the base closed and secure the dust tank release catch back into position.

STEP 4: Replace the dust tank by aligning the slot on the dust tank with the clip on the vacuum cleaner main unit and then push it in until it locks into position.

Note: The cyclonic cone can be removed from the dust tank to make cleaning easier.

Cleaning the Washable and Sponge Filters

The filters can only be accessed when the dust tank has been removed.

STEP 1: Remove the dust tank by following the instructions in the section entitled 'Emptying the Dust Tank'.

STEP 2: Once the dust tank is empty, remove the dust tank lid by twisting it in an anticlockwise direction, then lifting it away.

STEP 3: Rotate the washable filter in a clockwise direction and pull it out of the cyclonic cone using the handle.

STEP 4: Turn the washable filter over and remove the sponge filter.

STEP 5: Shake both of the filters until the majority of the dust has been removed, then rinse them under clean, warm water and allow to dry naturally.

STEP 6: Once both of the filters have fully dried, place the sponge filter back inside the washable filter, and slot the washable filter back into the cyclonic cone, rotating it in an anticlockwise direction to lock it into position.

STEP 7: Reattach the dust tank lid by aligning the 'unlock' symbol on the lid with the vertical arrow on the rear of the dust tank and then twist in a clockwise direction to lock it securely into place.

Note: Do not use the vacuum cleaner unless the lid is securely in place.

Do not clean the filter using detergents or use external heat sources such as radiators to dry the filter.

It is recommended to clean the filters once a month, depending upon use.

Warning: Do not reassemble or use the vacuum cleaner until both of the filters are fully dry, as this could cause damage.

Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place.

Do not wrap the cord around the vacuum cleaner, as this could cause damage.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The accessory or air inlet is blocked.	Disconnect the accessory and clear the blockage.
	The dust tank is almost full.	Empty the dust tank following the instructions in the section entitled 'Emptying the Dust Tank'.
	The filters are blocked.	Clean the filters following the instructions in the section entitled 'Cleaning the Washable and Sponge Filters'.
The vacuum cleaner has stopped working.	The thermal cut-out device has activated due to restricted airflow, and has cut power to the motor to protect the vacuum cleaner.	Turn off and disconnect the vacuum cleaner from the mains power supply. Empty the dust tank and clean the washable and sponge filter. Allow the unit to cool for 1 hour.

Specifications

Product code: BEL0690DM

Rated voltage: 220–240 V ~ 50/60 Hz

Rated wattage: 600 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\equiv).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

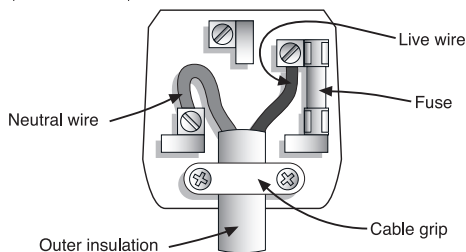

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 3 year guarantee



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD070318/MD000000/V1

