

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Handheld Garment Steamer

### Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance out of the reach of children when it is in use or when it is cooling down.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not touch any sections of the appliance that may become hot during use, as this could cause injury.  
Do not direct steam at people or animals.  
Do not direct steam towards equipment containing electrical components, such as the interior of ovens.  
Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.  
Always unplug the appliance after use and before any cleaning or maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.

**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

Hot surface – do not touch the hot section or heating components of the appliance.



**Warning:** Danger of scalding.

## Dos and Don'ts

### Do:

Always hold the garment steamer by the handle.  
Exercise caution when using the garment steamer, as the surface and steam head will get very hot.  
Always follow the garment manufacturer's care instructions.  
Allow the garment steamer to cool before removing or attaching the fabric brush.

### **Don't:**

Direct steam at people or animals.

Tip or tilt the garment steamer once it has been filled with water, as this will cause boiling water to leak from the steam head and could cause serious injury.

Hold the garment steamer by the body or steam head.

Position the garment steamer too closely to the surface of the fabric or apply too much pressure, as this could cause damage to the fabric.

Refill the water tank whilst the garment steamer is switched on and plugged into the mains power supply.

Fill the water tank above the 100 ml max. fill mark.

### **Care and Maintenance**

Before attempting any cleaning or maintenance, always unplug the garment steamer from the mains power supply and allow it to cool sufficiently (for approx. 30 minutes).

Drain any remaining water from the water tank once the garment steamer main body has cooled.

Wipe the garment steamer with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water; rinse and dry thoroughly.

The garment steamer and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

Never immerse the garment steamer in water or any other liquid.

### **Descaling the Water Tank and Accessories**

If calcium deposits begin to build up on the steam head, this may be due to living in a hard water area.

It is recommended to use demineralised water with the garment steamer if living in a hard water area.

### **Getting Started**

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

### In the Box

Handheld Garment Steamer

Fabric brush

Measuring cup

Instruction manual

### Features

600 W power

100 ml easy-to-fill water tank

Ready to use in 1 minute

Compact for easy storage

2 m power cord

Includes fabric brush and measuring cup

### Description of Parts



1. Handheld Garment Steamer

2. Steam head

3. Power switch

4. Indicator light

5. Water tank

6. Handle

7. Measuring cup

8. Fabric brush

## Instructions for Use

### Before First Use

Clean the exterior surface of the garment steamer with a soft, damp cloth and dry thoroughly before switching it on and using it for the first time.

Do not immerse the garment steamer in water or any other liquid.

Allow the unit to steam for 3–4 minutes to remove any impurities that may have been left behind during production.

It is recommended to steam an old piece of cotton prior to steaming the preferred garment, to check that any impurities have been removed.

**Note:** When using the garment steamer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the garment steamer when it is in use.

### Assembling the Handheld Garment Steamer

The garment steamer comes preassembled. If disassembled, check that the garment steamer is switched off and unplugged from the mains power supply before refitting any accessories.

**STEP 1:** Fix the steam head by rotating it to the 'locked' position.

**STEP 2:** If required, attach the fabric brush to the steam head and click it into place. The fabric brush opens the weaves of the fabric for deeper steam diffusion. It is ideal for steaming heavier fabrics and bulkier items such as car upholstery, curtains, beddings and sofas.

**Caution:** Always check that the garment steamer has cooled fully before adding or removing any attachment from the steam head.

### Using the Handheld Garment Steamer

**STEP 1:** Check that the garment steamer is switched off and unplugged from the mains power supply.

**STEP 2:** Remove the steam head by rotating it to the unlocked position and pulling it away from the garment steamer main body.

**STEP 3:** Using the measuring cup, fill the water tank with a maximum of 100 ml water, using the max. fill mark as a guide.

**STEP 4:** Fix the steam head to the garment steamer main body and secure the fabric brush if required, following the instructions in the section entitled 'Assembling the Handheld Garment Steamer'.

**STEP 5:** Place the garment steamer onto a flat, stable surface, then plug in and switch it on at the mains power supply.

**STEP 6:** Turn on the garment steamer by switching the power switch to the 'On' position. Once the water in the water tank has reached a rolling boil, the steam head will begin to emit steam.

**STEP 7:** If necessary, hang the garment to be steamed. Press the steam head gently against the fabric and carefully steam the garment using long, straight downwards movements to remove any wrinkles or creases.

**STEP 8:** Once the garment has been steamed, switch off the garment steamer by switching the power switch to the 'Off' position. Switch off and unplug it from the mains power supply.

**Note:** A full water tank provides approx. 6 minutes of continuous steam. The indicator light will switch off to indicate that the water tank is empty. Once empty, allow the garment steamer to cool fully before refilling the water tank following steps 1–4.

**Caution:** During operation, the garment steamer and water tank in particular will get very hot. Exercise extreme caution. Do not hold the garment steamer by any other part of the unit except the handle.


Do not fill the water tank past the 100 ml max. fill mark, as this could cause boiling water to be emitted from the steam head.

Do not use anything other than water to fill the water tank.

After the garment steamer has been switched off, steam may still be produced whilst the garment steamer is cooling.

**Warning:** Do not tip or tilt the garment steamer once it has been filled with water, as this will cause boiling water to leak from the steam head and could cause injury.

Only refill the water tank once the garment steamer has fully cooled.

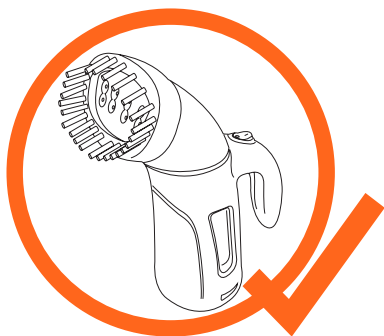

## Storage

Before storing in a cool, dry place, check that the garment steamer and accessories are cool, clean and dry.

The water tank should be empty before storage.

Never wrap the cord tightly around the garment steamer; wrap it loosely to avoid causing damage.

## Troubleshooting

Problem	Possible Cause	Solution
The garment steamer is not heating up. The indicator light is not illuminating.	The garment steamer is not plugged into the mains power supply.  The power switch is in the 'Off' position.	Plug in and switch on the garment steamer at the mains power supply.  Switch on the garment steamer by switching the power switch to the 'On' position.
No steam is being emitted from the garment steamer.	There is insufficient water remaining in the water tank.  The water has not reached the required temperature.	Fill the water tank sufficiently.  Switch on the garment steamer by switching the power switch to the 'On' position and allow the water tank to preheat sufficiently. This should take approx. 1 minute.

## Specifications

Product code: BEL0725

Input: 220–240 V ~ 50/60 Hz

Output: 600 W

Water tank capacity: 100 ml

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\equiv$ )

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\equiv$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\equiv$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

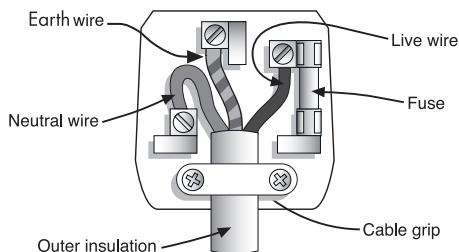

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3** YEAR  
GUARANTEE

\* To be eligible for the extended guarantee,  
go to <http://guarantee.upgs.com/beldray>  
and register your product.



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CD231017/MD000000/V1

