

Beldray[®]

Est 1872

Nobody Does It Better

2 in 1 Multifunctional Vacuum Cleaner

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children. Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.
Do not use the appliance if it has been dropped or if there are visible signs of damage.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.
Do not use any damaged accessories.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not use this appliance if any of the openings are blocked.
Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
Take care when equipping accessories with rotating parts as this could cause entrapment.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always unplug the appliance after use and before any cleaning or maintenance.
Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
Use of an extension cord with the appliance is not recommended.
Only use the appliance with the power supply unit provided.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit. If the vacuum cleaner cuts out, press the power switch to turn it off and unplug it from

the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

Dos and Don'ts

Do:

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.

Don't:

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Empty the dust container indoors.

Pull or lift the vacuum cleaner by its power supply cord.

Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents cleaning agents to clean any part of the vacuum cleaner.

Make sure that the HEPA filter is kept clean and is replaced when it becomes worn.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

2 in 1 Stick Vacuum Cleaner

Extension handle

Removable floor head

Crevice tool

Brush tool

Instruction manual

Features

600 W power

Easily converts to a handheld unit

Washable HEPA filter

1 L dust container

5 m power cord

Includes brush and crevice tool

Description of Parts



1. 2 in 1 Stick Vacuum Cleaner main unit
2. Quick release cord hook
3. Extension pole handle
4. Extension pole
5. Upright vacuum handle
6. Locking clip

7. Handheld vacuum handle
8. Upper cord hook
9. Power switch
10. Dust container release button
11. Dust container

12. HEPA filter
13. Mesh filter cover
14. Air inlet
15. Floor head
16. Crevice tool
17. Brush tool

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

Using the 2 in 1 Stick Vacuum Cleaner

The 2 in 1 Stick Vacuum Cleaner is ideal for quick clean ups around the home and makes light work of cleaning stairs, car upholstery and curtains. Simply attach the floor head and extension handle to turn the nifty handheld unit into an upright vacuum that is perfect for hard floors and carpets.

Assembling the Upright Vacuum Handle

Before using as an upright vacuum cleaner for the first time, the upright vacuum handle must be assembled.

STEP 1: Align the tab on the extension pole with the indent on the extension pole handle.

STEP 2: Press the tab inwards whilst pushing the pole into position until the tab clicks into place.

Using as an Upright Vacuum Cleaner

STEP 1: Once the upright vacuum handle has been assembled, align the groove on the upright vacuum handle with the indent on the handheld unit.

STEP 2: Insert the upright vacuum handle into the vacuum cleaner main body until the locking clip secures it into place.

STEP 3: Place the floor head onto the floor and slot the air inlet onto the floor head.

STEP 4: Plug in and switch on the vacuum cleaner at the mains power supply.

STEP 5: Turn it on by pressing the power switch.

STEP 6: Press the power switch once more to turn off the vacuum cleaner.

Using as a Handheld Vacuum Cleaner

STEP 1: Once the vacuum cleaner is turned off, press the locking clip and then carefully pull the extension handle away from the vacuum cleaner main body.

STEP 2: Remove the floor head by pulling it away from the air inlet.

STEP 3: Select the attachment to be used and place it securely onto the air inlet. The crevice tool is ideal for cleaning hard-to-reach areas such as under car seats, behind radiators and in-between sofa cushions. The brush tool is ideal for cleaning fabric.

STEP 4: Once the attachment is secure, plug the vacuum cleaner into the mains power supply and turn it on by pressing the power switch.

STEP 5: Turn off the vacuum cleaner by pressing the power switch once more.

Storing the Power Cord

The vacuum cleaner is equipped with a handy cord storage system.

To use it, simply wrap the power cord around the quick release cord hook and the lower cord hook, making sure that the quick release cord hook is in the upright position.

To unwrap the power cord, twist the quick release cord hook 180 ° in a clockwise direction to release the cord from the stored position.

Emptying the Dust Container

It is important to empty the dust container regularly. This will help to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 2: Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release button and pulling the dust container away from the unit.

STEP 3: Carefully remove the HEPA filter from the dust container and empty it, disposing of any dust. If there is any dust or other residue remaining on the HEPA filter surface, clean it according to the instructions provided in the section entitled 'Cleaning the Dust Container and HEPA Filter'.

STEP 4: Empty the dust container over a bin, slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 5: Reinsert the HEPA filter into the dust container. Replace the dust container into the vacuum cleaner main body by holding the dust container at a slight angle and pushing it upwards toward the vacuum cleaner main body until it clicks into position.

Note: Do not use the vacuum cleaner if the dust container is filled past the max. fill mark, as this could damage the unit or cause injury to the user.

Cleaning the Dust Container and HEPA Filter

It is important to keep the dust container and HEPA filter clean from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner.

The HEPA filter can only be accessed when the dust container has been removed.

STEP 1: Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, the HEPA filter can be lifted out of the dust container.

STEP 3: Remove the mesh filter cover from the HEPA filter by undoing the fastening. Clean the mesh filter cover by rinsing carefully under cold water.

STEP 4: Hold the HEPA filter over a waste bin, preferably outdoors and gently shake off any dust and debris. Once the majority of the dust and dirt has been removed, clean off any residue by rinsing the filter under cold water. Allow to dry thoroughly.

STEP 5: Wash the dust container in clean, warm water and allow to dry thoroughly.

STEP 6: Once all of the parts have dried fully, refit the HEPA filter and the mesh filter cover back into place and replace the dust container.

Note: If the dust container and filters are not cleaned regularly, the thermal cut-out device will activate. For further details, see the section entitled 'Thermal Cut-out Device'.

Warning: Do not clean the filters using detergent. Always allow the filters to air dry; never use external heat sources, such as a radiator to dry it. Do not wring or twist the HEPA filter as this will cause damage; gently squeeze it.

Storage

The vacuum cleaner should be cool, clean and dry before storing in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	<p>The air inlet is blocked.</p> <p>The dust container is almost full.</p> <p>The HEPA filter is blocked.</p>	<p>Disconnect the attachments and remove the blockage.</p> <p>Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.</p> <p>Clean the HEPA filter following the instructions in the section entitled 'Cleaning the Dust Container and HEPA Filter'.</p>
The vacuum cleaner has cut out.	The thermal cut-out device has activated due to restricted airflow around the unit and has cut power to the motor to protect the vacuum cleaner.	<p>Switch off and unplug the vacuum cleaner from the mains power supply.</p> <p>Empty the dust container and clean the HEPA filter following the instructions in the section entitled 'Cleaning the Dust Container and HEPA Filter'.</p> <p>Allow the vacuum cleaner to cool for approx. 1 hour.</p>

Specifications

Product code: BEL0770

Input: 220–240 V ~ 50/60 Hz

Output: 600 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

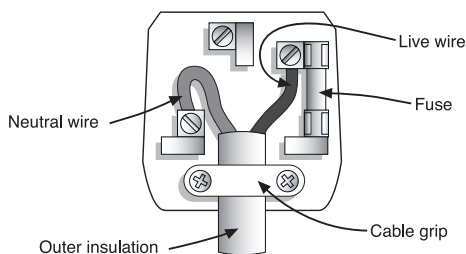

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



* To be eligible for the extended guarantee, go to <http://guarantee.upgs.com/beldray> and register your product.

3 YEAR
GUARANTEE



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CDI81217/MD000000/V1

