

Beldray[®]

Est 1872

Nobody Does It Better

CORDLESS SCRUBBER PRO

Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hair and loose clothing away from rotating parts.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the adaptor from the mains power supply by pulling the

cord; switch it off and remove the plug by hand.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Do not use the appliance with hot water or with caustic cleaning agents.

Battery Safety

If the battery pack becomes exhausted, it should be removed from the appliance to avoid leakage.

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery pack out of the reach of children.

Secondary battery packs need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.

Do not leave battery packs on charge for prolonged periods of time.

Do not use any charger other than that specifically provided for use with the appliance.

The supply terminals are not to be short-circuited.

Do not store above 60 °C. Avoid storing in direct sunlight.

Do not use any battery packs that are not designed for use with the appliance.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not dismantle, open or shred battery packs.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in household waste.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with an 800 mAh Ni-Mh battery pack.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the cordless scrubber from the mains power supply and allow it to cool sufficiently.

STEP 1: Wipe the cordless scrubber main body with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Clean the polishing pad in warm, soapy water; rinse and dry thoroughly.

STEP 3: Rinse the brush attachments under warm water and clean thoroughly after use. Allow to air dry thoroughly.

Note: The attachments are not suitable for dishwasher use.

Warning: The cordless scrubber should be cleaned after each use. Never use harsh or abrasive cleaners or detergents.

Do not turn on the cordless scrubber when carrying out any care or maintenance of the unit.

Never immerse the cordless scrubber main body in water or any other liquid.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Cordless Scrubber Pro main body

Telescopic extension handle

Scrubbing brush

Crevice brush

Heavy-duty brush

Polishing pad

Power adaptor

Instruction manual


Features

Cordless cleaning

Up to 50 minutes operating time with one charge

150 RPM powerful cleaning action

Description of Parts

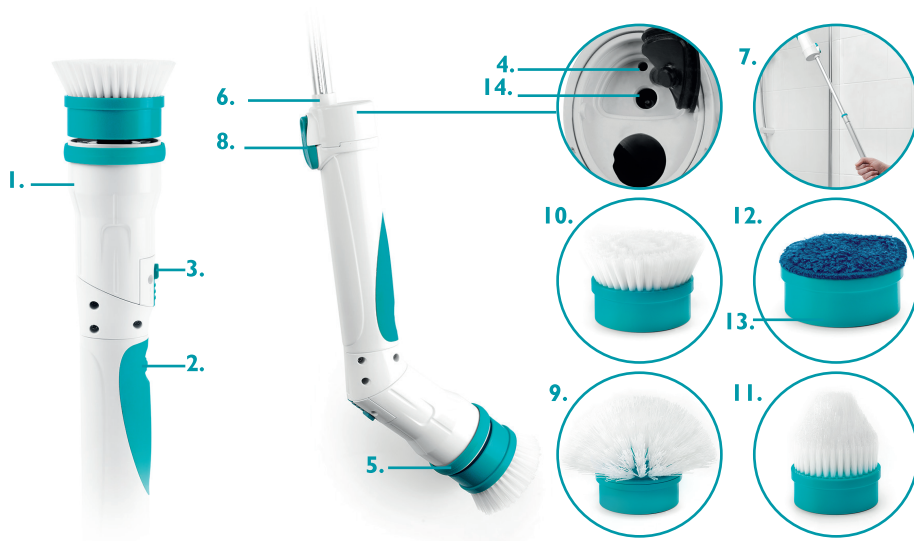

- | | |
|------------------------------------|--|
| 1. Cordless Scrubber Pro main body | 8. Telescopic extension handle locking tab |
| 2. On/off button | 9. Scrubbing brush |
| 3. Flexi-head switch | 10. Heavy-duty brush |
| 4. Charging indicator light | 11. Crevice brush |
| 5. Attachment adaptor | 12. Polishing pad |
| 6. Extension handle inlet | 13. Polishing pad base |
| 7. Telescopic extension handle | 14. Charging port |

Instructions for Use

Before First Use

Before using the cordless scrubber for the first time, wipe the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the cordless scrubber in water or any other liquid.

Charging the Cordless Scrubber Pro

Before first use, the cordless scrubber must be charged for approx. 6 hours. Subsequent charging times will take approx. 5–6 hours.

STEP 1: If fitted, remove the extension handle by pushing the locking tab in and pulling the extension handle out of the extension handle inlet.

STEP 2: Connect the mains power adaptor to the charging port on the cordless scrubber.

STEP 3: Plug in and switch on the mains power adaptor at the mains power supply. The

charging indicator light will flash red to signal that the battery is charging. Once the battery is fully charged, the charging indicator light will switch off.

Note: The cordless scrubber may become warm whilst charging.

Caution: Exercise caution when charging the cordless scrubber; it must be positioned on a dry, stable surface away from other heat-emitting appliances.

Warning: Do not leave the cordless scrubber unattended whilst charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the cordless scrubber from the mains power supply immediately.

Do not use any other adaptor than that supplied, as this could cause a hazard.

Assembling the Cordless Scrubber Pro

STEP 1: Choose the required attachment. The scrubbing brush is best for large jobs such as cleaning tiles and grouting. The crevice brush is ideal for corners, door tracks and tight spaces. The heavy-duty brush is perfect for tough jobs, which may require a deeper clean. The polishing pad helps to achieve the perfect finish.

STEP 2: Fit the chosen attachment onto the attachment adaptor by lining up the tabs and pushing it until it locks into position.

STEP 3: Carefully insert the extension handle into the extension handle inlet until it locks into position.

STEP 4: To extend the telescopic extension handle, hold firmly onto the cordless scrubber and rotate the telescopic extension handle anticlockwise. Extend to the desired length and then rotate clockwise until secure.

STEP 5: If required, press the flexi-head switch forward and rotate the flexi-head. Do not do this when the cordless scrubber is switched on.

Note: The extension handle can be removed easily for storage by pushing the locking tab in and pulling the extension handle out of the extension handle inlet.

Using the Cordless Scrubber Pro

If charging, switch off and unplug the cordless scrubber from the mains power supply and then disconnect the mains power adaptor from the scrubber main body before use.

STEP 1: Wet the intended area and apply the desired cleaning product, following the manufacturer's instructions.

STEP 2: Fit the chosen attachment, following the instructions in the section entitled 'Assembling the Cordless Scrubber Pro'.

STEP 3: Place the tip of the chosen attachment onto the surface that requires cleaning.

STEP 4: Whilst firmly holding the handle, press the on/off button to turn on the cordless scrubber.

STEP 5: Slowly move the brush over the desired surface. Do not apply pressure as the cordless scrubber works best when applied lightly to the surface.

STEP 6: Switch off the cordless scrubber by pressing the on/off button.

Note: Check that the attachment is securely fitted before using the cordless scrubber.

Warning: Always use rubber gloves and appropriate eyewear to avoid contact from splashing of soaps or detergents on skin and/or eyes whilst the cordless scrubber is on and when installing/removing attachments.

Always follow the manufacturer's instructions when using cleaning products.

Troubleshooting

Problem	Cause	Solution
The cordless scrubber will not turn on.	The battery is exhausted.	Charge the cordless scrubber.
The cordless scrubber is not removing dirt or grime.	Too much pressure is being used on the surface.	Use less pressure when using the appliance.
	There is not enough charge in the unit.	Charge the cordless scrubber.

Storage

Check that the cordless scrubber is cool, clean and dry before storing in a cool, dry place.

Note: If the battery is completely exhausted, it is recommended to charge the cordless scrubber slightly before storage. This will help to prolong the life of the battery.

Specifications

Product code: BEL0783

Battery: 4.8 V 800 mAh Ni-Mh

7 V DC 200 mAh charger (included)

Notes

3 YEAR
GUARANTEE

* To be eligible for the extended guarantee,
go to <http://guarantee.upgs.com/beldray>
and register your product.

Rechargeable batteries are not included in the extended manufacturer's
guarantee (after the first 12 months).



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD1901188/MD000000/V1

