

Beldray[®] est 1872

Our ergonomic,
powerful &
versatile
vacuum cleaner

AIRPOWER UPRIGHT

INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted airflow.

If the vacuum cleaner cuts out, press the on/off switch to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

Dos and Don'ts

Do:

Check that the filters are kept clear of obstruction.

Make sure that the dust container and filters are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.

Keep the turbo floor brush free from a build-up of dust and dirt.

Check the flexible extension hose regularly.

Don't:

Use the vacuum cleaner without the filters or dust container in position.

Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Use the flexible extension hose if it is damaged.

Use the dust container handle to carry the vacuum cleaner.

Empty the dust container indoors.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the vacuum cleaner.

Keep the filters clean and replace when they become worn.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Airpower Upright

Handle and screw

2 in 1 crevice and brush tool

Instruction manual

Features

750 W power

2.5 L dust container

6 m power cord


Turbo floor brush

Cyclonic vacuum technology

2 in 1 crevice and brush tool

Washable HEPA filter

Description of Parts

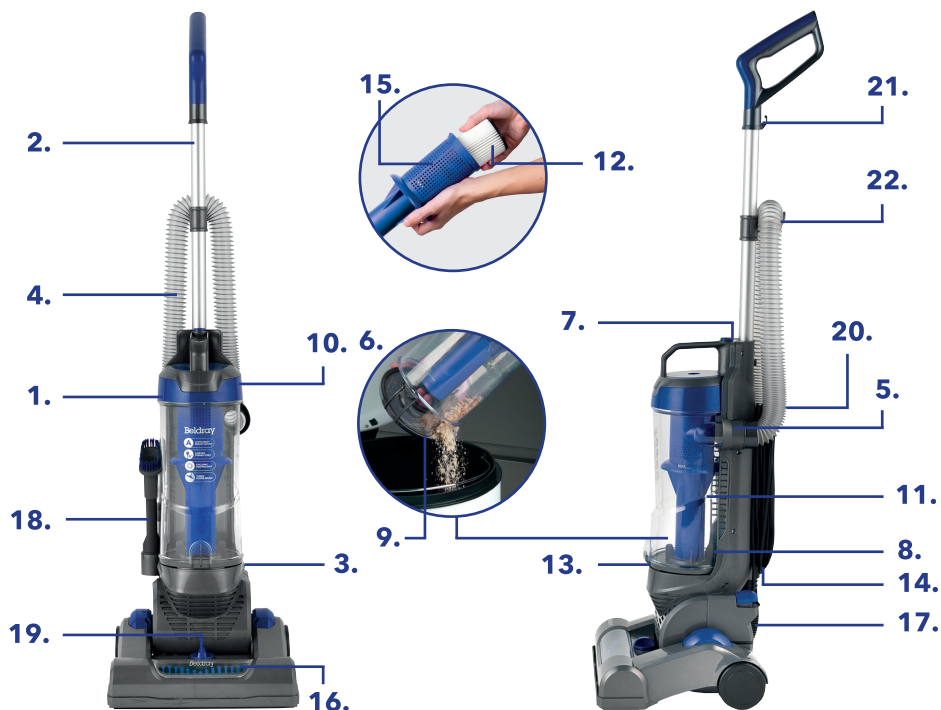

1. Airpower Upright main body
2. Handle
3. Power button
4. Flexible extension hose
5. Flexible extension hose lock
6. Dust container
7. Dust container release button
8. Dust container empty clip
9. Dust container hatch
10. Dust container lid
11. Exhaust filter

12. HEPA filter
13. Sponge filter
14. Hose anti-topple hook
15. Filter housing
16. Turbo floor brush
17. Turbo floor brush suction hose
18. 2 in 1 crevice and brush tool
19. Floor type selection dial
20. Cord storage hook(s)
21. Cord clip
22. Flexible hose storage hook

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

Assembling the Airpower Upright

Before connecting the vacuum cleaner to a mains power supply, insert the handle into the vacuum cleaner main body and secure into position using the screw provided. This will require a crosshead screwdriver (not included).

Using the Airpower Upright

STEP 1: Plug in and switch on the vacuum cleaner at the mains power supply.

STEP 2: Turn on the vacuum cleaner by pressing the power button; press the power button again to switch it off.

STEP 3: During use, the power cord can be secured into the cord clip to prevent the wire becoming tangled.

STEP 4: Unplug the vacuum cleaner from the mains power supply and loosely wrap the power supply cord around the cord storage hooks on the back of the vacuum cleaner. Check that it is not too tight at the point of connection and then secure using the cable tidy.

Note: The floor type selection dial raises and lowers the height of the turbo floor brush to make it suitable for different floor types. For carpet, twist the dial until it stops in an clockwise direction. For hard floors, twist the dial in an anticlockwise direction until it stops.

Warning: Do not use the vacuum cleaner without the HEPA and sponge filter, dust container or exhaust filter in position. Do not use the vacuum cleaner when the dust and debris in the dust container has exceeded the 'Max.' level.

Using the 2 in 1 Crevice and Brush Tool

STEP 1: To remove the turbo floor brush suction hose from the floor brush neck, twist the flexible extension hose neck in an anticlockwise direction and then pull upwards away from the turbo floor brush suction hose neck.

STEP 2: Select which attachment is to be used and add it to the end of the flexible extension hose neck:

Crevice: The crevice attachment is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other hard-to-reach areas.

Brush: To access the brush attachment, slide the brush attachment forward until it locks in place. The brush attachment is great for cleaning curtains, shelves, books and other delicate objects. To swap to the crevice tool press the locking button in and push the brush attachment backwards.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

Note: To improve stability when using the flexible extension hose, hook the hose anti-topple ring (located on the flexible extension hose) onto the hose anti-topple hook on the back of the lower power cord storage hook.

Emptying the Dust Container

Before emptying the dust container, the vacuum cleaner must be switched off and unplugged from the mains power supply. It is recommended to empty the dust container outdoors.

STEP 1: Turn off the vacuum cleaner.

STEP 2: Press and hold the dust container release button and then carefully pull the dust container away from the vacuum cleaner main body.

STEP 3: To empty the dust container, position it over a bin and then release the dust container hatch by unfastening the dust container empty clip. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 4: Shake the vacuum cleaner dust container gently to remove any remaining dust.

STEP 5: Close the dust container hatch by pushing it in towards the dust container, until it locks back into position.

STEP 6: Replace the dust container by aligning the bottom with the base of the vacuum cleaner main body. Push the dust container in towards the vacuum cleaner main body until it locks back into position.

Cleaning the HEPA Filter and Filter Housing

It is important to keep the HEPA filter and filter housing free from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner. The HEPA filter can only be accessed when the dust container has been detached, following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 1: Open the dust container lid by twisting it in an anticlockwise direction and then pull the lid away from the filter housing. The HEPA filter can be found inside the filter housing.

STEP 2: To clean the HEPA filter and filter housing, hold them over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the HEPA filter and filter housing under clean, warm water. Allow them to dry thoroughly.

STEP 3: Once the HEPA filter has fully dried, refit it into the filter housing.

STEP 4: Attach the filter housing to the lid by aligning the arrows and twisting it in a clockwise direction.

STEP 5: Close the lid by aligning the arrows with the open padlock on the dust container and twist in a clockwise direction to secure.

Note: It is recommended that the HEPA filter and filter housing be cleaned at least once a month with clean water to keep the vacuum cleaner performing at its best.

Warning: Do not reassemble or use the vacuum cleaner until the HEPA filter and filter housing is fully dry, as this could cause damage.

Do not clean the HEPA filter and filter housing using detergent. Never use external heat sources, such as a radiator to dry the HEPA filter and filter housing.

Cleaning the Sponge Filter

It is important to keep the sponge filter free from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner. The sponge filter can only be accessed when the dust container has been detached, following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 1: Remove the sponge filter by carefully pulling it away from the tabs.

STEP 2: To clean the sponge filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the sponge filter under clean, warm water. Allow to dry thoroughly.

STEP 3: Once the sponge filter has fully dried, replace it by aligning the tabs on the vacuum cleaner with the recesses on the sponge filter.

STEP 4: Refit the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

Note: It is recommended that the sponge filter is cleaned at least once a month with clean water to keep the vacuum cleaner performing at its best.

Warning: Do not reassemble or use the vacuum cleaner until the sponge filter is fully dry, as this could cause damage. Do not clean the sponge filter using detergent. Never use external heat sources, such as a radiator to dry the sponge filter.

Cleaning the Exhaust Filter

It is important to keep the exhaust filter free from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner. The exhaust filter can only be accessed when the dust container has been detached, following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 1: Remove the exhaust filter by carefully pushing down on the tab above the filter and pulling it away.

STEP 2: To clean the exhaust filter, hold it over a waste bin, preferably outdoors and gently shake off any dust and dirt. Once the majority of the dust and dirt has been removed, rinse away any residue by running the exhaust filter under clean, warm water. Allow to dry thoroughly.

STEP 3: Once the exhaust filter has fully dried, replace it into the vacuum cleaner.

STEP 4: Refit the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

Note: It is recommended that the exhaust filter is cleaned at least once a month with clean water to keep the vacuum cleaner performing at its best.

Warning: Do not reassemble or use the vacuum cleaner until the exhaust filter is fully dry, as this could cause damage.

Do not clean the exhaust filter using detergent. Never use external heat sources, such as a radiator to dry the exhaust filter.

Clearing a Blockage

The vacuum cleaner may become blocked if the dust container contents exceed the 'Max.' fill mark, the filters are blocked or a large object is causing an obstruction.

STEP 1: Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Clean the HEPA filter, filter housing, sponge filter and exhaust filter following the relevant instructions.

STEP 3: The flexible extension hose can be removed from the vacuum cleaner main body to check for blockages. Remove the flexible extension hose neck following the instructions in the section entitled 'Using the 2 in 1 Crevice and Brush Tool'. Detach the other end of the flexible extension hose by twisting it in an anticlockwise direction and pulling it away from the dust container.

STEP 4: Check for any blockages along the flexible extension hose and remove any debris.

Note: The vacuum cleaner must be switched off and unplugged from the mains power supply before attempting any care and maintenance.

Caution: Take care not to damage the flexible extension hose when removing debris.

Cleaning the Turbo Floor Brush

It is important to clean the turbo floor brush on a regular basis, as this will help to ensure optimum cleaning performance.

STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 2: Place the vacuum cleaner on its back on a flat, stable surface so that the turbo floor brush is visible.

STEP 3: Using a thin tool, remove any built-up debris from the turbo floor brush.

Note: Do not immerse the turbo floor brush in water or any other liquid.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The flexible extension hose or turbo floor brush is blocked.	Follow the instructions in the section entitled 'Clearing a Blockage'.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The HEPA filter or filter housing is blocked.	Clean the HEPA filter and filter housing following the instructions in the section entitled 'Cleaning the HEPA Filter and Filter Housing'.
	The turbo floor brush has a build-up of debris.	Clean the turbo floor brush following the instructions in the section entitled 'Cleaning the Turbo Floor Brush'.
The vacuum cleaner has cut-out or stopped working.	The thermal cut-out device has activated due to restricted air flow.	Unplug the vacuum cleaner from the mains power supply. Empty the dust container and clean the filter housing, HEPA filter, sponge filter and exhaust filter. Allow the vacuum cleaner to cool for 1 hour.

Specifications

Product Code: BEL0806

Rated Voltage: 220-240 V ~ 50/60 Hz

Rated Wattage: 750 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

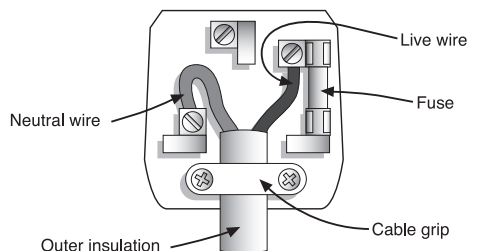

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.






*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray

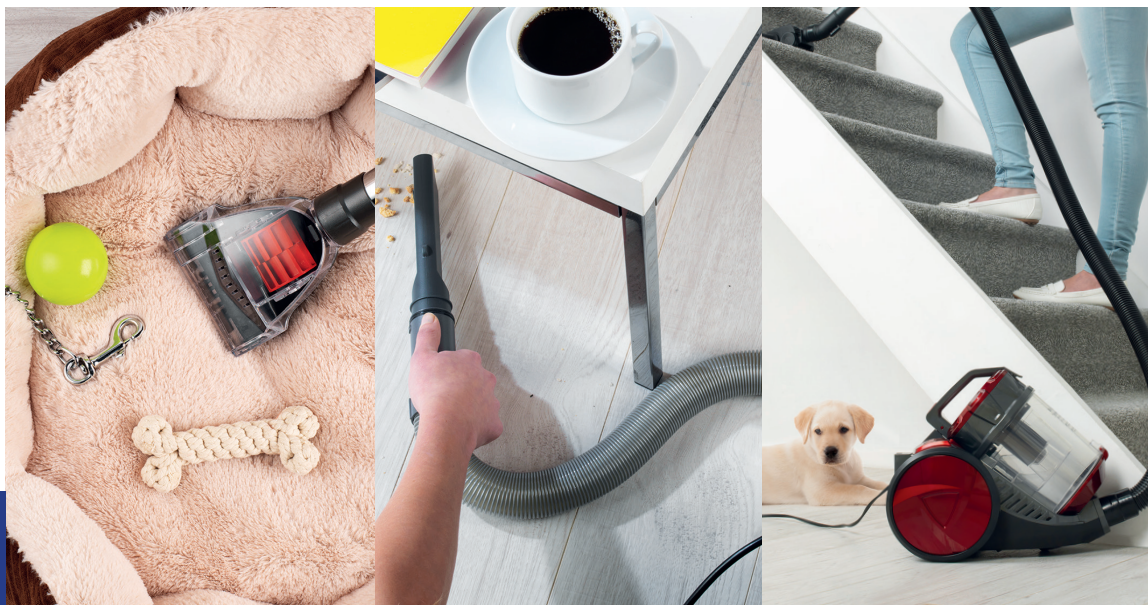

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD261118/MD000000/V1

