

Beldray^{est 1872}®

**Edge-to-edge
cleaning**



TURBOSPIN
CORDLESS
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

If the battery pack becomes exhausted, it should be removed from the product to avoid leakage.

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery pack out of the reach of children.

Secondary battery packs need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.

Do not leave battery packs on charge for prolonged periods of time.

Do not use any charger other than that specifically provided for use with the product.

The supply terminals are not to be short-circuited.

Do not store above 60 °C. Avoid storing in direct sunlight.

Do not use any battery packs that are not designed for use with the product.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not dismantle, open or shred battery packs.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in household waste.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with 4.8 V 1000 mAh Ni-MH battery.

Care and Maintenance

Always unplug the cordless sweeper from the mains power supply before attempting any cleaning or maintenance.

Wipe the cordless sweeper main unit with a soft, damp cloth and dry thoroughly.

Do not immerse the cordless sweeper in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean any part of the cordless sweeper.

Dos and Don'ts

Do:

Check that the turbo brush bar is kept clear of obstruction.

Make sure that the dust container is regularly emptied.

Clean the turbo brush bar and removable brushes regularly.

Don't:

Use the cordless sweeper without the dust container lid in the closed position.

Turn the cordless sweeper upside down when there is dust and dirt in the dust container.

Empty the dust container indoors.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Sweeper head
Removable handle

Mains power adaptor

Features

40 minutes operating time

4-5 hours charge time

Turbo floor brush

2 removable brushes


Ergonomic handle

Swivel head

Ultra lightweight

Easy to empty

Description of Parts

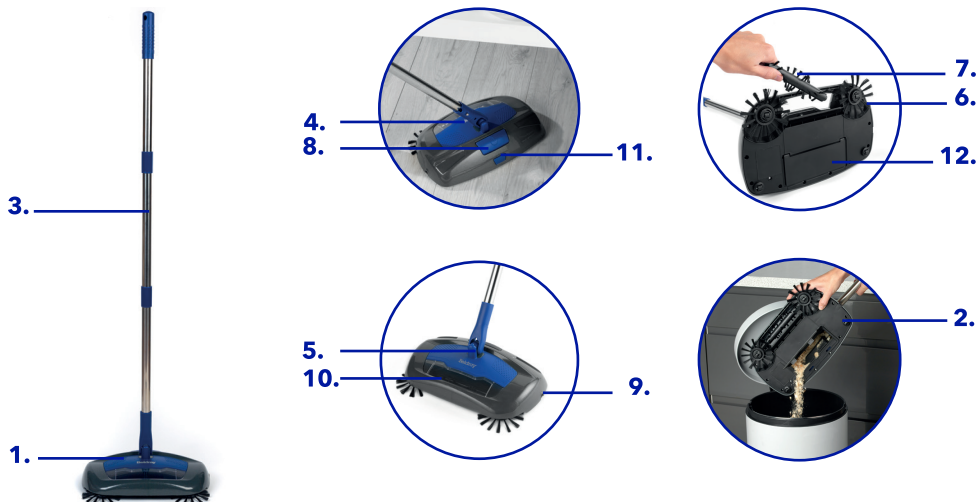

- 1. Turbo Spin Cordless unit
- 2. Sweeper head
- 3. Removable handle
- 4. Removable handle locking button
- 5. Hinge
- 6. Removable brushes

- 7. Turbo brush bar
- 8. On/off button
- 9. Charging port
- 10. Dust container
- 11. Dust container release button
- 12. Dust container lid

Instructions for Use

Charging the Turbo Spin Cordless

Before first use, the cordless sweeper may require charging for approx. 5-6 hours. Subsequent charging times will vary dependent upon use. If the cordless sweeper runs down completely during use, it may take approx. 4-5 hours to fully recharge the battery.

STEP 1: Check that the cordless sweeper is turned off and position it on a flat, stable surface.

STEP 2: Connect the power adaptor into the charging port and then plug it in and switch it on at the mains power supply.

STEP 3: The charging indicator light on the power adaptor will turn solid red to signal that the cordless sweeper is correctly charging. Once the battery is fully charged, the charging indicator light will illuminate solid green.

Note: Turn off the cordless sweeper before charging. Whilst charging, the cordless sweeper may become warm. Always switch off and unplug the power adaptor from the mains power supply once the battery is fully charged.

Warning: Only use the power adaptor provided with the cordless sweeper.

Assembling the Turbo Spin Cordless

STEP 1: Place the sweeper head onto a flat, stable surface.

STEP 2: Screw the removable handle together so that the hand-grip is at the top and the locking button is at the bottom, following the arrows.

STEP 3: Pressing the removable handle locking button in, insert the removable handle into the hinge and release the button to secure into place.

Note: To remove the removable handle, push the removable handle locking button in and pull the removable handle out of the hinge.

Using the Turbo Spin Cordless

STEP 1: To use the cordless sweeper, detach it from the power adaptor.

STEP 2: Press the on/off button down to switch on the cordless sweeper.

STEP 3: Push the cordless sweeper along the floor that needs to be cleaned; dirt will only be picked up with the cordless sweeper moving forward.

STEP 4: Press the on/off button down to switch off the cordless sweeper.

Note: Make sure that the dust container lid is firmly closed when using the cordless sweeper.

Emptying the Dust Container

The dust container must be emptied regularly to avoid overfilling.

STEP 1: Turn off the cordless sweeper and unplug it from the power adaptor.

STEP 2: Hold the cordless sweeper above a bin with the brushes facing downwards.

STEP 3: Press the dust container release button to open the dust container lid.

STEP 4: Lift the front of the cordless sweeper and carefully shake to remove all the dirt and debris from inside the dust container.

STEP 5: Once empty, push the dust container lid firmly closed.

Note: It is recommended that the dust container is emptied outdoors.

Do not tip the cordless sweeper upside down when there is dust and dirt inside the dust container.

Cleaning the Turbo Brush Bar

STEP 1: Turn off the cordless sweeper and unplug it from the power adaptor. The dust container should be emptied before cleaning the turbo brush bar.

STEP 2: Turn the cordless sweeper upside down so that the turbo brush bar is visible and accessible.

STEP 3: Remove the turbo brush bar by sliding it to the left and pulling it away.

STEP 4: Carefully remove any hair or trapped debris from the turbo brush bar.

STEP 5: Fit the turbo brush bar by aligning it with the left indent and sliding it to the left before pushing it into place.

Cleaning the Removable Brushes

STEP 1: Turn off the cordless sweeper and unplug it from the power adaptor. The dust container should be emptied before cleaning the removable brushes.


STEP 2: Turn the cordless sweeper upside down so that the removable brushes are visible and accessible.

STEP 3: Twist the locking ring surrounding the wheel to the unlocked position  and remove.

STEP 4: Align the tabs on the wheel housing with the gaps in the removable brushes and pull the removable brushes away from the cordless sweeper.

STEP 5: The removable brushes can now be cleaned thoroughly.

STEP 6: The removable brushes can be replaced. When replacing the removable brushes, check that the tabs on the wheel housing and the removable brushes are aligned and push the new brushes on.

STEP 7: Once the brushes are fitted to the cordless sweeper, return the locking ring to the wheel housing and twist in a clockwise direction to the locked position  to secure the removable brushes back into position.

Troubleshooting

Symptom	Possible Cause	Solution
The cordless sweeper will not charge.	The power adaptor is not connected.	Check that the power adaptor is inserted correctly into the cordless sweeper charging port and that it is switched on and plugged in to the mains power supply.
	The cordless sweeper is not turned off.	Turn off the cordless sweeper before charging.
The cordless sweeper is not picking up dust or dirt.	The turbo brush bar is blocked.	Empty the dust container and clear any obstructions from the turbo brush bar or removable brushes.
	The dust container is full.	Empty the dust container.
	The turbo brush bar has stopped spinning correctly.	Empty the dust container and remove any built-up hair from the turbo brush bar.
	The cordless sweeper battery is running out of charge.	Recharge the cordless sweeper following the instructions in the section entitled 'Charging the Turbo Spin Cordless'.
	The cordless sweeper is being used on a high pile carpet.	The cordless sweeper is intended for use on hard floors and low pile carpets only.

Specifications

Product code: BEL0824

Mains supply: 220-240 V ~ 50/60 Hz

Adaptor Output: 6 V DC 300 mA

Battery: 4.8 V 1000 mAh Ni-MH

Charging time: 4-5 hours

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD04102018/MD000000/V1

