

Beldray[®] est 1872



TWO-IN-ONE

GARMENT STEAMER

INSTRUCTION MANUAL

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



Caution: The appliance emits very hot steam; always exercise extreme caution during use.



Hot surface - do not touch the hot section or heating components of the appliance.



Warning: Danger of scalding.

Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply and allow it to cool sufficiently.

STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If garments have burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Getting Started

Remove the iron from the box.

Remove any packaging from the iron.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Two-in-one Garment Steamer

Storage base

100 ml measuring cup

Fabric brush attachment

Lint brush attachment

Instruction manual

Features

1200 W power

150 ml easy-to-fill water tank

Variable temperature and steam control

Ceramic soleplate

Anti-calc function

Auto shut-off

LED display

2.5 m power cord

Includes lint brush, fabric brush and measuring cup

Description of Parts



- | | |
|---|-----------------------------|
| 1. Two-in-one Garment Steamer main unit | 8. Steam lock |
| 2. Temperature increase '+' button | 9. Ceramic soleplate |
| 3. Temperature decrease '-' button | 10. Max. fill mark |
| 4. LED display | 11. Storage base |
| 5. Water tank | 12. Measuring cup |
| 6. Water tank cap | 13. Fabric brush attachment |
| 7. Steam trigger | 14. Lint brush attachment |

Instructions for Use

Before First Use

Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly. It is recommended to iron or steam an old piece of cotton prior to use, to check that any impurities have been removed. Do not immerse the iron in water or any other liquid.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: Place the iron onto the storage base and open the water tank cap.

STEP 3: Fill the measuring cup with water, without exceeding the max. fill mark.

Carefully pour the contents of the measuring cup into the water tank.

Caution: Do not overfill the water tank.

Warning: Do not fill the water tank with hot water.

Never add aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the Two-in-one Garment Steamer

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, press '+' until the desired heat setting is reached. Reduce the temperature by pressing '-'. The temperature indicator light will flash to signal that the iron is heating up. The iron will only produce steam when on the 2-dot or 3-dot settings.

STEP 4: To iron with steam, press and hold the steam trigger. To use continuous steam, press the steam trigger and then push the steam lock.

STEP 5: After use, press '-', or hold down either '+' or '-', until the iron enters standby mode. Place the iron onto the storage base. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

Note: Allow the iron to fully heat up before pressing the steam button; not doing so may cause water to leak from the ceramic soleplate.

Rest the iron on the storage base when not in use.

Warning: Do not use the iron on any area of fabric for long periods of time, as this will damage the fabric.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Plug in and switch on the iron at the mains power supply.

STEP 2: Press '+' to select the 1-dot (no steam) setting and use as required.

STEP 3: After use, press '-' to enter standby mode. Place the iron onto the storage base. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

Using as a Garment Steamer

STEP 1: Check that the iron is switched off and unplugged from the mains power supply. To secure the fabric brush or lint brush attachment, insert the pointed section on the front of the ceramic soleplate into the front of the chosen attachment. Push the rear tab at the rear of the unit upwards until it clicks into place.

STEP 2: Hang up the item to be vertically steamed.

STEP 3: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Plug in and switch on the iron at the mains power supply.

STEP 5: Press '+' until the 2-dot or 3-dot setting is selected.

STEP 6: Hold the iron approx. 20 cm away from the item and press the steam trigger for a short duration of steam, or push the steam lock for prolonged, continuous steaming.

Note: Always make sure that the iron has cooled fully before adding or removing the accessories.

Auto Shut-off Function

If the iron is left in any state for 3 minutes, it will automatically shut off. The iron will beep 6 times and the power saving indicator light will flash. When the iron is moved, or the temperature setting is changed, the iron will recover power. The iron will not automatically shut off whilst in use.

Boil-dry Function

If the iron runs out of water when using steam, the low water indicator light will flash and the iron will beep 3 times. Switch off and unplug the iron from the mains power supply and fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

Anti-calc Function

The iron has a built-in anti-calcium filter to prevent calcium and limescale build-up. Calcium build-up, which is prominent in areas with hard water, can hinder the performance and lower the lifespan of the iron. This is an automatic feature that is permanently activated.


Note: The anti-calcium filter is built-in and does not need replacing.

Storage

Place the iron onto the storage base and push the locking button upwards to secure it. To release the iron from the base, push the locking button downwards.

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage. Position the iron on the storage base; this will help to prevent scratching or damage to the ceramic soleplate.

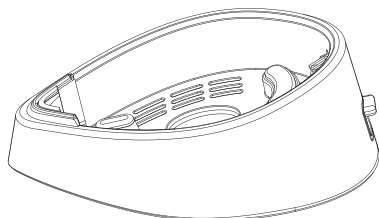

Troubleshooting

Warning: To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

Problem	Possible Cause	Possible Solution
The iron will not heat up.	The iron is not connected to the mains power supply. The fuse in the mains plug has blown.	Plug in and switch on the iron at the mains power supply. Replace the fuse on the plug with one of the same rating.
No steam is being emitted from the iron.	There is insufficient water in the water tank. The water has not reached the required temperature. The steam trigger is not being held down.	Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'. Allow the iron to preheat sufficiently. Hold down the steam trigger.
Excess water is dripping from the ceramic soleplate.	There is condensation inside the ceramic soleplate.	Allow the iron to heat up to the selected temperature before using any steam.
The iron is making a clicking sound.	There is insufficient water in the water tank. The water has not reached the required temperature.	Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'. Allow the iron to preheat sufficiently.

Specifications

Product code: BEL0916
Input: 220-240 V ~ 50/60 Hz

Output: 1200 W
Water tank capacity: 150 ml

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

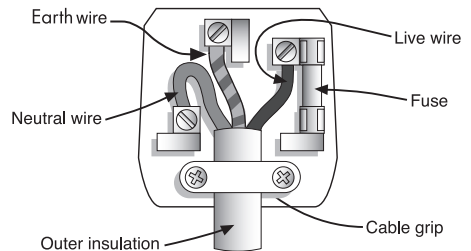

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.com
©Beldray Trademark. All rights reserved.



Please retain all instructions for future reference.
Made in China.

CD030619/MD000000/V1