

est 1872  
**Beldray**<sup>®</sup>

Our **lightweight,**  
**handheld & powerful**  
**garment steamer**

# **HANDI STEAM** **MAX PRO**

INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is in use or when it is cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.  
Do not expose the appliance to rain.  
Do not operate the appliance with wet hands.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not pull or carry the appliance by its power supply cord.  
Do not use the appliance if it has been dropped or if there are visible signs of damage.  
Do not use the appliance for anything other than its intended use.  
Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.  
Do not use any damaged accessories.  
Do not use this appliance outdoors.  
Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not touch any sections of the appliance that may become hot during use, as this could cause injury.  
Do not direct steam at people or animals.  
Do not direct steam towards equipment containing electrical components, such as the interior of ovens.  
Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.  
Always unplug the appliance after use and before any cleaning or maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.



Hot surface – do not touch the hot section or heating components of the appliance.



**Warning:** Danger of scalding.

## Dos and Don'ts

### Do:

Always hold the garment steamer by the handle.

Exercise caution when using the garment steamer, as the surface and steam head will get very hot.

Always follow the garment manufacturer's care instructions.

Allow the garment steamer to cool before removing or attaching the fabric brush.

### Don't:

Direct steam at people or animals.

Tip or tilt the garment steamer once it has been filled with water, as this will cause boiling water to leak from the steam head and could cause serious injury.

Hold onto the parts of the garment steamer that get hot during use.

Position the garment steamer too closely to the surface of the fabric or apply too much pressure, as this could cause damage.

Refill the water tank whilst the garment steamer is switched on and plugged into the mains power supply.

Overfill the water tank.

## Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the garment steamer from the mains power supply and allow it to cool sufficiently (for approx. 30 minutes).

Drain any remaining water from the water tank once the garment steamer main body has cooled.

Wipe the garment steamer with a soft, damp cloth and allow to dry thoroughly.

Clean the accessories in warm, soapy water; rinse and dry thoroughly.

The garment steamer and its accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

Never immerse the garment steamer in water or any other liquid.

## Descaling the Water Tank and Accessories

If calcium deposits begin to build up on the steam head, this may be due to living in a hard water area.

It is recommended to use demineralised water with the garment steamer if living in a hard water area.

## Removing Limescale

Limescale can develop over time and can affect the performance of the garment steamer. It is recommended to remove limescale at least once a month.

When removing the limescale, it is recommended to use a limescale removing solution that is suitable for use with a garment steamer. Always follow the manufacturer's instructions.

**Warning:** Do not leave the garment steamer unattended during the limescale removal process or during use.

## Getting Started

Remove the garment steamer from the box.

Remove any packaging from the garment steamer.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Handi Steam Max Pro  
Measuring jug

Fabric brush

## Features

1500 W power  
Ready to use in 30 seconds  
Up to 15 minutes of continuous steam  
270 ml removable water tank  
Anti-calc filter

1.9 m power cord  
2 steam settings  
Compact for easy storage  
Includes fabric brush and measuring cup

## Description of Parts



1. Handi Steam Max Pro
2. Steam head
3. Power indicator light
4. Min. steam setting indicator light
5. Max. steam setting indicator light
6. Power button
7. Water tank
8. Water tank release switch

9. Handle
10. Cord guard
11. Steam button
12. Measuring jug
13. Fabric brush
14. Crease attachment
15. Crease attachment handle

## Instructions for Use

### Before First Use

Clean the exterior surface of the garment steamer with a soft, damp cloth and dry thoroughly.

Do not immerse the garment steamer in water or any other liquid.

Allow the garment steamer to steam for approx. 3–4 minutes to remove any impurities that may have been left behind during production.

It is recommended to steam an old piece of cotton prior to steaming the preferred garment, to check that any impurities have been removed.

When using the garment steamer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the garment steamer when it is in use.

### Using the Handi Steam Max Pro

**STEP 1:** Check that the garment steamer is switched off and unplugged from the mains power supply. If required, attach the fabric brush to the steam head and click it into place.

**STEP 2:** To remove the water tank, push the water tank release switch up and pull the water tank firmly away from the garment steamer main body.

**STEP 3:** Using the measuring jug, fill the water tank with a max. of 270 ml water. Once full, refit the water tank.

**STEP 4:** Place the garment steamer onto a flat, stable surface, then plug in and switch on at the mains power supply. The power indicator light will illuminate.

**STEP 5:** Press the power button to switch on the garment steamer. The min. steam setting indicator light will flash red to signal that the garment steamer is preheating.

**STEP 6:** Whilst the garment steamer is preheating, hang the garment to be steamed.

**STEP 7:** After approx. 30 seconds of preheating, all indicator lights will illuminate to signal that the garment steamer has reached the required temperature.

**STEP 8:** To begin steaming, press the steam head (with the attachment securely in place, if required) gently against the fabric and press the steam button. To use the max. steam setting, press the steam button again. Carefully steam the garment using long, straight, downwards movements to remove any wrinkles or creases.

**STEP 7:** Once the garment has been steamed, press the steam button until the garment steamer enters standby mode and unplug from the mains power supply.

**Note:** Refill the water tank as and when required; one max. fill offers approx. 15 minutes of continuous use.  
When removing the water tank, take care not to touch the steam head.

**Caution:** During operation, the garment steamer will get very hot. Exercise extreme caution.

Do not hold the garment steamer by any other part of the unit except the handle.

Do not overfill the water tank.

Do not use anything other than water to fill the water tank.

## Using the Crease Attachment

The fabric brush opens the weave of the fabric for deeper steam diffusion. It is ideal for steaming heavier and bulkier items such as car upholstery, curtains, bedding and sofas. The crease attachment is ideal for smoothing creases easily or removing stubborn wrinkles. To use the crease attachment, first follow steps 1–7 in the section entitled 'Using the Handi Max Steam Pro'.

**STEP 1:** Press the handle to open the crease attachment.

**STEP 2:** Put the fabric you wish to steam in the space between the crease attachment and the steam head. Release the handle.

**STEP 3:** Press the steam button and carefully steam the garment using long, straight, downwards movements.

**STEP 4:** Once the garment has been steamed, press the crease attachment handle and carefully pull the garment steamer away to release the garment from between the attachment and steam head.

**STEP 5:** Press the steam button until the garment steamer enters standby mode and unplug from the mains power supply.

**Caution:** Always make sure that the garment steamer has cooled fully before adding or removing the crease attachment from the steam head.

## Automatic Safety Cut-off

The garment steamer is fitted with an intelligent automatic safety cut-off that activates if it has not been used for 5 minutes. To reset the automatic safety cut-off, press the power button. Press the steam button to resume steaming once the steamer has heated up.

## Storage

Before storing in a cool, dry place, check that the garment steamer and any accessories are cool, clean and dry.

The water tank should be empty before storage.

Never wrap the cord tightly around the garment steamer; wrap it loosely to avoid causing damage.



## Troubleshooting

Problem	Possible Cause	Solution
The garment steamer is not heating up. The power indicator light is not illuminating.	The garment steamer is not plugged into the mains power supply.	Plug in and switch on the garment steamer at the mains power supply and press the power button.
No steam is being emitted from the garment steamer.	There is insufficient water remaining in the water tank.	Ensure that there is enough water in the water tank.
	The water has not reached the required temperature.	Plug in the garment steamer at the mains power supply and allow it to preheat sufficiently. This should take approx. 30 seconds.
The garment steamer is making an abnormal sound.	The water tank is not securely locked.	Make sure that the water tank is securely pushed into place.
	The water tank is empty.	Refill the water tank.

## Specification

Product code: BEL0932RG

Input: 220-240 V ~ 50/60 Hz

Output: 1500 W

Water tank capacity: 270 ml

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

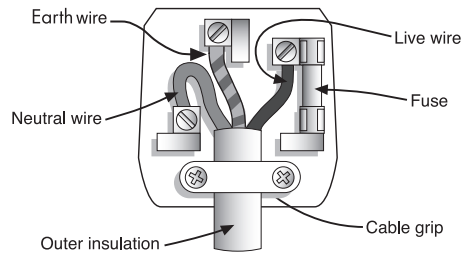

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



## CONGRATULATIONS ON YOUR PURCHASE!

To be eligible for the extended 3 year guarantee,  
go to **<http://guarantee.upgs.com/beldray>** and register your product.

The Beldray brand stands for reliability, trust and consumer loyalty.  
Our fantastic range of products includes everything that you need  
to keep your home cosy and warm.

View our full range of household essentials at **[www.beldray.com](http://www.beldray.com)**

**Beldray**  
at home

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820

[customersupport@beldray.com](mailto:customersupport@beldray.com)

®Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD250719/MD000000/V1

