

Beldray[®]

est 1872

Our powerful,
efficient &
versatile
steam iron



TWO-IN-ONE
CORDLESS 360°
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



Caution: The appliance emits very hot steam; always exercise extreme caution during use.



Hot surface – do not touch the hot section or heating components of the appliance.



Warning: Danger of scalding.

Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply and allow it to cool sufficiently.

STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Getting Started

Remove the iron from the box.

Remove any packaging from the iron .

Place the packaging inside the box and either store or dispose of safely.

In the Box

Two-In-One Cordless Iron

Iron base with cord

Measuring jug

Instruction manual

Features

2600 W power

Water spray and self-clean functions

Anti-calc and anti-drip functions

Large 300 ml water tank


Variable temperature and steam control

Ceramic soleplate

Easy-grip handle

1.9 m power cord

Description of Parts

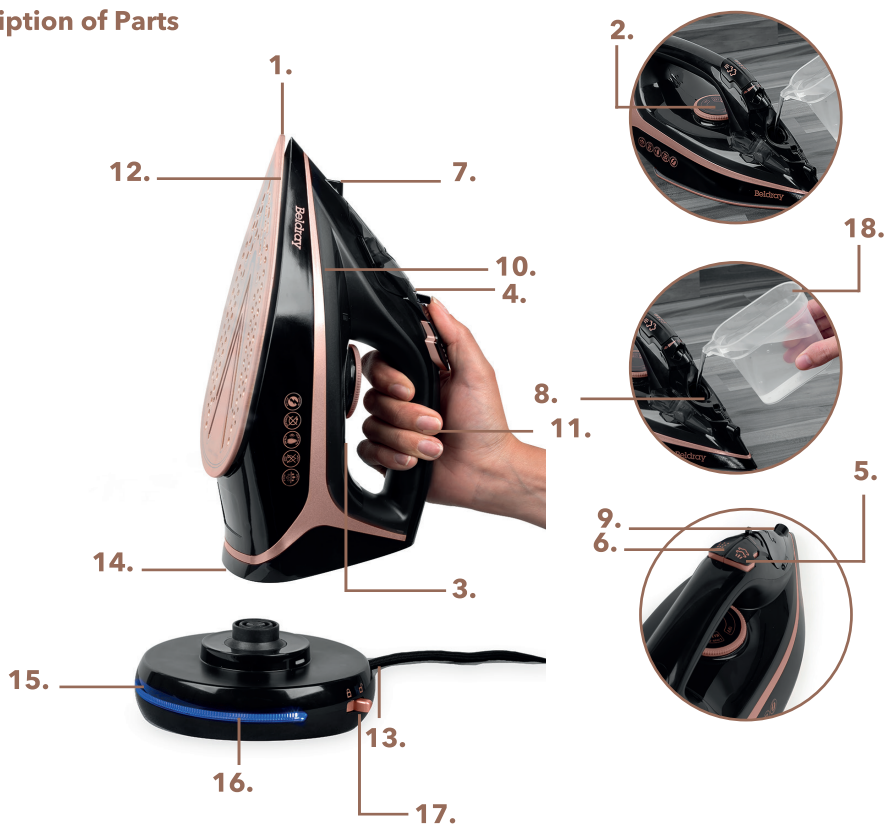

- | | |
|------------------------------------|---------------------------|
| 1. Two-In-One Cordless Iron | 10. Max. fill mark |
| 2. Temperature control dial | 11. Easy-grip handle |
| 3. Temperature indicator light | 12. Ceramic soleplate |
| 4. Steam control/self-clean switch | 13. Cord guard |
| 5. Steam burst button | 14. Heel rest |
| 6. Water spray button | 15. Iron base with cord |
| 7. Spray nozzle | 16. Power indicator light |
| 8. Water tank | 17. Locking switch |
| 9. Water tank cap | 18. Measuring jug |

Instructions for Use

Before First Use

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

STEP 3: To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material. Plug in and switch on the iron at the mains power supply, place the iron onto the cloth and then push the steam burst button 2-3 times, waiting approx. 5 seconds in-between each burst; this will remove any impurities from the ceramic soleplate.

Do not immerse the iron in water or any other liquid.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Check that the steam control switch is in the off position (centre).

STEP 3: Open the water tank cap.

STEP 4: Fill the measuring jug with water, without exceeding the max. fill mark. Carefully pour the contents of the measuring jug into the water tank.

STEP 5: Close the water tank cap.

Caution: Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is positioned upright.

Do not fill the water tank when the iron is switched on.

Warning: Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the Two-In-One Cordless Iron

Using as a Cordless Iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: Move the locking switch right to the 'unlocked' position. This will unlock the iron from the iron base.

STEP 3: Plug in and switch on the iron at the mains power supply; the power indicator light will illuminate to indicate the power unit is on. The temperature light will illuminate to signal that the iron is charging.

STEP 4: When the temperature indicator light switches off after approx. 25 seconds, remove the iron from iron base and use as a cordless iron.

STEP 5: Put the iron back onto the iron base to recharge any point. Recharge time is approx. 5 seconds.

Note: The iron will only heat up when the temperature control dial is at a minimum of the 1-dot setting.

Using as a Corded Iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: When the iron is on the iron base, move the locking switch to the 'locked' position. This will lock the power unit to the iron.

STEP 3: Plug in and switch on the iron at the mains power supply.

Note: When the iron is not in use, keep the locking switch in the 'locked' position. This is ideal for storage.

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is reached. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

STEP 4: Select the desired steam setting by sliding the steam control switch to the right.

The first click is the lowest steam setting whilst the last click delivers the highest steam setting. The steam setting can be switched off at any time by sliding the steam control switch to the off position.

STEP 5: After use, rotate the temperature control dial to the 'Off' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

Note: Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate.

The temperature control dial needs to be at the 1-dot setting in order for the iron to heat up.

The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light.

The temperature indicator light will cycle on and off during use to regulate the temperature.

Warning: Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

If ironing with steam for prolonged periods of time, it is advisable to use the iron as a corded unit.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Move the steam control switch to the 'Off' position.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is selected. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to indicate that the iron is heating up; this will switch off once the iron is ready to use.

STEP 4: Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

STEP 5: After use, rotate the temperature control dial to the 'Off' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

Steam Burst Function

For creases that are stubborn and difficult to remove, use the steam control trigger to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.

Note: The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

Vertical Steam Ironing

The steam burst button can also be used to vertically steam curtains and other hanging garments.

STEP 1: Hang up the item to be vertically steamed.

STEP 2: Slide the steam control switch to the off position.

STEP 3: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Plug in and switch on the iron at the mains power supply.

STEP 5: Rotate the temperature control dial until the 3-dot heat setting is selected; the higher the temperature, the more powerful the steam.

STEP 6: Hold the iron approx. 15 cm away from the item and press the steam burst button to remove any creases, waiting approx. 5 seconds in-between each burst.

Water Spray Function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry ironing delicate fabrics that cannot be steam ironed.

To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.

Note: The water spray function will not work if the water tank is empty.

When using the water spray function for the first time, it may be necessary to press the water spray button several times.

Anti-drip Feature

The iron has an anti-drip feature to prevent water leaking out from the steam holes when the temperature is not high enough to generate steam. This is an automatic feature that is permanently activated.

Anti-calcium Feature

The iron has a built-in resin anti-calcium filter located in the water tank to prevent calcium and limescale build-up. Calcium build-up, which is prominent in areas with hard water, can hinder performance and lower the lifespan of the iron. This is an automatic feature that is permanently activated.

Note: The filter is built in and does not need replacing.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Slide the steam control switch to the off position.

STEP 3: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Plug in and switch on the iron at the mains power supply.

STEP 5: Set the temperature control dial to the highest heat setting and allow the iron to heat up until the temperature indicator light switches off.

STEP 6: Switch off and unplug the iron from the mains power supply.

STEP 7: Remove the iron from the iron base and carefully hold it over a sink, making sure that the power supply cord and plug are kept away from the ceramic soleplate.

STEP 8: Slide and hold the self-clean switch to the self-clean position. Hot water and steam will expel from the steam holes along with any impurities.

STEP 9: After approx. 1 minute or when the water tank is completely empty, release the self-clean switch.

STEP 10: Place the iron onto the iron base, slide the locking switch to the left to lock the iron in position and allow to cool thoroughly. Make sure the iron base is still unplugged from the mains power supply.

STEP 11: When the iron has sufficiently cooled, wipe it with a soft, damp cloth.

STEP 12: Plug in and switch on the iron at the mains power supply.

STEP 13: Set the temperature control dial to the highest heat setting.

STEP 14: Once the temperature indicator light has switched off, use the iron on an old piece of fabric to remove any excess water and impurity build-up from in the steam holes.

Note: Water may be ejected from the steam holes whilst the iron is heating up.

For best results, carry out the self-clean process immediately after unplugging the iron from the mains power supply.

Caution: Never slide the steam control switch to the self-clean position when using the iron; only use it when the iron is switched off and unplugged from the mains power supply and is safely held over a sink.

Hints and Tips

Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.

The temperature of the iron is the hottest when it has initially heated up and will therefore need time to stabilise. Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Troubleshooting

Warning: To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

Problem	Possible Cause	Possible Solution
Reduced constant steam or no constant steam.	The steam holes are blocked. The steam control switch is in the off position.	Clear the steam holes of any blockages. Select a steam setting using the steam control switch.
The fabric shows signs of melting.	The temperature selected is too high.	Reduce the temperature using the temperature control dial.
The iron will not turn on.	The iron is not connected to the mains power supply. The fuse in the mains plug has blown.	Plug in and switch on the iron at the mains power supply. Replace the fuse in the plug with one of the same rating.

Water does not spray out of the spray nozzle.	<p>There is no water in the water tank.</p> <p>The iron is being used for the first time.</p>	<p>Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.</p> <p>Press the spray button several times until water is released from the spray nozzle.</p>
The iron is not removing the creases from the fabric.	<p>The temperature is set too low.</p> <p>The steam control switch is in the off position.</p>	<p>Increase the temperature using the temperature control dial, ensuring that the fabric's care instructions are followed.</p> <p>Select a steam setting using the steam control switch.</p>
Water is leaking from the soleplate.	<p>The temperature is set too low.</p> <p>The iron has not been recharged.</p>	<p>Increase the temperature using the temperature control dial, taking care that the fabric's care instructions are followed</p> <p>Put the iron back onto the power base to recharge any point. Recharge time is approx. 5 seconds. If ironing with steam for prolonged periods of time, it is advisable to use the iron as a corded unit.</p>

Specifications

Product code: BEL0987RG
Input: 220-240 V ~ 50/60 Hz
Output: 2600 W
Water tank capacity: 300 ml

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

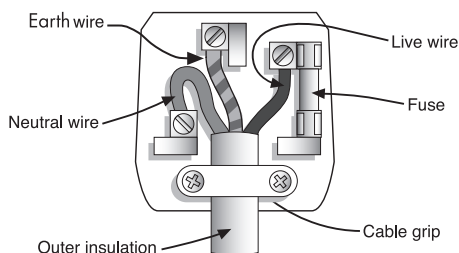

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



CONGRATULATIONS ON YOUR PURCHASE!

To be eligible for the extended 3 year guarantee, go to **<http://guarantee.upgs.com/beldray>** and register your product within 30 days of purchase.

The Beldray brand stands for reliability, trust and consumer loyalty. Our fantastic range of products includes everything that you need to keep your home clean and tidy.

Beldray
at home

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

®Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD000000/MD000000/V1

