

Beldray

Est 1872

Nobody Does It Better

2 in 1 Steam Mop

Instruction Manual



Multi surface attachment and cloth for ease of use on different surfaces



Brush tool for cleaning difficult places like the oven



Cleaning nozzle for precision cleaning



Angled nozzle for those hard to reach areas



Carpet glider for ease of use on your carpet



Tool carry bag to keep all your tools safe



THE **SCIENCE**
BEHIND CLEAN

Instructions for Use

Please read all instructions.

Getting Started

Remove the appliance from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Steam Mop Body

Handle with Trigger Activation Mechanism

Floor Tool

Mop Pad and Retainer

Accessory Pack with Nozzle, Small Pad and Brush

Instruction Manual

Features

High temperature steam cleaning freshens carpets, cleans tiles, vinyl and hardwood floors.

Lightweight.

Transparent tank allows water level monitoring.

Multi Functional Mop or Handheld Feature.

5m Cable.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Do not use this appliance with wet hands.

Do not overfill the tank.

In hard water areas use demineralised water rather than normal tap water.

Never point the steam outlet at another person or animal.

When adding water to the tank, ensure the cleaner is disconnected from the mains and the tank removed from the appliance.

Do not use this appliance without water in the tank and the tank correctly fitted.

Do not use this appliance with an extension lead.

Do not immerse the appliance in water or any other liquids.

Use extreme caution when using the appliance on stairs or steps.

Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.

Do not remove the mains plug by pulling the cord, remove from the socket by hand.

The appliance must be unplugged from the power supply whilst any maintenance such as cleaning is carried out and after use.

Do not use the appliance for any purpose other than that for which it is designed.

Ensure the supply cord is kept away from the steam source when in use.

Ensure the supply cord is kept away from heat or sharp edges that could cause damage.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Always check that the surface to be cleaned is steam tolerant by testing on an unseen area first.

Ensure all fixings and attachments are secure before use.

Do not direct steam onto electrical appliances or plugs or sockets.

Do not leave the appliance unattended whilst switched on.

Do not use any accessories or attachments other than those supplied or recommended by the manufacturer.

This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.

Keep the appliance out of reach of children.

Do not store the Steam Mop with a damp pad fitted.

Description of Parts

- 1. Main Handle Shaft
- 2. Lower Section Connector
- 3. Main Steam Cleaner Body
- 4. Large Floor Mop Head
- 5. Removable Water Tank
- 6. Steam Trigger Switch
- 7. Upper Cable Storage Hook
- 8. Handle Release Button
- 9. Steam Chamber
- 10. Tool Attachment Lock
- 11. Mop Connector
- 12. Large Mop Pad
- 13. Water Tank Retaining Clip
- 14. Accessory Adaptor
- 15. Small Pad Frame Accessory
- 16. Small Round Brush Accessory
- 17. Carpet Glider Attachment
- 18. Concentrator Nozzle Accessory
- 19. Small Pad
- 20. Tool Carry Bag



Instructions for Use

Assembly

Connect the handle shaft (1) to the connector (2).

Insert the connector (2) into the cleaner body (3).

To fit the floor mop, rotate the tool attachment lock (10) so that it points towards the water tank, then align the triangle on the mop connector (11) with the triangle on the cleaner body (3) and twist in the direction of the arrows to the On position. Secure by rotating the attachment lock 180°.

To remove the water tank for filling, rotate the retaining clip (13) 90° and carefully slide the tank out.

Open the rubber stopper and fill ensuring not to fill past the 450ml mark on the side of the tank. In hard water areas, demineralised water should be used.

Refit the stopper and replace the tank ensuring the retaining clip is rotated back to the secure position.

Instructions for Use

Preparing for Use

Sweep or vacuum the floor before using the mop.

Place the mop pad on the head of the floor mop attachment. If using on carpets, add the carpet glider to the mop pad and around the mop head. The glider simply slips over the mop pad and around the mop head, it is not a fixed attachment.

Caution: never use the mop head without the pad as this may damage the surface of the flooring being cleaned.

Ensure water has been added to the tank then unwrap the mains cord fully and connect the steam mop to the mains power supply.

Note: ensure not to overfill the water tank.

Both the red and green lights will illuminate.

The mop is ready for use when the green indicator light extinguishes and the red light remains illuminated.

During use the green light may cycle on and off to indicate that the water temperature is being maintained.

Note: do not add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use.

Caution: always test an inconspicuous floor area to ensure the surface will not be harmed by steam from the appliance. Using the mop on waxed floors and certain unwaxed floors may result in diminished shine. Check the floor manufacturer's cleaning instructions or test the mop on an inconspicuous area before use.

The main body of the mop may become warm in use – this is quite normal.

Using the Mop Head

Note: the mop is not designed to deep clean carpets or rugs, it is designed to freshen and lift dust.

Press the steam trigger switch and gently glide the mop over the floor area back and forth, ensuring you hold the steam mop over the area for a minimum of 5 seconds, but no longer than 15 seconds.

Note: do not operate the mop with a low or empty water tank.

Ensure the large mop head (fig. 4) and the carpet glider (fig. 17) are securely attached before use.

Note: when using on hard floors the carpet glider is not required.

The steam mop will only produce steam when the handle trigger is pressed.

When the steam mop stops producing steam, the water tank will require filling.

Disconnect the steam mop from the mains power supply and add water as described previously, then reconnect to the supply.

Use of Accessories



14



The steam mop can be used with or without the main handle and the above accessories can be

connected once the accessory adaptor (14) has been fitted to the end of the main body. Do not remove or change attachments whilst the steam mop is in use and always allow to cool before handling, adjusting or removing.

When using the steam mop as a handheld unit, the steam control switch can be found on the underside of the handle and operates simply by pressing and holding the switch to generate steam.

Caution: do not use the window cleaning attachment (fig. 15 & 19) on damaged or frosted glass or when the temperature outdoors is less than 10°C.

Spot Cleaning and Steaming (fig. 18)

Securely attach the concentrator nozzle (fig. 18).

Press and hold the steam control switch to produce steam once the green light has gone out. For effective cleaning, hold the concentrator nozzle (fig. 18) 1-2 inches away from the surface you are cleaning.

This attachment is great for tiles and those hard to reach areas.

Using the Brush Accessory (fig. 16)

Securely attach the brush accessory, press and hold the steam control switch to produce steam once the green light goes out.

This brush is ideal for cleaning ovens and areas that require extra scrubbing.

Note: ovens must have fully cooled down before cleaning.

Using the Small Pad (fig. 15 & 19)

Securely attach the pad, press and hold the steam control switch to produce steam once the green light goes out.

This small pad is ideal for using on work surfaces and smaller areas, including windows.

Note: do not use this attachment on damaged or frosted glass or when the outside temperature is below 10°C.

After Cleaning

Remove the plug from the mains power supply and allow the steam mop to cool.
Wrap the mains cord around the cord wrap hooks on the steam mop handle.
Empty the water tank and remove the mop pad. The mop pad can be machine washed in hot water and tumble dried.
Wipe all the outer surfaces down with a dry cloth.
Store the steam mop upright in a dry area.
Do not store the steam mop with a wet mop pad fitted as this could result in white marks staining the floor.
The handle assembly can be removed by pressing the release button on the side of the main body section.

Care and Maintenance

The steam mop should be wiped down with a soft cloth.
The mop pad can be machine washed in hot water then tumble dried.
Nozzles should be cleaned after each use.
To maintain your Steam Mops performance and to protect it from the damaging effects of water salts in hard water areas, we recommend the use of demineralised water at all times.
Do not use the appliance with a low or empty water tank.

Troubleshooting

Symptom	Possible Cause	Solution
No steam.	Water tank empty.	Refill.
	Water tank not fully engaged.	Check tank fitting.
Steam reducing.	Water level low.	Refill.
Water rather than steam being emitted.	Steam mop not up to temperature.	Allow time for the mop to heat before pressing the trigger.

Technical Specification

Mains Supply: 230V 50Hz
Power: 1500W
Weight (full): 3kg
Tank Capacity: 450ml

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

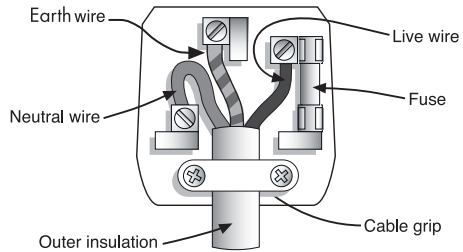

Ultimate Products Ltd.

Manor Mill, Victoria Street, Chadderton, Oldham, OL9 0DD

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0) 333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Imported and Distributed by:
Ultimate Products Ltd.
Manor Mill
Victoria Street
Chadderton
Oldham OL9 0DD
+44 (0)333 577 9820
customersupport@beldray.co.uk

Please retain all instructions for future reference.

Made in China.

CD110811/MD290512/V3



ULTIMATE PRODUCTS
YOUR JOURNEY STARTS HERE

Manor Mill
Victoria Street
Chadderton
OL9 0DD
United Kingdom
T: 0161 627 1400
F: 0161 934 2176
www.ultimate-products.co.uk

Hong Kong: 00852 6681 9752

China: 00861 341 7586804

Artworker:	Melissa
Date:	29/5/12
Project Name:	BEL0134
Type of Artwork:	Instruction Manual
Size:	A5
Software Used:	Indesign CS4
Typefaces:	Gill Sans Light Gill Sans Bold



Artwork Version 5

Artwork Scale 1:1

©2011 Ultimate Products Ltd. All designs, images and artwork are the copyright of Ultimate Products Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY