

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## 2 in 1 Cordless Vac

### Instruction Manual



UP TO 25 MINUTES  
**25**  
MIN  
OPERATING TIME

**22.2 V**  
RECHARGEABLE  
**LI-ION**  
BATTERY



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.  
Do not use the appliance for anything other than its intended use.  
Do not use this appliance outdoors.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.  
Do not store the appliance in direct sunlight or in high humidity conditions. Always unplug the appliance after use and before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.

### **Battery Safety**

The supply terminals are not to be short-circuited.  
Exhausted batteries should be removed from the product to avoid leakage. In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.  
If contact has been made, wash the affected area with copious amounts of water and seek medical advice.  
Keep batteries out of the reach of children.  
Avoid storing in direct sunlight.  
Do not dispose of batteries in a fire.  
Do not crush, puncture, dismantle or otherwise damage batteries.  
Do not store above 60 °C.  
Do not expose batteries to heat or fire as they may explode.  
Do not subject batteries to mechanical shock.  
Do not dispose of exhausted batteries in household waste.  
To dispose of any batteries, take them to a local recycling station.  
Contact the local government offices for further details.  
This product is fitted with a 22.2 V 2150 mAh Li-ion battery (non-removable).

## Battery Removal and Disposal

The battery must be disposed at the end of the appliances life.

To remove the battery from the vacuum cleaner, unfasten the screws and dismantle the product to gain access. This will require a crosshead screwdriver (not included).

Withdraw the battery and unclip the live and neutral terminal connections.

To dispose of the exhausted battery, take it to a local recycling station.

Contact the local government offices for further details.

## Safety Cut-out Device

The vacuum cleaner features a safety cut-out device which will cause the vacuum cleaner to lose power if the floor brush, HEPA filter and dust container are not cleaned regularly. If the air inlet becomes blocked, or the floor brush stops rotating for longer than 3 seconds, the abnormal indication light on the LED display will flash red, and the vacuum cleaner will lose power. If the vacuum cleaner cuts out, switch off the vacuum cleaner. Remove any attachments and clear the obstruction, checking the floor brush for any blockages, following the instructions in the section entitled 'Cleaning the Floor Brush'. Proceed to empty the dust container and clean the filters before using again.

## Dos and Don'ts

### Do:

Check that the HEPA filter and sponge filter are kept clear of obstruction. Make sure that the dust container and filters are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Clean the dust container and filters at least once a month with clean water to keep the vacuum cleaner working efficiently.

Ensure that the floor brush is kept free from built-up dust and dirt.

Clean the brush bar regularly.

### Don't:

Use the vacuum cleaner without the filters or dust container in position.

Use the vacuum cleaner to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

## Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents cleaning agents to clean any part of the vacuum cleaner.

Keep filters clean and replace when they become worn.

### Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

### In the Box

2 in 1 Cordless Vac handheld unit

Charging station with built-in mains power adaptor

Extension tube

Electric turbo floor brush

Crevice tool

360 ° rotating dusting brush

Instruction manual

### Features

22.2 V long-life, rechargeable lithium-ion battery

HEPA filter

Removable 300 ml dust container

Ergonomic and ultra lightweight

Converts to a handheld unit

Up to 25 minutes operating time

3–4 hours charge time

Includes electric turbo floor brush, dust brush attachment and crevice tool

## Description of Parts



- |     |                         |     |                               |
|-----|-------------------------|-----|-------------------------------|
| 1.  | Handheld unit           | 12. | Extension tube                |
| 2.  | Handheld unit air inlet | 13. | Extension tube release button |
| 3.  | Power trigger           | 14. | Extension tube end A          |
| 4.  | Mains power inlet       | 15. | Extension tube end B          |
| 5.  | Charging station        | 16. | Floor brush                   |
| 6.  | Dust container          | 17. | Floor brush air inlet         |
| 7.  | Dust container lock     | 18. | Accessory release button      |
| 8.  | HEPA filter             | 19. | Brush bar                     |
| 9.  | Sponge filter           | 20. | Brush bar locking tabs        |
| 10. | Filter housing          | 21. | Dust brush attachment         |
| 11. | LED display             | 22. | Crevice tool                  |

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly. Do not immerse the vacuum cleaner in water or any other liquid.

### Charging the 2 in 1 Cordless Vac

Before first use, the vacuum cleaner must be charged for approx. 3–4 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 3–4 hours to fully recharge.

**STEP 1:** Switch off the vacuum cleaner.

**STEP 2:** The vacuum cleaner fits neatly onto the charging station. Slot the base of the handheld unit onto the charging station, so that the adaptor engages with the mains power inlet.

**STEP 3:** Plug the mains power adaptor into the mains power supply; the lights on the LED display will flash progressively as the battery charges. Once the battery is fully charged, all of the lights on the LED display will remain illuminated and the charging station will automatically stop charging, to preserve the lifespan of the battery.

**Warning:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

### Using the 2 in 1 Cordless Vac

**STEP 1:** Remove the vacuum cleaner from the charging station after unplugging it from the mains power supply.

**STEP 2:** Turn on the vacuum cleaner by pressing and holding the power trigger. The LED display will illuminate green to signal that the vacuum cleaner has powered on.

**Note:** The LED indicator lights represent battery charge and will illuminate during use; if all four are illuminated green, the battery is fully charged. The LED indicator lights will extinguish one at a time as the battery runs out of charge. The usage time for the vacuum cleaner is approx. 25 minutes.

**Warning:** Do not use the vacuum cleaner without the HEPA filter or dust tank in position. Regularly clean the HEPA filter to preserve the suction of the vacuum cleaner.

### Using the Extension Tube and Floor Brush

To use the vacuum cleaner as a stick vac, the extension tube needs to be connected. The extension tube can only be fitted one way; ensure that the extension tube release button is positioned closest to the floor brush. Refer to the 'Description of Parts' section for a labelled diagram depicting the two ends of the extension tube.

**STEP 1:** Attach the extension tube to the handheld unit by inserting 'End A' of the extension tube into the handheld unit until it clicks securely into position.

**STEP 2:** Install the floor brush by attaching 'End B' of the extension tube onto the floor brush air inlet, until it clicks securely into position. The extension tube release button is closest to 'End B' of the extension tube and so should be closest to the floor brush when connected.

**STEP 3:** Once the floor brush has been attached, turn on the vacuum cleaner by pressing and holding the power trigger. The LED display will illuminate green to signal that the vacuum cleaner has powered on.

**STEP 4:** Turn off the vacuum cleaner by releasing the power trigger.

### Using the Crevice Tool

The shape of the crevice tool makes it ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other hard-to-reach areas.

**STEP 1:** If required, fit the extension tube onto the handheld unit air inlet.

**STEP 2:** Simultaneously press the accessory release button and push the crevice tool onto the end of the extension tube. If no extension is required, push the crevice tool directly onto the handheld unit air inlet.

**STEP 3:** Turn on the vacuum cleaner by pressing and holding the power trigger. The LED display will illuminate green to signal that the vacuum cleaner has powered on.

**STEP 4:** To remove the crevice tool from the extension tube or handheld unit air inlet, firmly grip the tool whilst carefully pulling it away from the handheld unit.

### Using the 360 ° Rotating Dusting Brush

The 360 ° rotating dusting brush is suitable for cleaning surfaces such as skirting boards, windowsills and bookshelves. The bristles are great for lifting dirt and dust, and the rotating function makes the brush ideal for awkward angles.

**STEP 1:** If required, fit the extension tube onto the handheld unit air inlet.

**STEP 2:** Simultaneously press the accessory release button and push the 360 ° rotating dusting brush onto the end of the extension tube. If no extension is required, push the 360 ° rotating dusting brush directly onto the handheld unit air inlet.

**STEP 3:** Rotate the end of the 360 ° rotating dusting brush to choose the desired function.

**STEP 4:** Turn on the vacuum cleaner by pressing and holding the power trigger. The LED display will illuminate green to signal that the vacuum cleaner has powered on.

**STEP 5:** To remove the 360 ° rotating dusting brush from the extension tube or handheld unit



air inlet, firmly grip the tool whilst carefully pulling it away from the handheld unit.

### Emptying the Dust Container

Before emptying the dust container, switch off the vacuum cleaner and make sure that it is not connected to the charging station. If the vacuum cleaner has been used as a handheld unit, remove the chosen attachment by carefully pulling it out of the handheld unit air inlet. It is recommended to empty the dust container outdoors.

**STEP 1:** Whilst securely holding the handheld unit, remove the dust container by unfastening the dust container lock and lifting the dust container away from the handheld unit.

**STEP 2:** Holding the dust container vertically, pull the filter housing away from the dust container using the handles. Place the filter housing to one side.

**STEP 3:** Positioned over a bin or refuse bag, empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

**STEP 4:** Rotate the HEPA filter in an anticlockwise direction and pull it out of the filter housing. If there is any dust or residue remaining, clean it following the instructions in the section entitled 'Cleaning the HEPA Filter and Sponge Filter'.

**STEP 5:** Replace the HEPA filter into the dust container and then refit the dust container by placing it inside the handheld unit, ensuring that the locking tab and slot are aligned with the corresponding slots.

**Note:** The dust container can be cleaned once empty by rinsing it under clean, warm water. Allow to dry thoroughly for approx. 24 hours.

### Cleaning the HEPA Filter and Sponge Filter

The HEPA filter and sponge filter can only be accessed when the dust container has been removed from the handheld unit.

**STEP 1:** Remove and empty the dust container by following the instructions in the section entitled 'Emptying the Dust Container' and place it to one side.

**STEP 2:** Holding the filter housing, rotate the HEPA filter in an anticlockwise direction and pull it out of the filter housing using the handles in the centre. Turn over the HEPA filter and remove the sponge filter by pulling it away from the HEPA filter.

**STEP 3:** Shake both filters until the majority of the dust has been removed, then rinse under clean, warm water and allow them to dry naturally for approx. 24 hours.

**STEP 4:** Once the filters are fully dry, refit them back into the filter housing. Place the filter housing back into the dust container by ensuring that the locking tabs are aligned with the corresponding slots on the dust container. Twist the filter housing in a clockwise direction to lock it back into position.

**Note:** Do not clean the HEPA filter using detergents or use external heat sources such as radiators to dry the HEPA filter.

**Warning:** Do not reassemble or use the vacuum cleaner until both of the removable filters are fully dry, as this could cause damage.

## Cleaning the Floor Brush

It is important to clean the floor brush on a regular basis to achieve optimal cleaning performance when using the vacuum cleaner. The floor brush can be removed for easy cleaning. Always ensure that it is replaced correctly before attempting to use it as an upright vacuum cleaner.

**STEP 1:** Press the accessory release button and pull the floor brush away from the extension tube. This will reveal the floor brush air inlet, which may become blocked after prolonged usage. Using a thin tool, clear the floor brush air inlet of any debris.

**STEP 2:** Holding the floor brush upside down, slide the locking tabs upwards on the two end covers, releasing the brush bar.


**STEP 3:** Lift the brush bar out of the floor brush and remove any built-up debris from the brush bar and brush bar cavity. Use a thin tool to remove any built-up debris from inside of the floor brush.

**STEP 4:** Replace the brush bar, ensuring that the ends are correctly aligned with the corresponding slots on the floor brush.

**STEP 5:** Refit the end covers back onto the floor brush and secure the locking tabs into place.

## Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place. The vacuum cleaner can be stored neatly by placing the handheld unit, extension tube and all attachments onto the charging station.

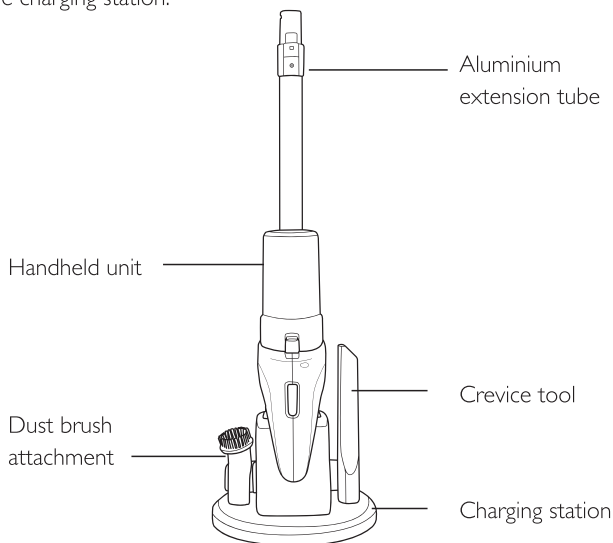

## Troubleshooting

Problems	Cause	Solutions
The vacuum cleaner will not charge.	The mains power adaptor lead is not securely connected.	Plug the mains power adaptor on the charging station into the mains power supply, ensuring that it is switched on and follow the instructions in the section entitled 'Charging the 2 in 1 Cordless Vac'.
The suction is poor.	<p>The air inlet is blocked.</p> <p>The dust container is almost full.</p> <p>The filters are blocked.</p> <p>The floor brush and brush has become ineffective due to built-up debris.</p>	<p>Disconnect the attachment and clear the blockage.</p> <p>Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.</p> <p>Clean the filter following the instructions in the section entitled 'Cleaning the HEPA Filter and Sponge Filter'.</p> <p>Clean the brush bar and floor brush following the instructions in the section entitled 'Cleaning the Floor Brush'.</p>

## Specifications

Product code: BEL0658

Battery: 22.2 V 2150 mAh Li-ion (included)

Rated voltage: 220–240 V ~ 50/60 Hz

Dust tank capacity: 300 ml

## Notes

## Notes

**UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>  
to register your product for a 1 year guarantee



Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)



Please retain all instructions for future reference.  
Made in China.

CD300617/MD000000/VI