

Beldray^{est 1872}®

CLEAN & DRY

CORDLESS

INSTRUCTION MANUAL

All-in-one **wash**
& **vacuum** solution



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not pull or carry the appliance by its power supply cord.
Do not use the adaptor to recharge non-rechargeable batteries.
Do not use the appliance if it has been dropped or if there are visible signs of damage.
Do not use the appliance for anything other than its intended use.
Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.
Do not use any damaged accessories or adaptors.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not use this appliance if any of the openings are blocked.
Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
Take care when equipping accessories with rotating parts as this could cause entrapment.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
Use of an extension cord with the appliance is not recommended.
Only use the appliance with the power supply unit provided.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Do not use any cell or battery which is not designed for use with the appliance.

Secondary cells and batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children.

Do not dispose of batteries in a fire.

Do not dismantle, open or shred secondary cells or batteries.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the appliance at a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 22.2 V DC 2200 mAh battery (non-removable).

Care and Maintenance

Before attempting any cleaning or maintenance, always switch off and unplug the floor cleaner from the mains power supply.

Drain any remaining water from the clean and dirty water tanks.

Wipe the floor cleaner main unit with a soft, damp cloth and dry thoroughly.

Do not immerse the floor cleaner main unit in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers.

Getting Started

Remove the floor cleaner from the box.

Remove any packaging from the floor cleaner.

Place the packaging inside the box and either store or dispose of safely.

Caution: Take care not to pull out the floor cleaner by its handle, as this is connected to the appliance by a cable and could cause damage; pull out the appliance by its main unit.

In the Box

Clean & Dry Cordless

Power adaptor

Instruction manual

Features

22.2 V lithium-ion battery

3-4 hours charge time

25-30 minutes operating time

Dual speed with boost function

 
550 ml solution tank

280 ml dirty water tank

Suitable for wood and hard floors

Storage tray

Description of Parts


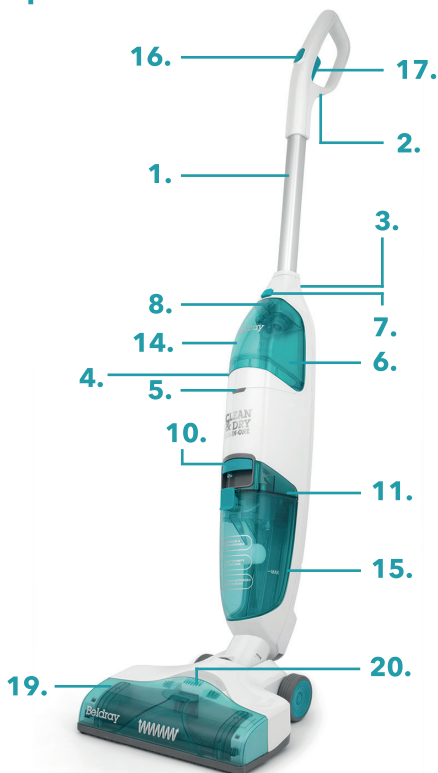


1. Clean & Dry Cordless main unit
2. Handle
3. Handle locking button/screw
4. Charging port
5. Indicator light
6. Clean water/detergent tank
7. Clean water/detergent tank release button
8. Clean water/detergent tank cap
9. Dirty water tank
10. Dirty water tank release catch
11. Dirty water tank lid

12. Dirty water tank lid release clips
13. Dirty water tank max. fill float
14. Max. fill mark clean water/detergent tank
15. Max. fill mark dirty water tank
16. Power button
17. Water/detergent trigger
18. Roller bar
19. Roller bar cover
20. Roller bar cover handle
21. Roller bar release tab
22. Storage tray

Instructions for Use

  Assembling the Clean & Dry Cordless

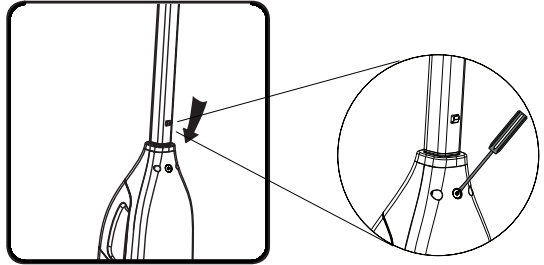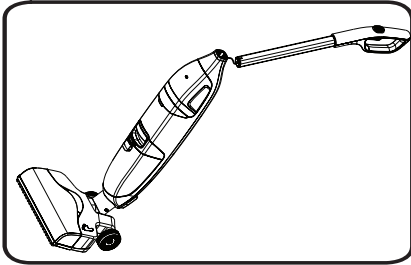

STEP 1: Stand the floor cleaner upright and push the handle locking button down.

STEP 2: Push the metal tube into the floor cleaner main unit making sure the power supply cord is not trapped.

STEP 3: Once the handle is pushed into the floor cleaner main unit, use the screw provided to secure the handle into the appliance.

Warning: When assembling the floor cleaner, make sure that the power supply cord is not trapped in-between the handle and main unit.

Charging the Clean & Dry Cordless

Before first use, the floor cleaner must be charged for approx. 4 hours. Subsequent charging times will vary dependent upon use. If the appliance battery becomes exhausted during use, it may take up to 3.5 hours to fully recharge it.

 
 
 
STEP 1: Make sure that the floor cleaner is switched off and unplugged from the mains power supply. Empty the clean water/detergent tank and the dirty water tank and check that the floor cleaner is cool, clean and dry.

STEP 2: Connect the mains power adaptor to the main unit and then plug it in to the mains power supply.

STEP 3: The indicator light will flash blue when the floor cleaner is charging and once fully charged, it will illuminate solid blue.

Note: Whilst charging, the floor cleaner may become warm.

Filling the Clean Water/Detergent Tank

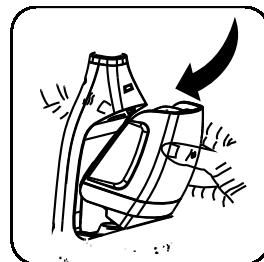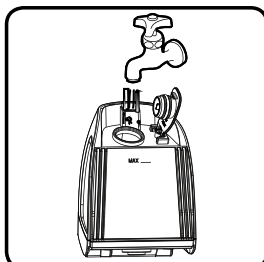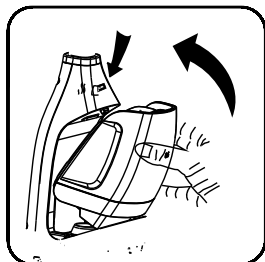

STEP 1: Remove the clean water/detergent tank by pressing the clean water/detergent tank release button.

STEP 2: Open the clean water/detergent tank cap and fill the clean water/detergent tank with water or dilute detergent using manufacturer's guidelines, checking that the max. fill is not exceeded.

STEP 3: Check the clean water/detergent tank cap is secured and then push the clean water/detergent tank into the main unit.

Note: Check that the clean water/detergent tank is inserted fully into the floor cleaner.

Do not use a high quantity of detergent in the mix, to avoid slippage.

Caution: Do not attempt to replace the clean water/detergent tank whilst the floor cleaner is turned on.

Do not press the spray trigger if the clean water/detergent tank is empty.

Using the Clean & Dry Cordless

STEP 1. Make sure that the appliance is unplugged from the power adaptor.

STEP 2: Fill the clean water/detergent tank following the instructions in 'Filling the Clean Water/Detergent Tank'.

STEP 3: Turn on the floor cleaner by pressing the power button once. Press the button again to increase the speed of the floor brush. The light will turn blue on the low setting and flash blue on the higher setting.

STEP 4: Lightly step on the back of the floor cleaner head, pull the handle backwards and angle the the floor cleaner, as desired.

STEP 5: To begin cleaning, move the floor cleaner backwards and forwards over the desired area 3-4 times whilst holding in the water/detergent trigger. This will wet the floor and aid in cleaning. Do not press the water detergent trigger when moving forwards and backwards to dry the floor, as this will release water.

STEP 6: Once finished, turn off the floor cleaner by pressing the power button.

Note: Always check with the floor manufacturer or distributor before using the chosen cleaning solution.

The floor cleaner is only suitable for sealed hard floors, not carpets.

 
Caution: The floor may be slippery once the appliance has been used and the floor is wet.

Do not allow the dirty water tank to exceed the max. fill mark, this will cause the suction to stop and leave dirty water on the floor.

Do not press the water detergent trigger when drying floors or picking up wet spills, as this will release water from the clean water/detergent tank.


Emptying the Dirty Water Tank

STEP 1: Switch off and unplug the floor cleaner from the mains power supply.

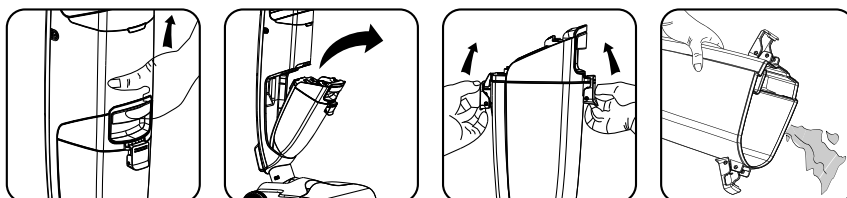

STEP 2: Pull the dirty water tank release catch and remove the dirty water tank from the floor cleaner main unit.

 STEP 3: Open the dirty water tank lid release clips and empty the dirty water down the drain.



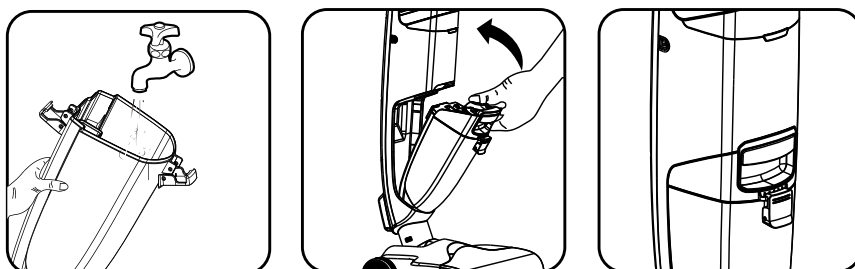


STEP 4: Rinse the dirty water tank under clean running water, replace the lid and close the clips. Push the dirty water tank back into the main unit of the floor cleaner.



Note: Make sure that the max. fill mark is not exceeded on the dirty water tank.

The dirty water tank will require more frequent emptying than filling the clean water tank.

   
Cleaning the Roller Bar

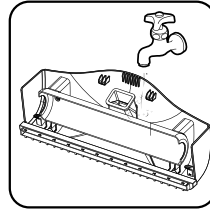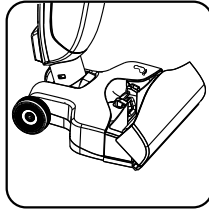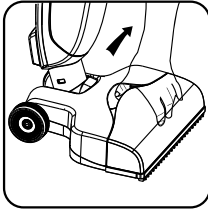

  STEP 1: Open the roller bar cover and pull the release tab to remove the roller bar.

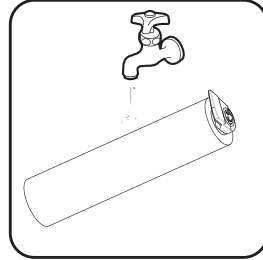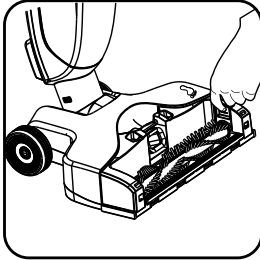


 STEP 2: Take out the roller bar and wash thoroughly with warm, soapy water.

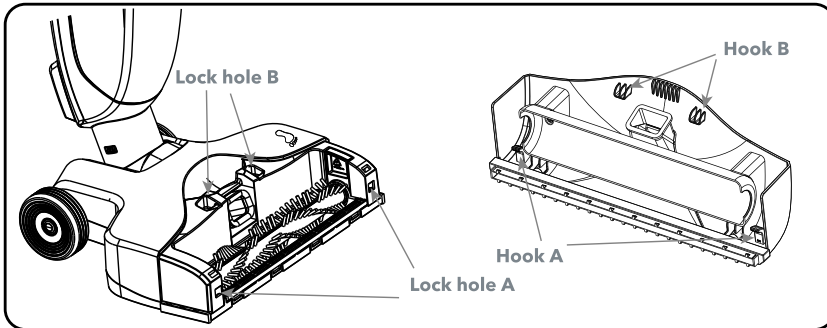

STEP 3: Push the left-hand side of the roller bar into lock hole A, being careful to align the right-hand side with lock hole B. This release tab should slot neatly into place.

 STEP 4: Attach the roller bar cover by pressing down until it clicks securely into place.

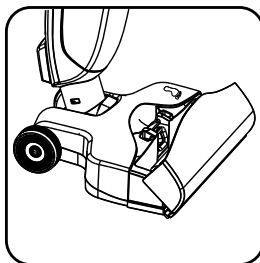

Max. Fill Safety Float

If the liquid in the dirty water tank exceeds the max. fill mark the safety float in the dirty water tank will stop the suction of the floor cleaner. This will cause the motor to work at a higher speed, which will be audible and cause the floor cleaner to stop vacuuming. At this point, the floor cleaner should be switched off and the dirty water tank emptied following the instructions in 'Emptying the Dirty Water Tank.'

Auto-cut Off

If there is too much friction on the roller bar, or there is an abnormal object caught in the roller bar, the unit will cut off. If this occurs, turn off the unit and remove any blockage and make sure that the product is being used on a suitable floor. After 1 minute, the product will be ready to use again.

Storage

Empty the clean water/detergent tank and the dirty water tank. Check that the hard floor cleaner is clean and dry before storing in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The Clean & Dry Cordless will not turn on.	The battery is not charged.	Charge the floor cleaner following the section: 'Charging the Clean & Dry Cordless'.
The Clean & Dry Cordless cleaner will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the main unit, following the instructions in the section entitled 'Clean & Dry Cordless'.
The Clean & Dry Cordless cleaner will not suck up water.	The max fill safety float has activated.	Follow the instructions in the section 'Emptying the Dirty Water Tank'.

Specifications

Product code: BEL0908

Adapter input: 220-240 V ~ 50-60 Hz 0.8A max

Adapter output: 26 V DC 920 mA

Battery: 22.2 V DC 2200 mAh Li-ion

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD290319/MD200919/V3

